


SHIP DATE

JUN 18 1979



DATAPOINT CORPORATION
5725 DATAPOINT DRIVE
SAN ANTONIO, TEXAS 78244

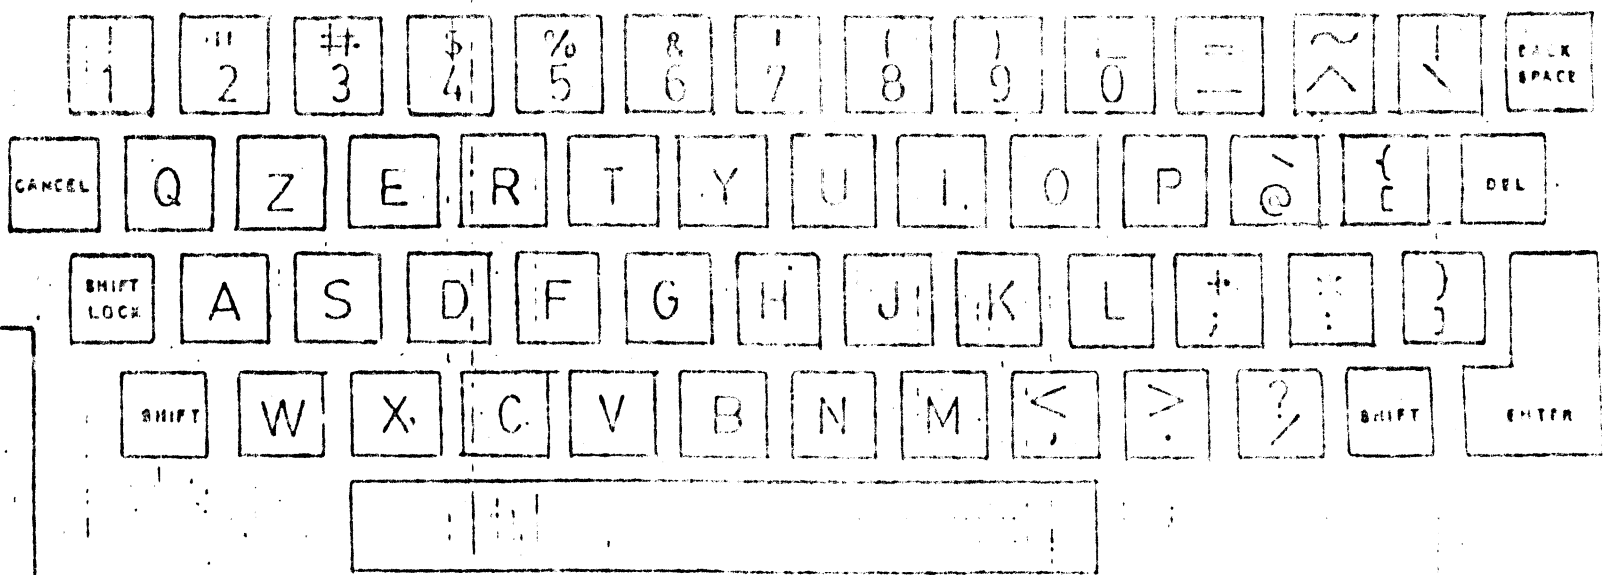

ITALIAN VERSION

DATAPOINT CONFIDENTIAL INFORMATION

PROJ

SIZE

A

CWG NO.

08-1131-001

REV

--1

SCALE NONE

SHEET 9

CF 9



DATAPOINT CORPORATION
 7105 DATAPoint DRIVE
 SAN ANTONIO, TEXAS 78244

SCALE NONE

A

SIZE

CMG NO.

03-1131-001

SHEET 8

CF 3

REV

DATAPOINT CONFIDENTIAL INFORMATION


REQ

1	2	3	4	5	6	7	8	9	0	=	~	@	BACK SPACE
CANCEL	Q	W	E	R	T	Y	U	I	O	P	Ã	;	DEL
SHIFT LOCK	A	S	D	F	G	H	J	K	L	Ç	Õ	*	
SHIFT	Z	X	C	V	B	N	M	<	>	?	SHIFT	ENTER	

PORTUGUESE VERSION



DATAPOINT CORPORATION
7000 DATAPOINT DRIVE
SAN ANTONIO, TEXAS 78244

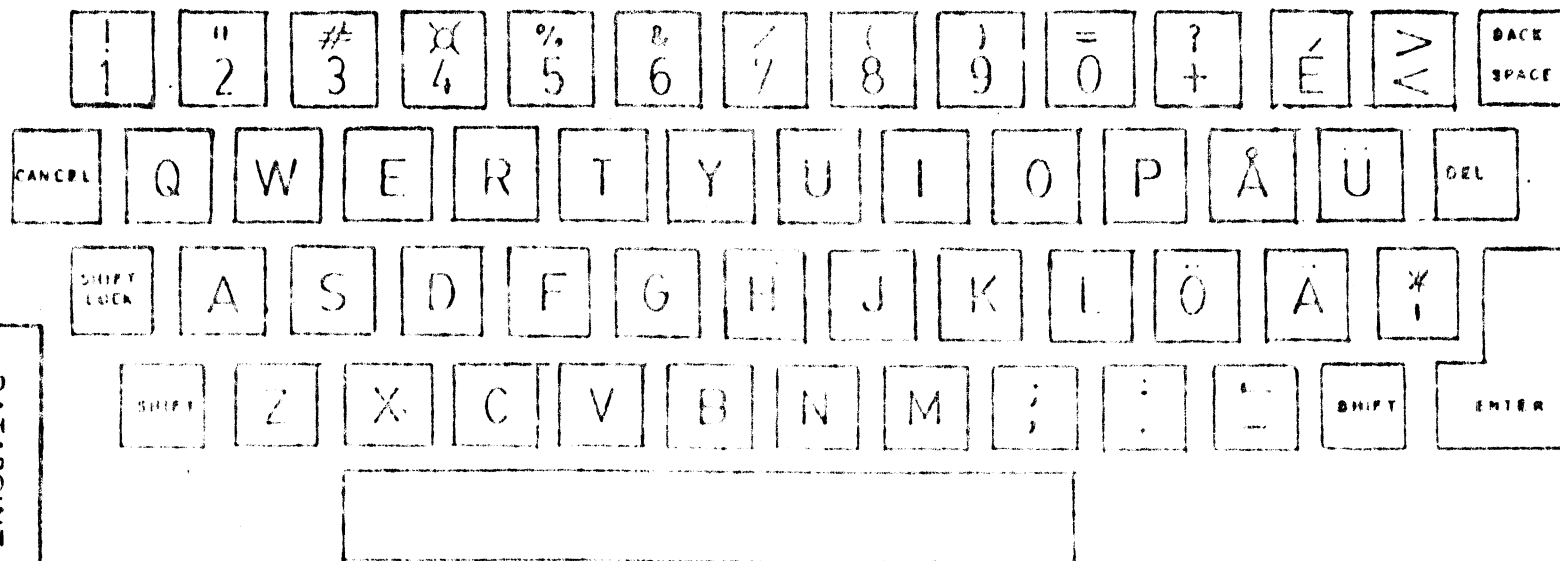

SWEDISH VERSION.

DATAPOINT CONFIDENTIAL INFORMATION

REV

REV NO.

00-0000001

SEE

A

SCALE

1


.

SHEET

6

OF 6

DATAPOINT CORPORATION
 5725 DATAPoint DRIVE
 SAN ANTONIO, TEXAS 78239

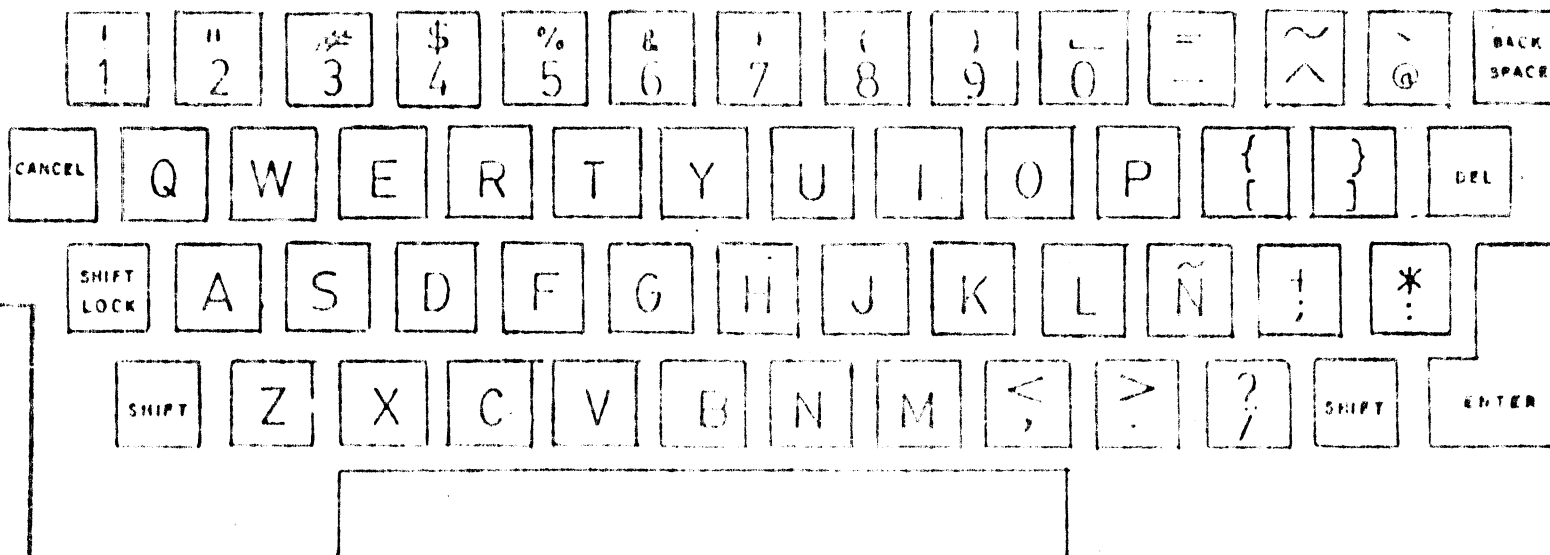

SPANISH VERSION

DATAPOINT CONFIDENTIAL INFORMATION

SIZE

A

DWG NO.

08-1121-001

REV

1


SCALE NONE

SHEET 5

OF 9



DATAPOINT CORPORATION
2225 DATAPoint DRIVE
SAN ANTONIO, TEXAS 78201

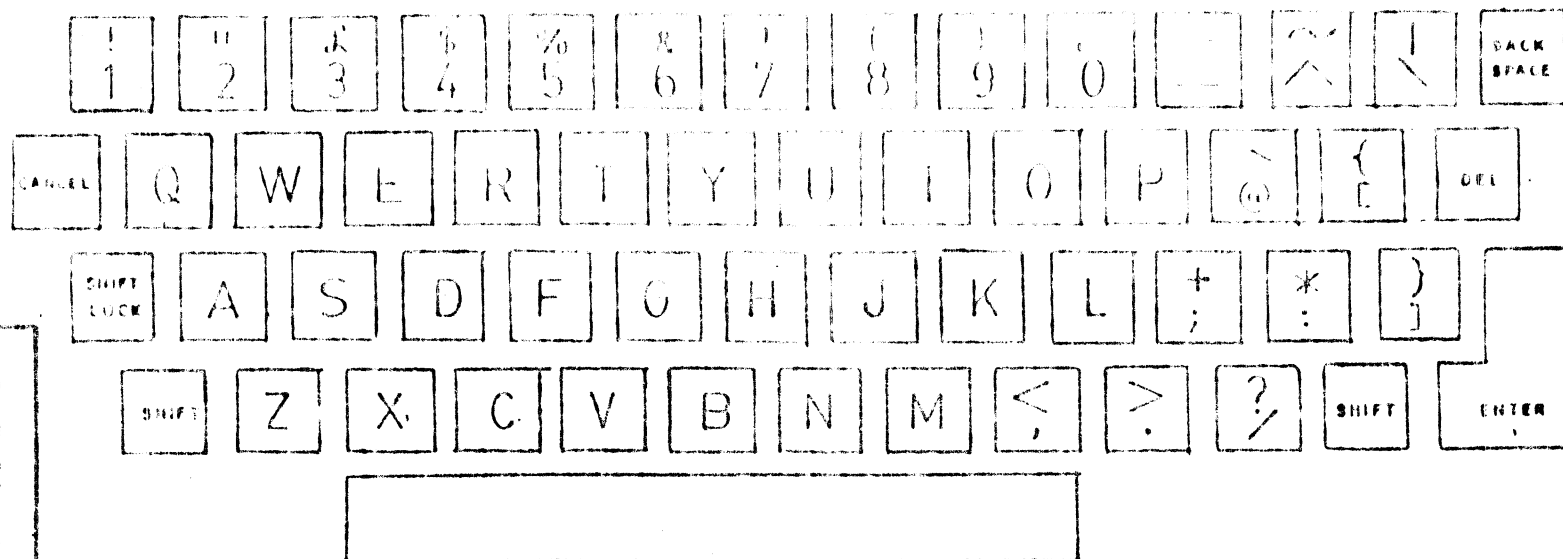

BRITISH VERSION

DATAPOINT CONFIDENTIAL INFORMATION

REQ

SIZE

A

DWG NO.

03-1131-001

REV

SCALE

SHEET

OF 3



DATAPOINT CORPORATION
 2000 DATAPOINT DRIVE
 SAN ANTONIO, TEXAS 78244

DATAPOINT CONFIDENTIAL INFORMATION

!	"	3	\$	%	&	'	(	)	_	=	~	^	@	BACK SPACE
CANCEL	Q	W	E	R	T	Y	U	I	O	P	Å	;	DEL	
SHIFT LOCK	A	S	D	F	G	H	J	K	L	Æ	Ø	*		
SHIFT	Z	X	C	V	B	N	M	<	>	?	SHIFT	ENTER		

DANISH VERSION

SCALE	1	2	3	4	5	6	7	8	9	10
SIZE	A									
CMG NO.	00-1111-001									
REV	1									
SHEET	3 OF 5									

1	REL. 11-11-73	21445	11-11-73	DIANA
2	REL. 11-11-73	21474	11-11-73	DIANA
3	REL. 11-11-73	21485	11-11-73	DIANA
4	REL. 11-11-73	21488	11-11-73	DIANA
5	REL. 11-11-73	21489	11-11-73	DIANA

Disconnect keyboard from processor at keyboard end of keyboard cable.
 Strip cable end. Push cable back into the processor.
 Disconnect processor separately from keyboard.
 Use unprinted boxes.
 Current GIL-83 routing instructions must be rigidly observed.
 NOTE: Remove standard Datapoint Micro Rom.

Connect all cables - "Honeywell"
 Connect all cables - "Honeywell"
 Connect all cables - "Honeywell"

When the system is in operation, it is important that the system be kept at a constant temperature. The system should be kept at a constant temperature of 70°F. The system should be kept at a constant temperature of 70°F. The system should be kept at a constant temperature of 70°F.

OUT 11-11-73

DRAWN		DATE	
C. CARPENTERS		11-11-73	
CHECKED		DATE	
R. C.		11-11-73	
ENGINEERING APPROVAL		TITLE	
		SHOWN LIST, PROJ. 1871 - 11-11-73, SAN, 100	
ENGINEERING APPROVAL		DATE	
		11-11-73	
ENGINEERING APPROVAL		DATE	
		11-11-73	
F. WEIGHT		DATE	
RELEASE		11-11-73	
J. LOCK		SCALE	
		SHEET 1 of 2	



DATAPoint CORPORATION
 9715 DATAPoint DRIVE
 SAN ANTONIO, TEXAS 78224

[illegible]