

PAPER ONLY

PAGE 1 OF 56

ENTRY POINTS

-----			
FROM	ENTER THIS MAP		
-----	-----	-----	-----
MAP NUMBER	ENTRY POINT	PAGE NUMBER	STEP NUMBER
-----	-----	-----	-----
0020	A	2	001
0020	AA	44	120
0020	AC	5	011
0020	AF	28	074
0020	CC	26	065
0020	CD	18	048
0020	CE	27	071
0020	CI	14	036
0020	CN	13	034
0020	DP	4	010
0020	PP	5	012
0020	TT	40	107
0020	TY	15	040

EXIT POINTS

-----			
EXIT THIS MAP		TO	
-----	-----	-----	-----
PAGE NUMBER	STEP NUMBER	MAP NUMBER	ENTRY POINT
-----	-----	-----	-----
3	006	0020	A
4	010	0020	A
8	020	0020	A
28	075	0020	A
42	115	0020	A
3	008	0020	ID
32	085	0020	ID
34	090	0020	ID
35	093	0020	ID
51	137	0020	PD
54	149	0020	PD
38	101	0030	PQ
8	019	0070	A
31	081	0070	A
39	105	0070	A
9	023	0170	A
12	031	0170	A
7	016	2070	DL
9	024	2070	PW
9	022	2570	A
26	068	3881	A
27	069	3881	A
52	140	3881	A
52	141	3881	A
53	145	3881	A
54	150	3881	A
55	151	3881	A
55	152	3881	A
12	032	3882	A
26	067	3882	A



C D THE CONSOLE FAILED  
2 2

MAP 0023-3

PAPER ONLY

PAGE 3 OF 56

004

- SEE IF THE WAIT LED IS ON.

IS THE WAIT LED ON?

Y N

005

GO TO PAGE 4, STEP 010,  
ENTRY POINT DP.

006

DCP IS LOADED. A CONSOLE IS  
NEEDED TO RUN DIAGNOSTICS.

OBTAIN THE FOLLOWING:

C E MAINTENANCE CONSOLE TOOL.

INSTALL MAINTENANCE CONSOLE:

-----  
- SEE THE PROCESSING UNIT  
MAINTENANCE INFORMATION  
MANUAL, MAINTENANCE CONSOLE  
ATTACHMENT PROCEDURE.

- SEE THE MLD VOLUME 1, PAXXX  
FOR THE PROCESSING UNIT TOP  
CARD CONNECTORS.

GO TO MAP 0020, ENTRY POINT A.

007

- ENSURE THE BASIC DISKETTE PART  
NUMBER 1635001 IS INSTALLED IN  
THE DISKETTE UNIT.

IS THE DISKETTE INSTALLED AS  
NOTED?

Y N

008

- INSTALL THE CORRECT DISKETTE.  
GO TO MAP 0020, ENTRY POINT ID.

29JUL83 PN6060917

ECA08003 PEC336711

4  
E

MAP 0023-3

B E THE CONSOLE FAILED  
2 3

MAP 0023-4

PAPER ONLY

PAGE 4 OF 56

009

- TEST THE 'WAIT' LED FOR AN OPEN.
- TEST THE RUN LED FOR AN OPEN.

```
+-----+
|PROCESSOR| GO TO MAP 107X, |
|UNIT IS: | ENTRY POINT A. |
+-----+
| 495X    | MAP 1071          |
| 4954/56 | MAP 1072          |
+-----+
|          | IF NO REPAIR:      |
+-----+
```

GO TO STEP 010,  
ENTRY POINT DP.

010

(ENTRY POINT DP)

OBTAIN THE FOLLOWING:  
PROCESSING UNIT CARD(S).  
DISKETTE UNIT ATTACHMENT CARD.  
C E MAINTENANCE CONSOLE TOOL.

INSTALL MAINTENANCE CONSOLE:

- SEE PROCESSING UNIT MAINTENANCE INFORMATION MANUAL, MAINTENANCE CONSOLE ATTACHMENT PROCEDURE.
- SEE MLD VOLUME 1, PAXXX FOR THE PROCESSING UNIT TOP CARD CONNECTORS.

GO TO MAP 0020, ENTRY POINT A.

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-4

A  
2

THE CONSOLE FAILED

MAP 0023-5

PAPER ONLY

PAGE 5 OF 56

011

(ENTRY POINT AC)

AN ALTERNATE CONSOLE IS INSTALLED ON THE SYSTEM AND DOES NOT PRINT OR DISPLAY A MESSAGE. A PROGRAMMER OR C E CONSOLE IS INSTALLED ON THE PROCESSING UNIT.

- SEE THE DATA LEDS ON THE PROGRAMMER CONSOLE.
- NOTE THE DATA LEDS.

DO THE DATA LEDS EQUAL '38XX', AND THE STOP LED OFF?

Y N

012

(ENTRY POINT PP)

- SEE THE STOP LED.

IS THE STOP LED ON?

Y N

9 9 6  
F G H

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-5



L  
6

THE CONSOLE FAILED

MAP 0023-7

PAPER ONLY

PAGE 7 OF 56

015

THE DATA LEDS DO NOT EQUAL  
'38XX', WITH THE STOP LED OFF.  
THERE IS A DCP FAILURE.

- NOTE THE DATA LEDS ON PAPER.  
THIS WILL BE NAMED THE 'WRITTEN  
DATA LEDS'.

- PRESS THE STOP KEY.
- PRESS THE SAR KEY.
- PRESS THE ONE (1) KEY.
- PRESS THE EIGHT (8) KEY.
- PRESS THE ZERO (0) KEY.
- PRESS THE ZERO (0) KEY.
- PRESS THE STORE KEY.
- PRESS THE MAIN STORAGE KEY.

DO THE DATA LEDS EQUAL 'F3F8'?

Y N

016

THE 'DATA LEDS EQUAL' QUESTIONS  
IN MAP 2070 MUST BE ANSWERED  
WITH THE 'WRITTEN DATA LEDS'.  
GO TO MAP 2070, ENTRY POINT DL.

017

THE DATA LEDS EQUAL 'F3F8'. DCP  
IS LOADED.

- PRESS AND RELEASE THE START  
KEY.

DID THE 'WRITTEN DATA LEDS' EQUAL  
'38XX'?

Y N

| |  
| |  
| |  
| |  
| |  
| |  
| |  
| |  
| |

29JUL83 PN6060917

ECA08003 PEC336711

9 8

M N

MAP 0023-7

N  
7

THE CONSOLE FAILED

MAP 0023-8

PAPER ONLY

PAGE 8 OF 56

018

THE DIAGNOSTIC DISKETTE INSTALLED  
IN THE IPL DISKETTE UNIT IS  
SUSPECT.

- SEE THE NOTE --->
- REMOVE THE DIAGNOSTIC DISKETTE.
- INSERT THE SYSTEM TEST  
DISKETTE. (P/N 1635003)
- ENSURE THE DISKETTE UNIT IS  
READY.
- PRESS AND RELEASE THE LOAD KEY.
- WAIT ONE (1) MINUTE.

THE SYSTEM TEST DISKETTE WILL  
SHOW A CORRECT IPL BY:

RDY  
ENTER

PRINTED OR DISPLAYED, OR:

'34XX' IN THE DATA LEDS.

DID THE SYSTEM TEST DISKETTE IPL  
AS NOTED?

Y N

|

| 019

| GO TO MAP 0070, ENTRY POINT A.

|

020

THE FIRST DIAGNOSTIC DISKETTE IS  
NOT GOOD.

- OBTAIN A GOOD DIAGNOSTIC  
DISKETTE.
- GO TO MAP 0020, ENTRY POINT A.

YOU CAN ONLY IPL THESE DISKETTES:

-----  
BASIC DISKETTE P/N 1635001.  
SYSTEM TEST DISKETTE P/N 1635003.

IF IPL IS NEEDED, INSERT THE  
BASIC DISKETTE P/N 1635001, AND  
PRESS THE LOAD KEY.  
AT HALT '3800', INSERT THE  
DISKETTE WITH THE PROGRAM YOU  
WANT TO RUN.

IF THE DATA LEDS PULSE WITH  
'EEEE', AND STOPS WITH '006A' IN  
THE LEDS, YOU CANNOT IPL THE  
DISKETTE.

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-8



F G J K M THE CONSOLE FAILED  
5 5 6 6 7

MAP 0023-9

PAPER ONLY

PAGE 9 OF 56

021

THE 'DATA LEDS EQUAL'  
QUESTIONS MUST BE  
ANSWERED WITH THE  
'WRITTEN DATA LEDS'.

GO TO PAGE 5,  
STEP 011,  
ENTRY POINT AC.

022

GO TO MAP 2570,  
ENTRY POINT A.

023

THE DATA LEDS EQUAL '00E0' OR  
'00E5'

- SEE THE NOTE --->

GO TO MAP 0170,  
ENTRY POINT A.

024

GO TO MAP 2070, ENTRY POINT PW.

025

- SEE THE DATA LEDS.

DO THE DATA LEDS EQUAL '3801',  
AND THE WAIT LED ON?

Y N

1 1  
2 0  
P Q

- ENSURE THE POLL JUMPERS ARE  
CORRECT.

EVERY OTHER CARD POSITION MUST  
HAVE A CARD INSTALLED, OR A POLL  
JUMPER MUST BE INSTALLED FROM PIN  
M11 TO PIN M12 IN ALL EMPTY CARD  
POSITIONS.

- SEE MLD VOLUME ONE (1),  
PROCESSING UNIT OR EXPANSION  
LOGICS (AXXXX).

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-9

Q  
9

THE CONSOLE FAILED

MAP 0023-10

PAPER ONLY

PAGE 10 OF 56

026

- SEE THE DATA LEDS.

DO THE DATA LEDS EQUAL '3820',  
AND THE WAIT LED ON?

Y N

027

- SEE THE DATA LEDS.

DO THE DATA LEDS EQUAL '380B',  
AND THE WAIT LED ON?

Y N

1 1 1  
2 2 1  
R S T

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-10

T THE CONSOLE FAILED  
1  
0 PAPER ONLY

| PAGE 11 OF 56  
|  
|

028  
STORAGE X'0240' HAS THE DEVICE  
ADDRESS AND TYPE OF THE ALTERNATE  
CONSOLE ASSIGNED IN THE  
CONFIGURATION TABLE.

- ENTER ON THE CONSOLE:  
-----
- PRESS THE STOP KEY.
- PRESS THE SAR KEY.
- PRESS THE ZERO (0) KEY.
- PRESS THE TWO (2) KEY.
- PRESS THE FOUR (4) KEY.
- PRESS THE ZERO (0) KEY.
- PRESS THE STORE KEY.
- PRESS THE MAIN STORAGE KEY.

THE DATA LEDS CONTAIN THE DEVICE  
ADDRESS AND THE DEVICE TYPE OF  
THE ALTERNATE CONSOLE ASSIGNED IN  
THE CONFIGURATION TABLE.

- NOTE THE DEVICE ADDRESS AND  
TYPE.  
A A T T  
T T = DEVICE TYPE  
A A = DEVICE ADDRESS

THIS 'AATT' WILL BE NAMED 'AATT  
-1'.

- NOTE THIS 'AATT -1' NUMBER.

DOES THE 'AATT -1' NUMBER EQUAL  
'0000'?

Y N  
|  
| 029  
| GO TO PAGE 14, STEP 036,  
| ENTRY POINT CI.  
|  
|  
|

29JUL83 PN6060917

ECA08003 PEC336711

1  
2  
U



W THE CONSOLE FAILED  
1  
2 PAPER ONLY

| PAGE 13 OF 56  
|  
|

034  
(ENTRY POINT CN)

LEVEL THREE (3), REGISTER ZERO (0), HAS THE DEVICE ADDRESS AND THE DEVICE TYPE IN THE ALTERNATE CONSOLE ASSIGNED IN THE CONFIGURATION TABLE.

- ENTER ON THE CONSOLE:  
-----
- PRESS THE STOP KEY.
- DISPLAY LEVEL THREE (3).
- DISPLAY REGISTER ZERO (0).

THE DATA LEDS CONTAIN THE DEVICE ADDRESS AND TYPE OF THE ALTERNATE CONSOLE ASSIGNED IN THE CONFIGURATION TABLE.

- NOTE THE DEVICE ADDRESS AND TYPE.  
A A T T  
T T = DEVICE TYPE  
A A = DEVICE ADDRESS

THIS 'AATT' WILL BE NAMED 'AATT -1'.

- NOTE THIS 'AATT -1' NUMBER.

IS THE ACTION COMPLETE?

Y N

|  
| 035  
| - COMPLETE THE ACTION AND  
| CONTINUE ON YES LEG  
|  
|  
|  
|  
|  
|

29JUL83 PN6060917

ECA08003 PEC336711

1  
4  
X

X THE CONSOLE FAILED  
1  
3 PAPER ONLY

| PAGE 14 OF 56  
|  
|

036  
(ENTRY POINT CI)

IF THE 'AATT -1' ALTERNATE  
CONSOLE IS THE ONLY CONSOLE  
INSTALLED, ANSWER THE FOLLOWING  
QUESTION 'NO'.

IF THE 'AATT -1' ALTERNATE  
CONSOLE IS NOT THE ONLY CONSOLE  
INSTALLED, (SOME OTHER ALTERNATE  
CONSOLE IS INSTALLED), ANSWER THE  
FOLLOWING QUESTION 'YES'.

IF THE 'AATT -1' ALTERNATE  
CONSOLE IS NOT INSTALLED, AND  
THERE IS SOME OTHER ALTERNATE  
CONSOLE INSTALLED, ANSWER THE  
FOLLOWING QUESTION 'YES'.

- SEE IF MORE THAN ONE SUPPORTED  
ALTERNATE CONSOLE IS INSTALLED.

IS MORE THAN ONE SUPPORTED  
ALTERNATE CONSOLE INSTALLED?

Y N

|  
| 037  
| THERE IS ONLY ONE ALTERNATE  
| CONSOLE INSTALLED ON THE  
| SYSTEM. THE 'AATT-1' ALTERNATE  
| CONSOLE WAS NOTED BEFORE AND IS  
| NOT WORKING.

| - PRESS AND RELEASE THE START  
| KEY.

| DOES THE 'AATT -1' NUMBER NOTED  
| EQUAL 'XX40'?

| Y N


| 1  
1 1 5  
6 6 A  
Y Z A

29JUL83 PN6060917

ECA08003 PEC336711



Y Z A THE CONSOLE FAILED  
1 1 B  
4 4 1 PAPER ONLY  
5

PAGE 16 OF 56

042

- ENTER ON THE CONSOLE:

(B) 6 (I) (I)  
6 = RESUME

THE PROGRAM WILL CONTINUE.

DO THE DATA LEDS EQUAL '3800'  
OR '3805'?

Y N

043

- ENTER ON THE CONSOLE:

(B) 1F (I)  
(B) 0100 (I) (I)

THE PROGRAM WILL TERMINATE.

GO TO PAGE 27,

STEP 071,

ENTRY POINT CE.

044

GO TO PAGE 27, STEP 071,

ENTRY POINT CE.

045

GO TO PAGE 40, STEP 107,

ENTRY POINT TT.

046

- SEE THE 'AATT -1' NUMBER NOTED.

- SEE IF THE 'AATT -1' NUMBER  
EQUALS '0000'.

DOES THE 'AATT-1' EQUAL '0000'?

Y N

4 1  
4 7  
A A  
C D

29JUL83 PN6060917

ECA08003 PEC336711





A THE CONSOLE FAILED  
F  
1 PAPER ONLY  
7  
PAGE 18 OF 56

|  
|  
048  
(ENTRY POINT CD)

THERE IS AN ALTERNATE CONSOLE ASSIGNED BY DCP. THE ALTERNATE CONSOLE IS NOT WORKING. SOME OTHER 'ALTERNATE CONSOLE IS INSTALLED ON THE SYSTEM. USE THIS OTHER ALTERNATE CONSOLE TO DIAGNOSE THE ONE THAT IS NOT CORRECT.

- SEE THE ALTERNATE CONSOLE DEVICE ADDRESS AND TYPE YOU WANT TO USE AS A TEMPORARY ASSIGNED ALTERNATE CONSOLE. TO USE THIS OTHER CONSOLE, MAKE THE CHANGE AS FOLLOWS:

- PRESS THE STOP KEY.
- PRESS THE STOP ON ADDRESS KEY.
- PRESS THE ONE (1) KEY.
- PRESS THE NINE (9) KEY.
- PRESS THE FIVE (5) KEY.
- PRESS THE ZERO (0) KEY.
- PRESS THE STORE KEY.
- PRESS THE STOP ON ADDRESS KEY.
- PRESS THE STOP ON ADDRESS KEY.
- PRESS THE LOAD KEY.

- WAIT FOR THE STOP LED TO GO ON. THE DATA LEDS SHOULD BE 1950.

IS THE PROCESSING UNIT A 4952, 4953 OR 4955?

Y N  
| |  
| |  
| |  
| |  
| |  
| |  
| |  
| |  
| |

1 1  
9 9  
A A  
G H

29JUL83 PN6060917

ECA08003 PEC336711

A A THE CONSOLE FAILED  
G H  
1 1 PAPER ONLY  
8 8  
PAGE 19 OF 56

| |  
| |  
| 049  
| THE STOP LED IS ON, BUT THE  
| DATA LEDS DO NOT EQUAL 1950.  
|  
| - PRESS THE START KEY UNTIL THE  
| DATA LEDS EQUAL 1950 AND THE  
| STOP LED IS ON.  
| GO TO STEP 050,  
| ENTRY POINT AU.

050  
(ENTRY POINT AU)  
- SELECT A CONSOLE FROM TABLE.

AN ALTERNATE CONSOLE IS:	MAP/ TYPE	AA TT
4973 PRINTER	6800	AA68
4974 PRINTER	6400	AA64
5200 PRINTERS	6A00	AA6A
MULTIFUNCTION	E600	AAE6
3101-7485-4975		
3101 RPQ D02350	81F0	AA81
3101 ACCA SL	E800	AAE8
3101 ACCA ML	E900	AAE9
3101 FPMLC	EA00	AAEA
4978	4500	AA45
4979	4400	AA44
4980	F900	AAF9
7485 RPQ D02350	81FX	AA81
TTY ATTACHMENT %	4000	AA40
5251/5291	E400	AAE4

IS THE ACTION COMPLETE?

Y N  
| |  
| |  
| |  
| |  
| |

2 2  
0 0  
A A  
J K

A A THE CONSOLE FAILED  
J K  
1 1 PAPER ONLY  
9 9  
PAGE 20 OF 56

MAP 0023-20

| |  
| |  
| 051  
| - COMPLETE THE ACTION AND  
| CONTINUE ON THE YES LEG.  
|

052  
- DISPLAY REGISTER ZERO (0).  
- ENTER THE NEW ALTERNATE CONSOLE  
DEVICE ADDRESS AND TYPE (AATT).  
- PRESS THE STORE KEY.  
- SEE IF THE ALTERNATE CONSOLE  
SELECTED IS OTHER THAN A 4975,  
52X51, 4980, 7485 OR 5200  
SERIES PRINTER.

IS THE CONSOLE OTHER THAN ONE OF  
THE ABOVE?

Y N

| |  
| 053  
| - SEE IF THE ALTERNATE CONSOLE  
| ASSIGNED IS A 4975.  
|

| IS THE ALTERNATE CONSOLE  
| ASSIGNED A 4975?

| Y N

| |  
| 054  
| - SEE IF THE ALTERNATE  
| CONSOLE ASSIGNED IS A 52X1.  
|

| IS THE ALTERNATE CONSOLE  
| ASSIGNED A 52X1?

| Y N


2 2 2 2  
5 4 3 1  
A A A A  
L M N P

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-20

A THE CONSOLE FAILED  
P  
2 PAPER ONLY  
0  
PAGE 21 OF 56

|  
|  
055  
- SEE IF THE ALTERNATE CONSOLE  
ASSIGNED IS A 4980.

IS THE ALTERNATE CONSOLE ASSIGNED  
A 4980?  
Y N

| 056  
| - SEE IF THE ALTERNATE CONSOLE  
| ASSIGNED IS A 7485.

| IS THE ALTERNATE CONSOLE  
| ASSIGNED A 7485?  
| Y N

| 057  
| - SEE IF THE ALTERNATE  
| CONSOLE ASSIGNED IS A 5200  
| SERIES PRINTER.

| IS THE ALTERNATE CONSOLE  
| ASSIGNED A 5200 SERIES  
| PRINTER?  
| Y N

| 058  
| GO TO PAGE 25,  
| STEP 064,  
| ENTRY POINT AV.

2 2 2  
3 2 2  
A A A  
Q R S

29JUL83 PN6060917  
ECA08003 PEC336711  
MAP 0023-21

A A THE CONSOLE FAILED  
R S  
2 2 PAPER ONLY  
1 1  
PAGE 22 OF 56

MAP 0023-22

| |  
| |  
| 059  
| 5200 SERIES PRINTER SUBADDRESS  
| MUST BE ENTERED IN REGISTER 1  
| AS 000X.  
|  
| - DISPLAY REGISTER ONE (1).  
- ENTER ON THE CONSOLE:
- PRESS 0 KEY.
- PRESS 0 KEY.
- PRESS 0 KEY.
- PRESS X KEY.
WHERE X = PAAA
P = PORT NUMBER 0 - 1
XXX = PRINTER ADDRESS 0 - 6
GO TO PAGE 25, STEP 064,
ENTRY POINT AV.

060  
7485 - A MODEL (53 OR 63) MUST BE  
ENTERED IN REGISTER 1 AS 000X.

- DISPLAY REGISTER ONE (1).  
- ENTER ON THE CONSOLE:  
-----  
- PRESS 0 KEY.  
- PRESS 0 KEY.  
- PRESS 0 KEY.  
- PRESS X KEY.  
X = 1 = MODEL 53  
2 = MODEL 63  
GO TO PAGE 25, STEP 064,  
ENTRY POINT AV.

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-22

A A THE CONSOLE FAILED  
N Q  
2 2 PAPER ONLY  
0 1  
PAGE 23 OF 56

| |  
| |  
| 061  
| 4980 - CABLE AND STATION  
| ADDRESS MUST BE ENTERED IN  
| REGISTER 1 AS ZYXX.

| - DISPLAY REGISTER ONE (1).  
- ENTER ON THE CONSOLE:
- PRESS Z KEY.
- PRESS Y KEY.
- PRESS X KEY.
- PRESS X KEY.
Z = PORT ADDRESS 0 - 1
Y = LINE SPEED 0-100K
1-250K
2-500K
XX = TERMINAL ADDRESS
GO TO PAGE 25, STEP 064,
ENTRY POINT AV.

| 062  
| 52X1 - CABLE AND STATION ADDRESS  
| MUST BE ENTERED IN REGISTER 1 AS  
| 00XY.

| - DISPLAY REGISTER ONE (1).  
- ENTER ON THE CONSOLE:
- PRESS 0 KEY.
- PRESS 0 KEY.
- PRESS X KEY.
- PRESS Y KEY.
X = CABLE ADDRESS 0-3
Y = STATION ADDRESS 0-6
GO TO PAGE 25, STEP 064,
ENTRY POINT AV.

29JUL83 PN6060917

ECA08003 PEC336711

A  
M  
2  
0

THE CONSOLE FAILED

MAP 0023-24

PAPER ONLY

PAGE 24 OF 56

|  
|

063

4975 - A MODEL (01L OR 02L) MUST  
BE ENTERED IN REGISTER 1 AS 000X.

- DISPLAY REGISTER ONE (1).  
- ENTER ON THE CONSOLE:

-----

- PRESS 0 KEY.
- PRESS 0 KEY.
- PRESS 0 KEY.
- PRESS X KEY.

X = 3 = MODEL 01L

4 = MODEL 02L

GO TO PAGE 25, STEP 064,  
ENTRY POINT AV.

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-24



A THE CONSOLE FAILED  
L  
2 PAPER ONLY  
0  
PAGE 25 OF 56

MAP 0023-25

|  
|  
064  
(ENTRY POINT AV)

- PRESS THE STORE KEY.
- PRESS THE STOP ON ADDRESS KEY.
- PRESS THE START KEY.

REMEMBER - THE 'OTHER' CONSOLE YOU ASSIGNED IS USED UNTIL YOU IPL THE PROCESSING UNIT AGAIN. DO THE ABOVE PROCEDURE BEFORE EACH IPL, OR THE 'OLD' CONSOLE WILL BE USED BY THE DIAGNOSTIC(S).

THE 'AATT-1' ALTERNATE CONSOLE WAS NOTED BEFORE AND IS NOT WORKING.

- SEE IF THE ALTERNATE CONSOLE IN 'AATT -1' IS INSTALLED ON THE SYSTEM.

3101 SWITCHES IF SUPPORTED BY:

-----  
FPMLC CURRENT INTERFACE, RPQ  
D02350 AND 1310 MULTIFUNCTION.  
1234567812345678 1234567812345678  
X X X X X XX X  
X X X X XX XX  
-----

FPMLC WITH RS232C.  
1234567812345678 1234567812345678  
XXX X X X XX X  
X X X XX XX  
-----

TTY WITH EIA INTERFACE.  
1234567812345678 1234567812345678  
X X X XX  
XX X X \*\*\*\*\*  
-----

TTY WITH CURRENT INTERFACE.  
1234567812345678 1234567812345678  
X X X XX  
XXX X X \*\*\*\*\*  
-----

ACCA SL - ML EIA RS232C  
1234567812345678 1234567812345678  
XXX X X X XXX XXX  
X XX X X  
-----

X = SWITCH POSITIONS. CHANGE IF NEEDED. WHEN DONE, RETURN TO CUSTOMERS ORIGINAL POSITION.  
\* = SET TO MATCH THE BAUD RATE OF THE TTY ATTACHMENT CARD. SEE 3101 COVER AND LOGIC SD100.

IS THE 'AATT -1' CONSOLE INSTALLED ON THE SYSTEM?

Y N  
| |  
| |  
| |  
| |  
| |  
| |

2 2  
7 6  
A A  
T U

29JUL83 PN6060917  
ECA08003 PEC336711  
MAP 0023-25

A THE CONSOLE FAILED  
U  
2 PAPER ONLY  
5  
PAGE 26 OF 56

|  
|  
065  
(ENTRY POINT CC)

THIS IS AN ERROR IN THE  
CONFIGURATION TABLE. THE  
ALTERNATE CONSOLE ASSIGNED IN THE  
CONFIGURATION TABLE IS NOT  
INSTALLED ON THE SYSTEM. THE  
CONFIGURATION TABLE IS NOT  
CORRECT.

- SEE IF THE CONSOLE YOU ARE  
USING HAS A KEYBOARD INSTALLED.

DOES THE CONSOLE YOU ARE USING  
HAVE A KEYBOARD INSTALLED?

Y N

|  
| 066  
| - SEE IF THE CONSOLE YOU ARE  
| USING IS A PRINTER.

| IS THE CONSOLE YOU ARE USING A  
| PRINTER?

| Y N

|  
| 067  
| THE CONSOLE BEING USED NOW IS  
| A PROGRAMMER OR C E CONSOLE.

| - CHANGE THE ALTERNATE  
| CONSOLE ASSIGNED IN THE  
| CONFIGURATION TABLE.  
| GO TO MAP 3882,  
| ENTRY POINT A.

|  
| 068  
| - CHANGE THE ALTERNATE CONSOLE  
| ASSIGNED IN THE CONFIGURATION  
| TABLE.  
| GO TO MAP 3881, ENTRY POINT A.

2  
7  
A  
V

29JUL83 PN6060917

ECA08003 PEC336711

A A THE CONSOLE FAILED  
T V  
2 2 PAPER ONLY  
5 6  
PAGE 27 OF 56

| |  
| |  
| 069  
| - CHANGE THE ALTERNATE CONSOLE  
| ASSIGNED IN THE CONFIGURATION  
| TABLE.  
| GO TO MAP 3881, ENTRY POINT A.

|  
070  
- SEE IF THE TEMPORARY ALTERNATE  
CONSOLE HAS A KEYBOARD.

DOES THE TEMPORARY ALTERNATE  
CONSOLE HAVE A KEYBOARD?  
Y N

|  
| 071  
| (ENTRY POINT CE)  
|  
| - SEE IF THE SUSPECT ALTERNATE  
| CONSOLE IS A 4978 RPQ  
| DISPLAY.

| IS THE SUSPECT ALTERNATE  
| CONSOLE AS NOTED ABOVE?  
| Y N

| |  
| | 072  
| | - SEE IF THE SUSPECT  
| | ALTERNATE CONSOLE IS A  
| | 5251/5291 DISPLAY.

| | IS THE SUSPECT ALTERNATE  
| | CONSOLE AS NOTED ABOVE?  
| | Y N


3 3 3 2  
9 6 3 8  
A A A A  
W X Y Z

A  
Z  
2  
7

THE CONSOLE FAILED

MAP 0023-28

PAPER ONLY

PAGE 28 OF 56

|  
|  
073

- SEE IF THE SUSPECT ALTERNATE  
CONSOLE IS A 3101/7485 DISPLAY  
CONNECTED TO A MULTIFUNCTION  
CARD.

IS THE SUSPECT ALTERNATE CONSOLE  
AS NOTED ABOVE?

Y N

|

074

(ENTRY POINT AF)

|

- SEE IF A PROGRAMMER OR C E  
CONSOLE IS INSTALLED ON THE  
PROCESSING UNIT.

|

IS A PROGRAMMER OR C E CONSOLE  
INSTALLED AS NOTED?

Y N

|

075

OBTAIN THE FOLLOWING:  
C E MAINTENANCE CONSOLE TOOL.  
ALTERNATE CONSOLE ATTACHMENT  
CARD.

|

INSTALL MAINTENANCE CONSOLE:

-----

- SEE THE PROCESSING UNIT  
MAINTENANCE INFORMATION  
MANUAL, MAINTENANCE CONSOLE  
ATTACHMENT PROCEDURE.

- SEE MLD VOLUME 1, PAXXX FOR  
PROCESSING UNIT TOP CARD  
CONNECTORS.

GO TO MAP 0020,  
ENTRY POINT A.

|

|

|

|

|

|

|

|

|

|

|

|

|

|

|

|

|

|

3 2  
1 9  
B B  
A B

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-28

B THE CONSOLE FAILED  
B  
2 PAPER ONLY  
8  
PAGE 29 OF 56

MAP 0023-29

|  
|  
076  
AN ALTERNATE CONSOLE IS INSTALLED ON THE SYSTEM AND IS NOT WORKING CORRECT. A PROGRAMMER OR C E CONSOLE IS INSTALLED ON THE PROCESSING UNIT. THE PROGRAMMER OR C E CONSOLE CAN BE USED TO RUN THE DIAGNOSTIC(S) FOR THE SUPPORTED ALTERNATE CONSOLE.

- GO TO THE MAP PROLOG FOR THE ALTERNATE CONSOLE DEVICE OR RPQ SUSPECTED.
- READ SECTION 0.0 OF THE PROLOG.
- LOAD THE MANUAL MAP INDICATED IN THE PROLOG, SECTION 0.0, FOR THE ALTERNATE CONSOLE ATTACHMENT OR DEVICE SUSPECTED.

IF A KEY OR KEYBOARD IS SUSPECTED AS THE PROBLEM, BECAUSE OF FAILURE WHEN THE KEYBOARD WAS USED, NOTE THIS WHEN READING THE PROLOG. THE PROLOG WILL LIST A KEYBOARD CHECK FOR THE ALTERNATE CONSOLE.

IF INSTRUCTED,  
- ENTER ON THE CONSOLE:

-----  
(B) B (I)  
(B) XXXX (I) (I)  
XXXX = CONSOLE MAP #

- LISTEN FOR THE 'AUDIBLE DEVICE' WHEN THE KEY(S) ARE PRESSED.

CAN YOU MAKE THE CONSOLE ENTRY INTO THE SYSTEM?

Y N  
| |  
| |  
| |  
| |

3 3  
1 0  
B B  
C D

29JUL83 PN6060917  
ECA08003 PEC336711  
MAP 0023-29

B THE CONSOLE FAILED  
D  
2 PAPER ONLY  
9  
PAGE 30 OF 56

077  
IS THIS THE FIRST TIME HERE?  
Y N

078  
- TEST THE KEY THAT IS NOT  
CORRECT.

```

+-----+
| PROCESSOR| GO TO MAP 107X, |
| UNIT IS: | ENTRY POINT A. |
+-----+
| 495X     | MAP 1071  |
| 4954/56  | MAP 1072  |
+-----+
|           | IF NO REPAIR: |
+-----+

```

GO TO PAGE 4, STEP 010,  
ENTRY POINT DP.

079  
- IPL DISKETTE P/N 1635001.  
- SEE MAP 0010, SECTION 04.01.00.  
- ASSIGN THE CONSOLE FUNCTION TO  
THE PROGRAMMER CONSOLE AS  
FOLLOWS:

- ENTER ON THE CONSOLE:  
-----  
(B) 5 (I) (I)

THE PROGRAMMER CONSOLE IS NOW THE  
CONSOLE TO USE.  
IT IS THE CONSOLE TO USE UNTIL  
THE NEXT IPL OF DISKETTE P/N  
1635001.  
GO TO PAGE 27, STEP 071,  
ENTRY POINT CE.

29JUL83 PN6060917

ECA08003 PEC336711

B B THE CONSOLE FAILED  
A C  
2 2 PAPER ONLY  
8 9  
PAGE 31 OF 56

MAP 0023-31

| |  
| |  
| 080  
| - FOLLOW INSTRUCTIONS IN  
| PROLOG, SECTION 0.0, AND RUN  
| ALL DIAGNOSTICS.

| AFTER ALL OF THE DIAGNOSTIC(S)  
| ARE RUN, ANSWER THE FOLLOWING  
| QUESTION:

| DID THE ALTERNATE CONSOLE  
| DIAGNOSTIC(S) REPAIR THE  
| PROBLEM?  
| Y N

| | 081  
| | GO TO MAP 0070,  
| | ENTRY POINT A.

| 082  
| - VERIFY THE REPAIR

083  
THE ALTERNATE CONSOLE IS A  
3101/7485 DISPLAY.  
THE 3101/7485 DISPLAY IS NOT  
WORKING CORRECT.

- SEE IF THE 3101/7485 DISPLAY  
HAS A MESSAGE ON THE SCREEN.

DOES THE SCREEN DISPLAY  
MESSAGE(S) CORRECT?

Y N  
| |  
| |  
| |  
| |  
| |  
| |  
| |  
| |  
| |  
| |  
| |

3 3  
3 2  
B B  
E F

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-31

B THE CONSOLE FAILED  
F  
3 PAPER ONLY  
1  
PAGE 32 OF 56

|  
|

084

- SEE THE NOTE --->

BEFORE THE DISPLAY CAN BE USED AS AN ALTERNATE CONSOLE, WRITE DATA SET 'E6C0' FROM DISKETTE PART NUMBER '6031185 TO THE BASIC DISKETTE PART NUMBER 1635001, THE SYSTEM TEST DISKETTE PART NUMBER 1635003 AND DIAGNOSTIC DISKETTE PART NUMBER 6031186.

DATA SET 'E6C0' MUST BE WRITTEN ON THE BASIC DISKETTE PART NUMBER 1635001, THE SYSTEM TEST DISKETTE PART NUMBER 1635003 AND DIAGNOSTIC DISKETTE P/N 6031186.

- USE THE PROGRAMMER OR C E CONSOLE AND THE UTILITY PROGRAM 38F9 TO DISPLAY THE VTOC FOR THE ABOVE DISKETTES. SEE IF DATA SET 'E6C0' IS ON THE DISKETTES.

IS THERE A VTOC ENTRY ON THE DISKETTES FOR 'E6C0'?

Y N

|

| 085

| - WRITE DATA SET 'E6C0' FROM  
| DISKETTE PART NUMBER 6031185  
| TO THE BASIC DISKETTE PART  
| NUMBER 1635001, SYSTEM TEST  
| DISKETTE PART NUMBER 1635003  
| AND DIAGNOSTIC DISKETTE PART  
| NUMBER 6031186.

| GO TO MAP 0020, ENTRY POINT ID.

|

086

- USE THE PROGRAMMER OR C E CONSOLE TO RUN THE MULTIFUNCTION ATTACHMENT CARD TESTS.

GO TO PAGE 28, STEP 074,  
ENTRY POINT AF.

29JUL83 PN6060917

ECA08003 PEC336711





B  
H  
3  
3

THE CONSOLE FAILED  
  
PAPER ONLY  
  
PAGE 34 OF 56

MAP 0023-34

|  
|  
089

- SEE THE NOTE --->

BEFORE A 52X1 DISPLAY CAN BE USED AS ALTERNATE CONSOLE, WRITE THE DATA SET(S) 'E4D0' AND 'E4D1' (OPTIONAL) FROM DISKETTE PART NUMBER 6826590 TO THE BASIC DISKETTE PART NUMBER 1635001, THE SYSTEM TEST DISKETTE PART NUMBER 1635003 AND DIAGNOSTIC DISKETTE PART NUMBER 1635002.

- USE THE PROGRAMMER OR C E CONSOLE AND THE UTILITY PROGRAM 38F9 TO DISPLAY THE VTOC FOR THE ABOVE DISKETTES. SEE IF DATA SET(S) 'E4D0' AND 'E4D1' ARE ON THE DISKETTES.

IS THERE A VTOC ENTRY ON THE DISKETTES FOR 'E4D0'?

Y N

|  
| 090

- WRITE DATA SET 'E4D0' FROM DISKETTE PART NUMBER 6826590 TO THE BASIC DISKETTE PART NUMBER 1635001, SYSTEM TEST DISKETTE PART NUMBER 1635003 AND DIAGNOSTIC DISKETTE PART NUMBER 1635002, IF NEEDED.

- IF DATA SET 'E4D1' IS ON DISKETTE PART NUMBER 6826590, WRITE IT TO BASIC DISKETTE PART NUMBER 1635001, SYSTEM TEST DISKETTE PART NUMBER 1635003, AND DIAGNOSTIC DISKETTE PART NUMBER 1635002, IF NEEDED.

GO TO MAP 0020, ENTRY POINT ID.

3  
5  
B  
J

DATA SET 'E4D0' MUST BE WRITTEN ON THE BASIC DISKETTE PART NUMBER 1635001, THE SYSTEM TEST DISKETTE PART NUMBER 1635003 AND DIAGNOSTIC DISKETTE P/N 1635002.

DATA SET 'E4D1' IS OPTIONAL. IT IS NOT NECESSARY TO WRITE THIS DATA SET TO THE ABOVE DISKETTES. IF YOU HAVE DATA SET E4D1 ON DISKETTE 6826590, WRITE IT. IF YOU DO NOT HAVE DATA SET 'E4D1' ON DISKETTE 6826590, IT IS NOT NEEDED BY YOUR SYSTEM.

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-34

B THE CONSOLE FAILED  
J  
3 PAPER ONLY  
4  
PAGE 35 OF 56

MAP 0023-35

|  
|  
091  
- USE THE PROGRAMMER OR C E  
CONSOLE AND THE UTILITY PROGRAM  
38F9 TO DISPLAY THE VTOC FOR  
THE DISKETTE 6826590. SEE IF  
DATA SET 'E4D1' IS ON THE  
DISKETTE.

IS THERE A VTOC ENTRY ON THIS  
DISKETTE FOR 'E4D1'?

Y N  
|  
| 092  
| - USE THE PROGRAMMER OR C E  
| CONSOLE TO RUN THE 52X1  
| INFORMATION DISPLAY SYSTEM  
| ATTACHMENT MAP(S).

| GO TO PAGE 28, STEP 074,  
| ENTRY POINT AF.

|  
093  
- WRITE DATA SET 'E4D1' FROM  
DISKETTE PART NUMBER 6826590 TO  
THE BASIC DISKETTE PART NUMBER  
1635001, SYSTEM TEST DISKETTE  
PART NUMBER 1635003 AND  
DIAGNOSTIC DISKETTE PART NUMBER  
1635002, IF NEEDED.  
GO TO MAP 0020, ENTRY POINT ID.

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-35

A B THE CONSOLE FAILED  
X G  
2 3 PAPER ONLY  
7 3  
PAGE 36 OF 56

| |  
| |  
| 094  
| THE 52X1 CAN DISPLAY  
| MESSAGE(S). THERE MAY BE A  
| KEYBOARD ENTRY PROBLEM.

| - USE THE STATION VERIFY  
| DISKETTE, PART NUMBER  
| 6826590. THE DISPLAY  
| STATION(S) WILL GO TO FREE  
| KEY MODE. WHEN THE  
| STATION(S) ARE IN FREE KEY  
| MODE, USE THE STATION MAP  
| THAT IS IN THE LOWER REAR OF  
| THE STATION TO REPAIR THE  
| DISPLAY.

| DID THE 'FREE KEY MODE' MAP  
| REPAIR THE PROBLEM?  
| Y N

| | 095  
| | THE PROBLEM ON THE DISPLAY IS  
| | NOT ON THE KEYBOARD.  
| | GO TO PAGE 28, STEP 074,  
| | ENTRY POINT AF.

| 096  
| - VERIFY THE REPAIR

097  
THE ALTERNATE CONSOLE IS A 4978  
RPQ DISPLAY. THE 4978 DISPLAY IS  
NOT WORKING.

- SEE IF THE 4978 DISPLAY HAS ANY  
MESSAGE(S) ON THE SCREEN.

DOES THE SCREEN DISPLAY  
MESSAGE(S) CORRECT?

Y N  
| |  
| |  
| |  
| |

3 3  
7 7  
B B  
K L

29JUL83 PN6060917

ECA08003 PEC336711



B B B THE CONSOLE FAILED  
M N P  
3 3 3 PAPER ONLY  
7 7 7  
PAGE 38 OF 56

MAP 0023-38

| | |  
| | |  
| | 101  
| | THE KEYBOARD FUNCTION TABLE  
| | FROM THE DISKETTE DOES NOT  
| | MATCH THE KEYBOARD IN USE.  
| |  
| | - IPL DISKETTE P/N 1635001.  
| |  
| | AT MESSAGE:  
| | 'PRESS ANY KEY IN 15 SECONDS  
| | TO CHANGE KEYBOARD  
| | DESCRIPTION'  
| |  
| | - PRESS ANY KEY ON THE 4978  
| | KEYBOARD.  
| | GO TO MAP 0030,  
| | ENTRY POINT PQ.  
| |  
| | 102  
| | - VERIFY THE REPAIR  
| |  
103  
THE PROBLEM ON THE 4978 RPQ IS  
NOT ON THE KEYBOARD.  
GO TO PAGE 28, STEP 074,  
ENTRY POINT AF.

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-38

A THE CONSOLE FAILED  
W  
2 PAPER ONLY  
7  
PAGE 39 OF 56

MAP 0023-39

|  
|  
104  
YOU ARE USING A 'TEMPORARY'  
ALTERNATE CONSOLE. AN ALTERNATE  
CONSOLE 'AATT -1', IS INSTALLED  
AND NOT WORKING.

- USE THE 'TEMPORARY' CONSOLE TO  
LOAD DIAGNOSTICS FOR THE 'AATT  
-1' CONSOLE THAT IS NOT  
WORKING.
- GO TO MAP PROLOG FOR ALTERNATE  
CONSOLE DEVICE SUSPECTED. READ  
SECTION 0.0.
- LOAD THE MAP INDICATED IN THE  
PROLOG, SECTION 0.0, FOR THE  
ALTERNATE CONSOLE ATTACHMENT OR  
DEVICE SUSPECTED.
- FOLLOW INSTRUCTIONS IN THE  
PROLOG, SECTION 0.0, AND RUN  
THE DIAGNOSTICS.

IF A KEY OR KEYBOARD IS SUSPECTED  
AS THE PROBLEM, BECAUSE OF A  
FAILURE WHEN THE KEYBOARD WAS  
USED, NOTE THIS WHEN READING THE  
PROLOG. THE PROLOG LISTS A  
KEYBOARD CHECK OR OFF LINE TESTS  
FOR THE ALTERNATE CONSOLE.

IF INSTRUCTED,  
- ENTER ON TEMPORARY CONSOLE:  
-----  
BXXXX ENTER OR RETURN  
XXXX = AATT -1 DIAGNOSTIC

AFTER ALL OF THE DIAGNOSTIC(S)  
ARE RUN, ANSWER THE FOLLOWING  
QUESTION:

DID THE ALTERNATE CONSOLE  
DIAGNOSTIC(S) REPAIR THE PROBLEM?  
Y N

|  
| 105  
| GO TO MAP 0070, ENTRY POINT A.  
|  
|  
|

4  
0  
B  
Q

29JUL83 PN6060917  
ECA08003 PEC336711  
MAP 0023-39

A B THE CONSOLE FAILED  
E Q  
1 3 PAPER ONLY  
7 9  
PAGE 40 OF 56

| |  
| |  
| 106  
| - VERIFY THE REPAIR  
|  
107  
(ENTRY POINT TT)

THE ASSIGNED ALTERNATE CONSOLE IS  
A TTY TYPE.

- SEE IF A TTY TYPE ATTACHMENT  
CARD IS INSTALLED ON THE  
SYSTEM.

IS A TTY TYPE ATTACHMENT CARD  
INSTALLED ON THE SYSTEM?

Y N  
|  
| 108  
| THE CONFIGURATION TABLE ENTRY  
| FOR THE ALTERNATE CONSOLE IS  
| NOT CORRECT.  
| GO TO PAGE 26, STEP 065,  
| ENTRY POINT CC.  
|

109  
- SEE IF A WRAP CONNECTOR IS  
INSTALLED ON THE TOP CARD  
CONNECTOR OF THE TTY TYPE  
ATTACHMENT CARD.

IS A WRAP CONNECTOR INSTALLED ON  
THE TTY ATTACHMENT CARD?

Y N  
| |  
| |  
| |  
| |  
| |  
| |  
| |  
| |  
| |  
| |

4 4  
3 1  
B B  
R S



B  
S  
4  
0

THE CONSOLE FAILED  
PAPER ONLY  
PAGE 41 OF 56

MAP 0023-41

110

- SEE THE TTY TYPE DEVICE  
CONNECTED TO THE TTY ATTACHMENT  
CARD.

THE TTY TYPE DEVICE MAY BE AN I/O  
TYPE DEVICE. IT MAY HAVE A  
KEYBOARD AND BE A DISPLAY OR  
PRINT DEVICE.

IS THE TTY TYPE DEVICE AN I/O  
DEVICE?

Y N

111

THERE IS A TTY TYPE ATTACHMENT  
INSTALLED ON THE SYSTEM. THERE  
IS NO TTY TYPE DEVICE CONNECTED  
TO THIS CARD. THIS TTY TYPE  
DEVICE MUST NOT BE ASSIGNED IN  
THE CONFIGURATION TABLE AS THE  
SUPPORTED ALTERNATE CONSOLE.

- CHANGE THE SUPPORTED  
ALTERNATE CONSOLE IN THE  
CONFIGURATION TABLE, IF SOME  
OTHER ALTERNATE CONSOLE IS  
INSTALLED.

IS SOME OTHER SUPPORTED  
ALTERNATE CONSOLE INSTALLED ON  
THE SYSTEM?

Y N

112

- ENTER ON THE CONSOLE:

-----  
(B) 6 (I) (I)

GO TO PAGE 26, STEP 065,  
ENTRY POINT CC.

4 4  
2 2  
B B  
T U

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-41

B B THE CONSOLE FAILED  
T U  
4 4 PAPER ONLY  
1 1  
PAGE 42 OF 56

MAP 0023-42

| |  
| |  
| 113  
| GO TO PAGE 18, STEP 048,  
| ENTRY POINT CD.

114  
A TTY TYPE IS CONNECTED TO THE  
TTY ATTACHMENT CARD. ON A TTY  
TYPE ALTERNATE CONSOLE, THE  
SWITCH IS IN THE 'LINE' SETTING.

- ENSURE THE TTY IS READY.
- ENSURE THE TTY POWER IS ON.

IS THE TTY TYPE POWER ON, AND THE  
TTY TYPE READY?

Y N

| |  
| 115  
| - ENSURE THE TTY IS READY.  
| GO TO MAP 0020, ENTRY POINT A.

116  
- SEE IF THERE IS SOME OTHER  
SUPPORTED ALTERNATE CONSOLE  
INSTALLED ON THE SYSTEM.

IS THERE SOME OTHER SUPPORTED  
ALTERNATE CONSOLE INSTALLED ON  
THE SYSTEM?

Y N

| |  
| 117  
| GO TO PAGE 15, STEP 040,  
| ENTRY POINT TY.

118  
GO TO PAGE 18, STEP 048,  
ENTRY POINT CD.

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-42

B THE CONSOLE FAILED  
R  
4 PAPER ONLY  
0  
PAGE 43 OF 56

MAP 0023-43

|  
|  
119  
AT EACH IPL, '3801' WILL BE IN  
THE DATA LEDS. THE CONFIGURATION  
TABLE HAS THE TTY AS THE  
ALTERNATE CONSOLE. THE WRAP  
CONNECTOR IS INSTALLED, THE TTY  
IS NOT INSTALLED.  
TO CONTINUE IN THE MAP,

- ENTER ON THE CONSOLE:  
-----  
(B) 6 (I) (I)

GO TO PAGE 5, STEP 012,  
ENTRY POINT PP.

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-43

A THE CONSOLE FAILED  
C  
1 PAPER ONLY  
6  
PAGE 44 OF 56

MAP 0023-44

|  
|  
120  
(ENTRY POINT AA)

THE CONSOLE ASSIGNED BY DCP IS THE PROGRAMMER CONSOLE. THERE IS AN ALTERNATE CONSOLE INSTALLED ON THE SYSTEM.

- SEE THE ALTERNATE CONSOLE DEVICE ADDRESS AND TYPE YOU WANT TO USE AS A TEMPORARY ASSIGNED ALTERNATE CONSOLE. TO USE THIS OTHER CONSOLE, MAKE THE CHANGE AS FOLLOWS:

- PRESS THE STOP KEY.
- PRESS THE STOP ON ADDRESS KEY.
- PRESS THE ONE (1) KEY.
- PRESS THE NINE (9) KEY.
- PRESS THE FIVE (5) KEY.
- PRESS THE ZERO (0) KEY.
- PRESS THE STORE KEY.
- PRESS THE STOP ON ADDRESS KEY.
- PRESS THE STOP ON ADDRESS KEY.
- PRESS THE LOAD KEY.
- WAIT FOR THE STOP LED TO GO ON.

THE DATA LEDS SHOULD BE 1950.

IS THE PROCESSING UNIT A 4952, 4953 OR 4955?

Y N

|  
| 121  
| THE STOP LED IS ON, BUT THE  
| DATA LEDS DO NOT EQUAL 1950.

|  
| - PRESS THE START KEY UNTIL THE  
| DATA LEDS EQUAL 1950 AND THE  
| STOP LED IS ON.

| GO TO PAGE 19, STEP 050,  
| ENTRY POINT AU.

|  
|

4  
5  
B  
V

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-44

B  
V  
4  
4

THE CONSOLE FAILED  
PAPER ONLY  
PAGE 45 OF 56

MAP 0023-45

122  
(ENTRY POINT AW)

- SELECT CONSOLE FROM THE TABLE.

AN ALTERNATE CONSOLE IS:	MAP/ TYPE	AA TT
4973 PRINTER	6800	AA68
4974 PRINTER	6400	AA64
5200 PRINTERS	6A00	AA6A
MULTIFUNCTION 3101-7485-4975	E600	AAE6
3101 RPQ D02350	81F0	AA81
3101 ACCA SL	E800	AAE8
3101 ACCA ML	E900	AAE9
3101 FPMLC	EA00	AAEA
4978	4500	AA45
4979	4400	AA44
4980	F900	AAF9
7485 RPQ D02350	81FX	AA81
TTY ATTACHMENT %	4000	AA40
5251/5291	E400	AAE4

IS THE ACTION COMPLETE?

Y N

123

- COMPLETE THE ACTION AND  
CONTINUE ON THE YES LEG.

4  
6  
B  
W

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-45



C THE CONSOLE FAILED  
B  
4 PAPER ONLY  
6  
PAGE 47 OF 56

MAP 0023-47

128  
- SEE IF THE ALTERNATE CONSOLE  
ASSIGNED IS A 7485.

IS THE ALTERNATE CONSOLE ASSIGNED  
A 7485?  
Y N

129  
- SEE IF THE ALTERNATE CONSOLE  
ASSIGNED IS A 5200 SERIES  
PRINTER.

IS THE ALTERNATE CONSOLE  
ASSIGNED A 5200 SERIES PRINTER?  
Y N

130  
GO TO PAGE 25, STEP 064,  
ENTRY POINT AV.

131  
5200 SERIES PRINTER SUBADDRESS  
MUST BE ENTERED IN REGISTER 1  
AS 000X.

- DISPLAY REGISTER ONE (1).  
- ENTER ON THE CONSOLE:  
-----  
- PRESS 0 KEY.  
- PRESS 0 KEY.  
- PRESS 0 KEY.  
- PRESS X KEY.  
WHERE X = PAAA  
P = PORT NUMBER 0 - 1  
AAA = PRINTER ADDRESS 0 - 6  
GO TO PAGE 50, STEP 136,  
ENTRY POINT AX.

4  
8  
C  
C

29JUL83 PN6060917  
ECA08003 PEC336711  
MAP 0023-47

C C THE CONSOLE FAILED  
A C  
4 4 PAPER ONLY  
6 7  
PAGE 48 OF 56

MAP 0023-48

| |  
| |  
| 132  
| 7485 - A MODEL (53 OR 63) MUST  
| BE ENTERED IN REGISTER 1 AS  
| 000X.

| - DISPLAY REGISTER ONE (1).  
- ENTER ON THE CONSOLE:

| - PRESS 0 KEY.  
| - PRESS 0 KEY.  
| - PRESS 0 KEY.  
| - PRESS X KEY.  
| X = 1 = MODEL 53  
| 2 = MODEL 63

| GO TO PAGE 50, STEP 136,  
| ENTRY POINT AX.

|  
133  
4980 - CABLE AND STATION ADDRESS  
MUST BE ENTERED IN REGISTER 1 AS  
ZYXX.

- DISPLAY REGISTER ONE (1).  
- ENTER ON THE CONSOLE:  
-----

- PRESS Z KEY.  
- PRESS Y KEY.  
- PRESS X KEY.  
- PRESS X KEY.  
Z = PORT ADDRESS 0-1  
Y = LINE SPEED 0=100K  
1=250K  
2=500K

XX = TERMINAL ADDRESS  
GO TO PAGE 50, STEP 136,  
ENTRY POINT AX.

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-48



B B THE CONSOLE FAILED  
Y Z  
4 4 PAPER ONLY  
6 6  
PAGE 49 OF 56

MAP 0023-49

| |  
| |  
| 134  
| 52X1 - CABLE AND STATION  
| ADDRESS MUST BE ENTERED IN  
| REGISTER 1 AS 00XY.  
|  
| - DISPLAY REGISTER ONE (1).  
- ENTER ON THE CONSOLE:
- PRESS 0 KEY.
- PRESS 0 KEY.
- PRESS X KEY.
- PRESS Y KEY.
X = CABLE ADDRESS 0-3
Y = STATION ADDRESS 0-6
GO TO PAGE 50, STEP 136,
ENTRY POINT AX.

135  
4975 - A MODEL (01L OR 02L) MUST  
BE ENTERED IN REGISTER 1 AS 000X.

- DISPLAY REGISTER ONE (1).  
- ENTER ON THE CONSOLE:  
-----  
- PRESS 0 KEY.  
- PRESS 0 KEY.  
- PRESS 0 KEY.  
- PRESS X KEY.  
X = 3 = MODEL 01L  
4 = MODEL 02L  
GO TO PAGE 50, STEP 136,  
ENTRY POINT AX.

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-49

B THE CONSOLE FAILED  
X  
4 PAPER ONLY  
6  
PAGE 50 OF 56

MAP 0023-50

|  
|  
136  
(ENTRY POINT AX)

- PRESS THE STORE KEY.
- PRESS THE STOP ON ADDRESS KEY.
- PRESS THE START KEY.

REMEMBER - THE 'OTHER' CONSOLE YOU ASSIGNED IS USED UNTIL YOU IPL THE PROCESSING UNIT AGAIN. DO THE ABOVE PROCEDURE BEFORE EACH IPL, OR THE 'OLD' CONSOLE WILL BE USED BY THE DIAGNOSTIC(S).

THE PROGRAMMER OR C E CONSOLE IS NOT USED AS THE ASSIGNED CONSOLE. THERE IS SOME OTHER CONSOLE INSTALLED ON THIS SYSTEM. IT MUST BE ASSIGNED AS THE ALTERNATE CONSOLE IN THE CONFIGURATION TABLE. THIS CONSOLE IS THE ONE YOU ARE NOW USING.

3101 SWITCHES IF SUPPORTED BY:

-----  
FPMLC CURRENT INTERFACE, RPQ  
D02350 AND 1310 MULTIFUNCTION.  
1234567812345678 1234567812345678  
X X X X X XX X  
X X X X XX XX  
-----

FPMLC WITH RS232C.  
1234567812345678 1234567812345678  
XXX X X X XX X  
X X X XX XX  
-----

TTY WITH EIA INTERFACE.  
1234567812345678 1234567812345678  
X X X XX  
XX X X \*\*\*\*\*  
-----

TTY WITH CURRENT INTERFACE.  
1234567812345678 1234567812345678  
X X X XX  
XXX X X \*\*\*\*\*  
-----

ACCA SL - ML EIA RS232C  
1234567812345678 1234567812345678  
XXX X X X XXX XXX  
X XX X X  
-----

- X = SWITCH POSITIONS. CHANGE IF NEEDED. WHEN DONE, RETURN TO CUSTOMERS ORIGINAL POSITION.
- \* = SET TO MATCH THE BAUD RATE OF THE TTY ATTACHMENT CARD. SEE 3101 COVER AND LOGIC SD100.

DO YOU WANT TO CHANGE THE ALTERNATE CONSOLE TO THE ONE YOU ARE NOW USING?

Y N  
| |  
| |  
| |  
| |

5 5  
1 1  
C C  
D E

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-50

C C THE CONSOLE FAILED  
D E  
5 5 PAPER ONLY  
0 0  
PAGE 51 OF 56

MAP 0023-51

| |  
| |  
| 137  
| GO TO MAP 0020, ENTRY POINT PD.  
|  
138  
- SEE THE MESSAGE ON THE  
ALTERNATE CONSOLE.

CONFIGURATION ERROR(S)  
01=TERMINATE  
02=PRINT ALL ERRORS  
03=PRINT OPTIONS  
04=BYPASS 2 CHANNEL SWITCH ERRORS

IS THIS MESSAGE ON THE ALTERNATE  
CONSOLE?  
Y N

| 139  
| - SEE THE MESSAGE ON THE  
| ALTERNATE CONSOLE.

| 'FIRST AUTO CONFIGURATION  
| INNER STORAGE  
| 03=16K, 07=32K, 0B=48K, 0F=64K  
| ENTER'

OR

| 'ALTERNATE CONSOLE DEVICE  
| ADDRESS AND TYPE  
| ENTER'

| IS ONE OF THE ABOVE MESSAGE(S)  
| ON THE ALTERNATE CONSOLE?  
| Y N


5 5 5  
2 2 2  
C C C  
F G H

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-51

C C C THE CONSOLE FAILED  
F G H  
5 5 5 PAPER ONLY  
1 1 1  
PAGE 52 OF 56

| | |  
| | |  
| | 140  
| | YOU HAVE ASSIGNED A  
| | 'TEMPORARY' ALTERNATE CONSOLE  
| | WITH THE 'STOP ON ADDRESS'  
| | PROCEDURE.  
| | THE CONFIGURATION PROGRAM  
| | '38F0' MUST NOW BE LOADED.

| | - ENTER ON THE CONSOLE:  
| | -----  
| | B38F0 ENTER OR RETURN

| | GO TO MAP 3881,  
| | ENTRY POINT A.

| | 141  
| | GO TO MAP 3881, ENTRY POINT A.

| | 142  
| | - SEE IS THE ALTERNATE CONSOLE  
| | YOU ARE USING HAS A KEYBOARD  
| | INSTALLED ON IT.

DOES THE ALTERNATE CONSOLE YOU  
ARE USING HAVE A KEYBOARD  
INSTALLED ON IT?

Y N

| | 143  
| | THE PROGRAMMER OR C E CONSOLE  
| | IS THE CONSOLE USED BY DCP.  
| | YOU ARE USING AN ALTERNATE  
| | CONSOLE THAT DOES NOT HAVE A  
| | KEYBOARD INSTALLED ON IT.

| | DO YOU WANT TO USE THE  
| | CONFIGURATION PROGRAM?

| | Y N


5 5 5  
3 3 3  
C C C  
J K L

29JUL83 PN6060917

ECA08003 PEC336711

C C C THE CONSOLE FAILED  
J K L  
5 5 5 PAPER ONLY  
2 2 2

MAP 0023-53

PAGE 53 OF 56

| | |  
| | |  
| | 144  
| | - ENTER ON THE CONSOLE:  
| | -----  
| | (B) 1F (I)  
| | (B) 0100 (I) (I)  
| | 01 = TERMINATE  
| |  
| | THE CONFIGURATION PROGRAM  
| | WILL TERMINATE.  
| |  
| | GO TO PAGE 5, STEP 012,  
| | ENTRY POINT PP.  
| |  
| | 145  
| | - CHANGE THE CONFIGURATION  
| | TABLE IN STORAGE.  
| | GO TO MAP 3881, ENTRY POINT A.

146  
THE ALTERNATE CONSOLE YOU ARE  
USING HAS A KEYBOARD INSTALLED ON  
IT. SEE THE ACTION YOU WANT TO  
TAKE:

ENTER A NEW ATTACHMENT OR DEVICE  
ENTRY IN THE TABLE.  
REMOVE AN ATTACHMENT OR DEVICE  
ENTRY FROM THE TABLE.  
CHANGE A CONFIGURATION TABLE  
ENTRY.  
CHANGE THE ALTERNATE CONSOLE  
ASSIGNED IN THE TABLE.

DO YOU WANT TO CHANGE THE  
CONFIGURATION TABLE?

Y N  
| |  
| |  
| |  
| |  
| |  
| |  
| |  
| |

5 5  
5 4  
C C  
M N

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-53

C THE CONSOLE FAILED  
N  
5 PAPER ONLY  
3  
PAGE 54 OF 56

|  
|  
| 147  
| YOU DO NOT WANT TO CHANGE THE  
| CONFIGURATION TABLE. THE  
| ALTERNATE CONSOLE HAS A KEYBOARD.

DO YOU WANT TO CONFIGURE THE  
SYSTEM?

Y N

|  
| 148  
| - SEE IF YOU WANT TO USE THE  
| CONFIGURATION PROGRAM.

DO YOU WANT TO USE THE  
CONFIGURATION PROGRAM?

Y N

|  
| 149  
- ENTER ON THE CONSOLE:
F01 ENTER OR RETURN
01 = TERMINATE

THE PROGRAM WILL TERMINATE.  
GO TO MAP 0020,  
ENTRY POINT PD.

| 150  
- ENTER ON THE CONSOLE:
F03 ENTER OR RETURN
03 = OPTION TABLE

THE 'OPTION TABLE' WILL PRINT  
OR DISPLAY. USE MAP 3881 TO DO  
WHAT YOU WANT.  
GO TO MAP 3881, ENTRY POINT A.

5  
5  
C  
P

29JUL83 PN6060917  
ECA08003 PEC336711  
MAP 0023-54

C C THE CONSOLE FAILED  
M P  
5 5 PAPER ONLY  
3 4  
PAGE 55 OF 56

MAP 0023-55

| |  
| |  
| 151  
- ENTER ON THE CONSOLE:
F03 ENTER OR RETURN
03 = OPTION TABLE
- USE MAP 3881 TO CONFIGURE THE
SYSTEM.
GO TO MAP 3881, ENTRY POINT A.

152  
YOU WANT TO CHANGE THE  
CONFIGURATION TABLE, AND THE  
ALTERNATE CONSOLE YOU ARE USING  
HAS A KEYBOARD.

- ENTER ON THE CONSOLE:  
-----  
F03 ENTER OR RETURN  
03 = OPTION TABLE

THE 'OPTION TABLE' WILL PRINT OR  
DISPLAY.  
- USE MAP 3881 TO CHANGE THE  
CONFIGURATION TABLE.  
GO TO MAP 3881, ENTRY POINT A.

29JUL83 PN6060917

ECA08003 PEC336711

MAP 0023-55

V THE CONSOLE FAILED  
 1  
 2 PAPER ONLY

| PAGE 56 OF 56  
 |  
 |

153

THE 'COMMON I/O' ARE THE ATTACHMENT OR DEVICE CARD(S) INSTALLED IN THE SAME BOARD WITH THE TWO CHANNEL SWITCH OR ANY EXPANSION UNIT BEYOND THE TWO CHANNEL SWITCH.

IF THE ALTERNATE CONSOLE IS INSTALLED AS 'COMMON I/O', AND THE TWO CHANNEL SWITCH IS NOT CONNECTED TO THE PROCESSING UNIT, DCP CANNOT FIND THE ASSIGNED ALTERNATE CONSOLE AND IS AT A '3801' HALT. IF THE ASSIGNED ALTERNATE CONSOLE IS NOT PART OF THE 'COMMON I/O', THIS IS AN ERROR CONDITION.

IS THE ALTERNATE CONSOLE PART OF THE 'COMMON I/O'?

Y N

|  
 | 154  
 | GO TO PAGE 13, STEP 034,  
 | ENTRY POINT CN.  
 |

155

TO USE THE ALTERNATE CONSOLE IN COMMON I/O THE TWO CHANNEL SWITCH MUST BE SET TO THIS PROCESSOR. IF THIS IS NOT POSSIBLE OR YOU SUSPECT THE TWO CHANNEL SWITCH IS AT FAULT,  
 GO TO PAGE 13, STEP 034,  
 ENTRY POINT CN.

29JUL83 PN6060917

ECA08003 PEC336711