

ENTRY POINTS

FROM   ENTER THIS MAP			
MAP NUMBER	ENTRY POINT	PAGE NUMBER	STEP NUMBER
0020	A	1	001

EXIT POINTS

EXIT THIS MAP		TO	
PAGE NUMBER	STEP NUMBER	MAP NUMBER	ENTRY POINT
1	003	D872	A
2	010	D872	A
2	012	D872	A
2	014	D872	A
1	005	0020	TS
1	006	0020	TS
2	011	0020	TS
2	015	0020	TS

001  
(ENTRY POINT A)

- SEE THE NOTE -->

A 4993 370 CHANNEL ATTACHMENT IS INSTALLED ON THE SYSTEM. SEE THE 4993 TERMINATE CONSOLE.

FOR THE 4993 POWER TO BE ON:

THE POWER ON SWITCH IS ON.  
THE POWER ON LED IS ON.

CAUTION

- DO NOT USE THE 'ENABLE DISABLE' LED AS THE 'POWER ON' LED.
- SEE IF THE 4993 370 CHANNEL ATTACHMENT POWER IS ON AS NOTED.

IS THE 4993 370 CHANNEL ATTACHMENT POWER ON AS NOTED?

N

002  
- SEE IF THE 4993 370 CHANNEL ATTACHMENT SWITCH IS OFF.

IS THE 4993 370 CHANNEL ATTACHMENT SWITCH OFF?

N

003  
GO TO MAP D872, ENTRY POINT A.

004  
- SEE THE 4993 TERMINATE CONSOLE.  
- SEE THE 'ENABLE - DISABLE' SWITCH.

IS THE CONSOLE SWITCH IN 'DISABLE'?

N

005  
THE CONSOLE SWITCH IS IN 'ENABLE'.  
- SET THE CONSOLE SWITCH TO 'DISABLE'.

THE 4993 POWER IS OFF.  
THE CONSOLE SWITCH IS IN 'DISABLE'.

WHEN THE MAP(S) INSTRUCT YOU TO 'POWER ON' THE SYSTEM, DO NOT 'POWER ON' THE 4993. THE ONLY MAP(S) THAT CAN INSTRUCT YOU TO POWER ON THE 4993 IS THE 'D8XX' MAP(S). GO TO MAP 0020, ENTRY POINT TS.

006  
THE 4993 POWER IS OFF.  
THE CONSOLE SWITCH IS IN 'DISABLE'.

WHEN THE MAP(S) INSTRUCT YOU TO 'POWER ON' THE SYSTEM, DO NOT 'POWER ON' THE 4993. THE ONLY MAP(S) THAT CAN INSTRUCT YOU TO POWER ON THE 4993 IS THE 'D8XX' MAP(S). GO TO MAP 0020, ENTRY POINT TS.

007  
- SEE THE 4993 TERMINATE CONSOLE.  
- SEE THE 'ENABLE - DISABLE' SWITCH.

IS THE CONSOLE SWITCH IN 'DISABLE'?

N

NOTE

SEE IF THE SWITCH IS IN ENABLE OR DISABLE POSITION, NOTE THE POSITION. WHEN THE REPAIR IS COMPLETE, THE ENABLE/DISABLE SWITCH MUST BE RETURNED TO THIS POSITION.

A B  
1 1

370 CHANNEL ATTACHMENT  
PAPER ONLY MAP  
PAGE 2 OF 2

MAP 0029-2

008  
THE CONSOLE SWITCH IS IN 'ENABLE'.  
- SEE THE 4993 TERMINATE CONSOLE.  
IS THE 'DISABLE' LED 'ON'?  
N  
009  
- SET THE SWITCH TO 'DISABLE'.  
- SEE THE CUSTOMER FOR THE AMOUNT OF TIME  
NEEDED FOR THE 370 TO DISABLE THE SERIES  
- WAIT FOR THE 'DISABLE' LED TO GO ON.  
IS THE 'DISABLE' LED 'ON'?  
N  
010  
THE SWITCH IS IN 'DISABLE', AND THE  
'DISABLE' LED IS OFF.  
GO TO MAP D872, ENTRY POINT A.  
011  
THE 370 CHANNEL ATTACHMENT IS OFF LINE.  
- POWER OFF THE 4993.  
WHEN THE MAP(S) INSTRUCT YOU TO 'POWER ON'  
THE SYSTEM, DO NOT 'POWER ON' THE 4993.  
THE ONLY MAP(S) THAT CAN INSTRUCT YOU TO  
POWER ON THE 4993 IS THE 'D8XX' MAP(S).  
GO TO MAP 0020, ENTRY POINT TS.  
012  
THE SWITCH IS IN 'ENABLE', AND THE 'DISABLE'  
LED IS ON.  
GO TO MAP D872, ENTRY POINT A.  
013  
- SEE THE 4993 TERMINATE CONSOLE.  
IS THE 'DISABLE' LED 'ON'?  
N  
014  
THE SWITCH IS IN 'DISABLE', AND THE  
'DISABLE' LED IS OFF.  
GO TO MAP D872, ENTRY POINT A.  
015  
THE 370 CHANNEL ATTACHMENT IS OFF LINE.  
- POWER OFF THE 4993.  
WHEN THE MAP(S) INSTRUCT YOU TO 'POWER ON' THE  
SYSTEM, DO NOT 'POWER ON' THE 4993.  
THE ONLY MAP(S) THAT CAN INSTRUCT YOU TO POWER  
ON THE 4993 IS THE 'D8XX' MAP(S).  
GO TO MAP 0020, ENTRY POINT TS.

20NOV81 PN6060921  
EC466795 PEC466794  
MAP 0029-2