

Xerox Corporation  
701 South Aviation Boulevard  
El Segundo, California 90245  
213 679-4511

**XEROX**

# **Xerox Control Program-Five (CP-V)**

**Sigma 6/7/9 Computers**

**Time-Sharing**

**User's Guide**

90 16 92D

June 1973

Price: \$4.50

## REVISION

This publication documents the first release (A00 version) of Control Program-Five (CP-V). Because CP-V is an outgrowth of UTS, the publication is a revision of the Xerox Universal Time-Sharing System (UTS)/TS User's Guide, Publication Number 90 16 92C (dated December 1972). A change in text from that of the previous manual is indicated by a vertical line in the margin of the page.

## RELATED PUBLICATIONS

<u>Title</u>	<u>Publication No.</u>
Xerox Sigma 6 Computer/Reference Manual	90 17 13
Xerox Sigma 7 Computer/Reference Manual	90 09 50
Xerox Sigma 9 Computer/Reference Manual	90 17 33
Xerox Control Program-Five (CP-V)/TS Reference Manual	90 09 07
Xerox Control Program-Five (CP-V)/SM Reference Manual	90 16 74
Xerox Control Program-Five (CP-V)/OPS Reference Manual	90 16 75
Xerox Control Program-Five (CP-V)/BP Reference Manual	90 17 64
Xerox Control Program-Five (CP-V)/RP Reference Manual	90 30 26
Xerox EASY/LN,OPS Reference Manual	90 18 73
Xerox Meta-Symbol/LN,OPS Reference Manual	90 09 52
Xerox BASIC/LN,OPS Reference Manual	90 15 46
Xerox APL/LN,OPS Reference Manual	90 19 31
Xerox Sort-Merge/Reference Manual	90 11 99
Xerox Manage/Reference Manual	90 16 10
Xerox FORTRAN Debug Package (FDP)/Reference Manual	90 16 77
Xerox Extended FORTRAN IV/LN Reference Manual	90 09 56
Xerox Extended FORTRAN IV/OPS Reference Manual	90 11 43
Xerox FLAG/Reference Manual	90 16 54
Xerox ANS COBOL/LN Reference Manual	90 15 00
Xerox ANS COBOL/OPS Reference Manual	90 15 01
Xerox 1400 Series Simulator/Reference Manual	90 15 02

Manual Content Codes: BP – batch processing, LN – language, OPS – operations, RP – remote processing, RT – real-time, SM – system management, TS – time-sharing, UT – utilities.

The specifications of the software system described in this publication are subject to change without notice. The availability or performance of some features may depend on a specific configuration of equipment such as additional tape units or larger memory. Customers should consult their Xerox sales representative for details.

# CONTENTS

PREFACE	vi	6. LOADING AND EXECUTING OBJECT PROGRAMS	57
COMMAND SYNTAX NOTATION	vii	LINK Processor	57
1. INTRODUCTION	1	RUN Command	57
Control Program-Five	1	LINK Command	58
Scope of this Manual	1	START Command	59
Terminal Executive Language	1	7. DEBUGGING USER PROGRAMS	61
2. LOGGING ON AND OFF	4	Assembly Language Debugging (Delta)	61
Dialing the Computer	4	Executing in Debug Mode	61
Logging On and Off	4	Using Delta in Nondebug Mode	63
PASSWORD Command	6	Using Delta to Write Programs	65
3. TERMINAL INTERFACE	9	FORTRAN Debugging (FDP)	66
Introduction	9	8. EXECUTING USER PROGRAMS	72
Editing of Terminal Input	9	9. GETTING IN AND OUT OF PROCESSORS	76
TERMINAL Command	10	General	76
PLATEN Command	10	BREAK, CONTROL Y, ESC Y, and ESC ESC	76
TABS Command	13	QUIT and CONTINUE Commands	78
4. MANIPULATING FILES	15	Program Aborts	80
Files in CP-V	15	10. ASSIGNING DCBs	82
Edit	17	Data Control Blocks	82
How Edit Works	17	Means of File/Device Assignment	82
File Editing Commands	17	Standard System DCBs	82
Record Editing Commands	18	Assign/Merge Table	83
Intrarecord Command Usage	26	OUTPUT, LIST, and COMMENT Commands	83
TEL Editing Commands vs. Edit Commands	29	SET Command	85
PCL	29	General Usage Rules	87
PCL Commands	30	BASIC Processor Requirements	88
5. USING LANGUAGE PROCESSORS	36	11. CONTROLLING OUTPUT	89
Introduction	36	General	89
BASIC	36	Discontinuing and Resuming Standard	89
Program Building, Editing, and Execution	36	Outputs	89
Program Saving, Loading, and Renaming	38	PRINT Command	91
Additional Editing Facilities	39	12. SAVING/RESTORING CORE IMAGES AND FILES	92
Temporary Saving, Renaming, and Renumbering of Current Program	40	General	92
Direct Statement Execution and Desk-Calculator Mode	42	SAVE and GET Commands	92
Abbreviations of BASIC Command Verbs	44	BACKUP Command	95
FORTRAN IV (FORT4)	45	COPYALL and COPY Commands	96
Controlling the Compilation Process	45	Saving on Tape	96
COBOL	49		
Meta-Symbol (META)	51		
APL	53		

13. SUBMITTING BATCH JOBS	99
BATCH Command _____	99
CANCEL Command _____	100
JOB Command _____	100
14. COMMUNICATION WITH THE OPERATOR	101
MESSAGE Command _____	101
Messages from the Operator _____	101
INDEX	119

## APPENDIXES

A. TEL COMMAND SUMMARY	103
B. FILE IDENTIFIERS AND THEIR PARTS	108
C. SET COMMAND CODES	109
D. LINK AND RUN COMMAND CODES	112
E. SPECIAL TERMINAL KEYS	113
F. USE OF THE 2741 TERMINAL	114
Control Characters _____	114
Logging On _____	115
Suppressing Lowercase Letters _____	115
Correcting Typing Errors _____	116
Using Tabulation _____	117

## FIGURES

1. Teletype Keyboard _____	3
2. Typical Dialing Unit _____	4

## TABLES

A-1. TEL Command Summary _____	103
B-1. File Identifiers and Their Parts _____	108
C-1. DCB Assignment Codes – SET Command _____	109
C-2. Device Options – SET Command _____	109
C-3. File Options – SET Command _____	110
D-1. Library Search Codes _____	112
D-2. Error Displays _____	112
E-1. Special Terminal Keys _____	113
F-1. Summary of Differences between 2741 and Teletype Services _____	114

## EXAMPLES

1. Logging On and Off _____	5
2. Logging On with a Wrong Account Number _____	6
3. Inability to Log On Due to Error in Logon File _____	6
4. Setting a Password _____	7
5. Logging On with Password and then Cancelling Password _____	7
6. Setting a Password and Suppressing Its Printing _____	8
7. Making Corrections to TEL Commands _____	9
8. Use of TERMINAL Command _____	10
9. Using PLATEN Command to Change Page Width _____	11
10. Using PLATEN Command to Change Page Length _____	12
11. Using the TABS Command _____	13
12. Using EDIT to Build and Display a Source File _____	18
13. Using EDIT to Modify a Source File _____	20
14. Using String-Search Commands and Local- Carriage-Return _____	25
15. Using Intrarecord Commands _____	27
16. Keyed-File Update and Display, Using PCL COPY _____	31
17. Keyed-File Update and Display (Further Examples) _____	33
18. Building and Concatenating Unkeyed Files _____	34
19. BASIC Program Building, Editing, and Execution _____	37
20. Program Modification, Saving, and Reloading _____	39
21. Temporary Filing, Reloading, and Renaming _____	41
22. Use of Direct Statements – "Desk-Calculator Mode" _____	43
23. Using the EXECUTE Command _____	44
24. Compiling and Executing FORTRAN Input from a File _____	46
25. Submitting Terminal Input for FORTRAN Compilation _____	48
26. Building and Executing a COBOL Program _____	50
27. Using META to Assemble Terminal Input _____	52
28. Using APL in the Desk Calculator Mode _____	53
29. Using APL in the Function Definition and Function Editing Modes _____	54
30. Using the RUN Command _____	57
31. Using the LINK Command _____	59

32. Using the START Command _____	59	44. Setting DCB Assignments and Parameters with the SET Command _____	87
33. Assembling and Loading in the Debug Mode _____	62	45. Discontinuing and Resuming Output by OUTPUT, LIST, and COMMENT Commands _____	89
34. Calling Delta after Assembling and Executing in Nondebug Mode _____	63	46. Causing Printer or Punch Output to be Queued by Issuing a PRINT Command _____	91
35. Using Delta to Write a Program _____	65	47. Saving a Core Image of a Program (SAVE Command) _____	92
36. Use of FDP ON and PRINT Commands _____	67	48. Restoring a Checkpointed Program (GET Command) _____	95
37. Further Uses of FDP Commands _____	69	49. Saving a File on the Standard System Backup Tape _____	95
38. Using Load-Module-Name as Command Verb (Meta-Symbol Program) _____	73	50. Transfer of All Files in User's Account to Labeled Tape _____	96
39. Using Load-Module-Name as Command Verb (FORTRAN Program) _____	74	51. Submitting a Job via BATCH Subsystem for Execution _____	99
40. Using CONTROL Y and the BREAK Key _____	76	52. Using the JOB Command _____	100
41. Interrupting, Continuing, and Quitting Execution _____	78	53. Sending a Message to the Operator _____	101
42. System Handling of an Abort during Execution _____	80	54. Receiving a Message from the Operator _____	101
43. Controlling the Destination of Processor Output _____	83		

# PREFACE

This manual describes how to use the various time-sharing features of CP-V. It presents an introductory subset of the features in a format that allows the user to learn the material by using the features at a terminal as he reads through the manual. A closely related manual, the CP-V Time-Sharing Reference Manual, 90 09 07, is the principal source of information for the time-sharing features of CP-V. It defines the rules for using the Terminal Executive Language and other on-line processors.

Manuals describing other features of CP-V are outlined below:

- The CP-V Batch Reference Manual, 90 17 64, is the principal source of reference information for the batch processing features of CP-V (i.e., job control commands, system procedures, I/O procedures, program loading and execution, debugging aids, and service processors).
- The CP-V Remote Processing Reference Manual, 90 30 26, is the principal source of information about the remote processing features of CP-V. All information about remote processing for all computer personnel (on-line and batch users, system managers, remote site operators, and central site operators) is included in the manual.
- The CP-V System Management Reference Manual, 90 16 74, is the principal source of reference information for the system management features of CP-V. It defines the rules for selecting hardware for a CP-V system, generating a CP-V system, authorizing users, maintaining user accounting records, monitoring system performance, and other related functions.
- The CP-V Operations Reference Manual, 90 16 75, is the principal source of reference information for CP-V computer operators. It defines the rules for operator communication (i.e., key-ins and messages), system start-up and initialization, job and system control, peripheral device handling, recovery and file preservation.

Information for the language and application processors that operate under CP-V is also described in separate manuals. These manuals are listed on the Related Publications page of this manual.

# COMMAND SYNTAX NOTATION

Notation conventions used in command specifications and examples throughout this manual are listed below.

Notation	Description
lowercase letters	Lowercase letters identify an element that must be replaced with a user-selected value.  CRn <sub>dd</sub> could be entered as CRA03.
CAPITAL LETTERS	Capital letters must be entered as shown for input, and will be printed as shown in output.  DPn <sub>dd</sub> means "enter DP followed by the values for n <sub>dd</sub> ".
[ ]	An element inside brackets is optional. Several elements placed one under the other inside a pair of brackets means that the user may select any one or none of those elements.  [KEYM] means the term "KEYM" may be entered.
{ }	Elements placed one under the other inside a pair of braces identify a required choice.  { A id } means that either the letter A or the value of id must be entered.
...	The horizontal ellipsis indicates that a previous bracketed element may be repeated, or that elements have been omitted.  name [,name]... means that one or more name values may be entered, with a comma inserted between each name value.
:	The vertical ellipsis indicates that commands or instructions have been omitted.  MASK 2 DATA, 2 X'1EF' : BYTE DATA, 3 BA(L59) means that there are one or more statements omitted between the two DATA directives.
Numbers and special characters	Numbers that appear on the line (i.e., not subscripts), special symbols, and punctuation marks other than dotted lines, brackets, braces, and underlines appear as shown in output messages and must be entered as shown when input.  (value) means that the proper value must be entered enclosed in parentheses; e.g., (234).
Subscripts	Subscripts indicate a first, second, etc., representation of a parameter that has a different value for each occurrence.  sysid <sub>1</sub> , sysid <sub>2</sub> , sysid <sub>3</sub> means that three successive values for sysid should be entered, separated by commas.
Superscripts	Superscripts indicate shift keys to be used in combination with terminal keys. c is control shift, and s is case shift.  L <sup>CS</sup> means press the control and case shift (CONTROL and SHIFT) and the L key.
Underscore	All terminal output is underscored; terminal input is not.  <u>!RUN</u> means that the exclamation point was sent to the terminal, but RUN was typed by the terminal user.
Ⓞ Ⓡ Ⓛ	These symbols indicate that an ESC (Ⓞ), carriage return (Ⓡ), or line feed (Ⓛ) character has been sent.  <u>!EDIT</u> Ⓡ means that, after typing EDIT, a carriage return character has been sent.





# 1. INTRODUCTION

## CONTROL PROGRAM-FIVE

Control Program-Five (CP-V) is a general purpose system that operates on a Sigma 6, 7, or 9 computer and a variety of peripheral devices. The current release provides for three concurrent modes of operation:

- Time-sharing.
- Multiprogrammed batch processing.
- Remote processing.

Two additional modes of operation (real-time and transaction processing) will be available in the near future.

## SCOPE OF THIS MANUAL

This manual is designed as a simple guide for using CP-V in time-sharing mode only. It is not intended as a guide to "sophisticated" usage, nor as a complete reference to TEL and other processors. Please refer to CP-V/TS Reference Manual, 90 09 07, and applicable language reference manuals for complete command forms and descriptions. However, Appendix A of this manual presents a summary of TEL commands in reference format.

The command formats shown in the text are not necessarily complete, as for example in the case of PCL COPY. Only the more commonly used forms are given and explained. Also, knowledge of the programming languages available under CP-V is required for full understanding of this manual.

The examples throughout this manual are written for Teletype<sup>®</sup> terminals. 2741 terminal users should read Appendix F, "Use of the 2741 Terminal", before reading further in the manual.

## TERMINAL EXECUTIVE LANGUAGE

The Terminal Executive Language (TEL) is the on-line command language for CP-V, a concise natural language for performing on-line functions and calling on-line processors. It also provides information services, such as accounting charges and status of available system resources.

Functions performed directly by TEL commands include

- Building a file.
- Initiating a processor.
- Loading and executing a program.
- Quitting or continuing an interrupted processor.
- Copying a file.
- Deleting a file.
- Controlling output.
- Setting DCB assignments.
- Submitting batch jobs.
- Checking the status of batch jobs.
- Saving and restoring files.
- Queuing output for symbiont devices.

---

<sup>®</sup> Registered trademark of the Teletype Corporation.

- Setting tab stops for terminal I/O.
- Controlling the terminal interface (e.g., page width and length).
- Setting the log-on password.
- Communicating with the operator.

On-line processors available to the user through TEL include

COBOL	ANS COBOL.
FORT4	Extended version of FORTRAN IV.
META	Assembler with powerful procedure (macro) capability: Meta-Symbol.
BASIC	Processor for creating, executing, and maintaining programs written in a simple mathematical language.
APL	Processor for interactive problem solving with a minimum of programming effort.
FLAG	Fast "load and go" FORTRAN compiler.
EDIT	Line/text editor.
PCL	Language for copying and deleting files, listing directories, and manipulating tapes.
DELTA	Debugging processor used primarily for assembly-language programs.
FDP	Debugging package for FORTRAN programs.
LINK	Subsystem that constructs an executable program (load module) from object-program modules.
BATCH	Subsystem that submits a batch job file to the batch job stream.

Processors are usually called explicitly by name but may also be called implicitly by the following TEL commands:

BUILD	Calls Edit to build a file.
COPY	Uses PCL to copy files.
RUN	Uses Link to link a program and causes the program to be loaded and executed.

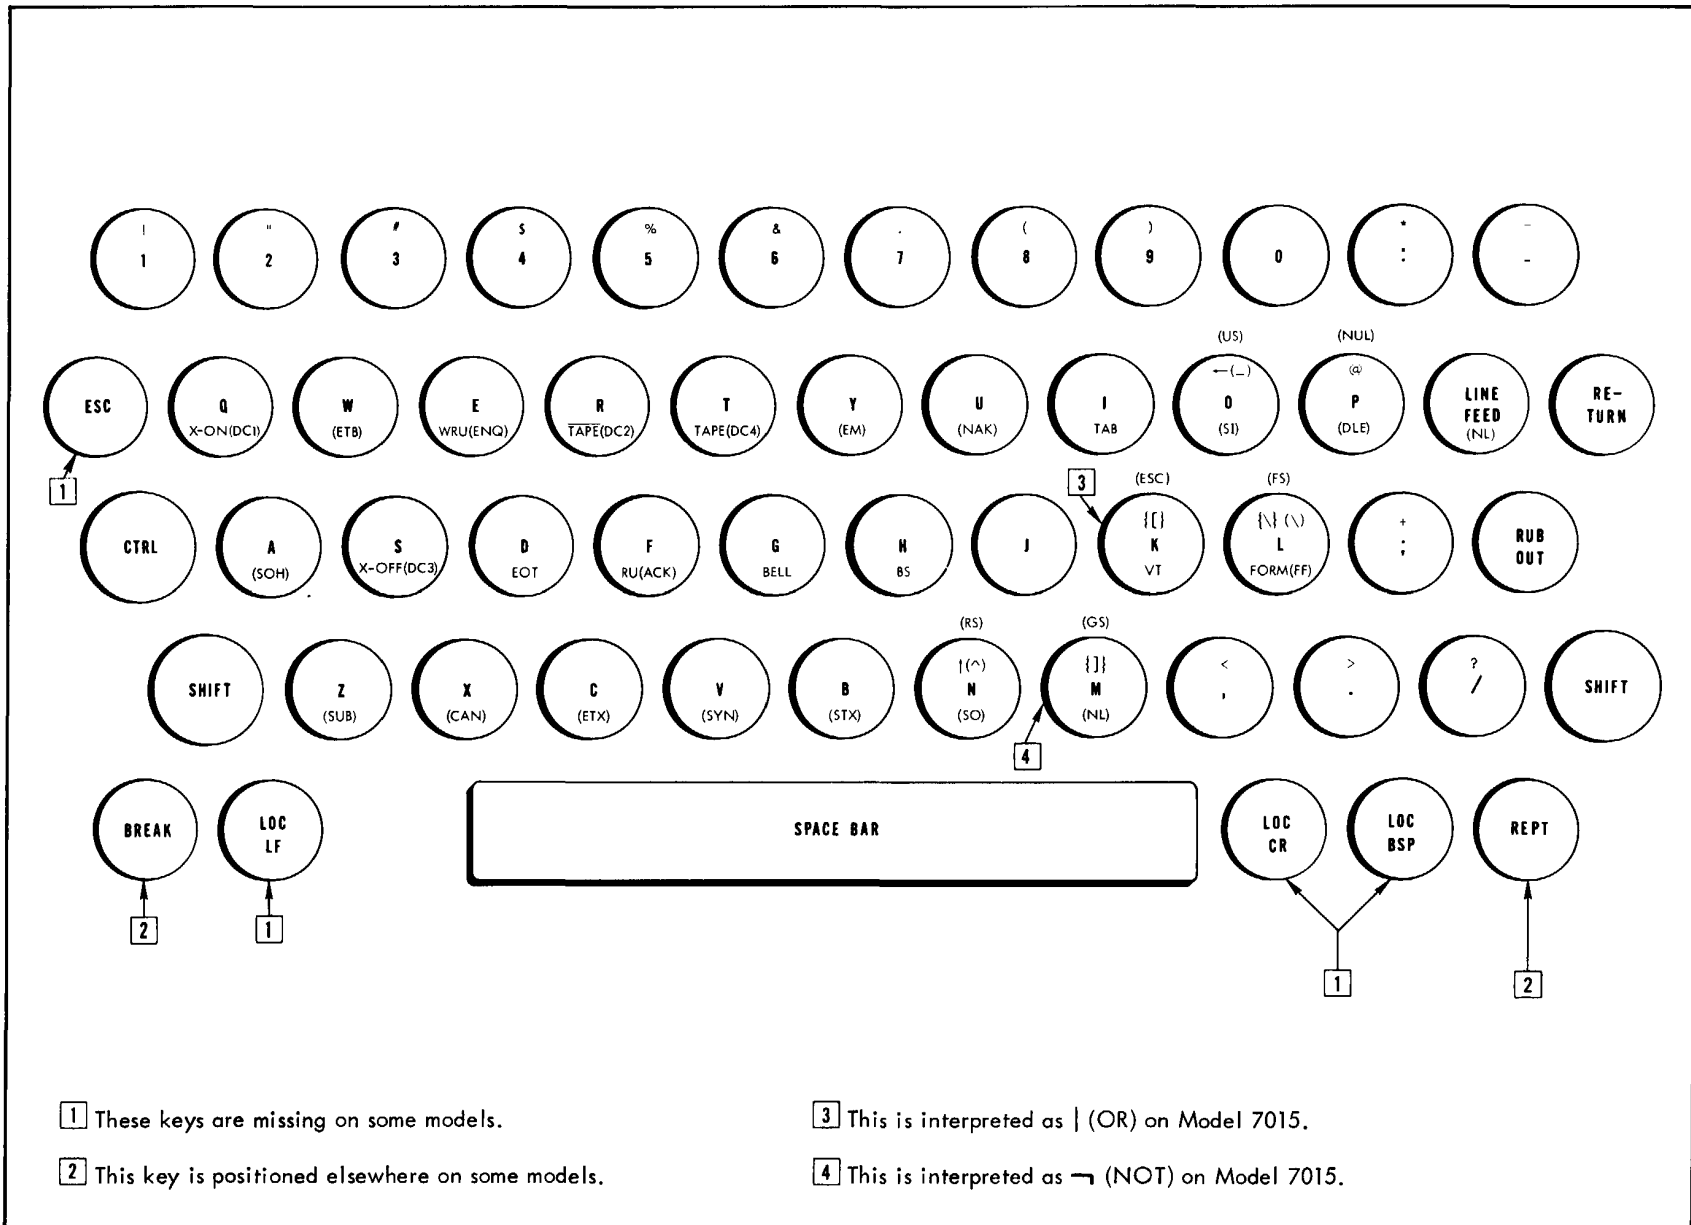


Figure 1. Teletype Keyboard

## 2. LOGGING ON AND OFF

### DIALING THE COMPUTER

To establish connection with the computer, proceed as follows:

1. Turn on power switch for terminal and for acoustical coupler (or "modem"), as necessary.
2. Pick up telephone handset, wait for dial tone, and dial computer. A high-pitched tone will be heard if a communication line is available.
3. Place handset on acoustic coupler (see Figure 2).

TEL (Terminal Executive Language) now responds with the following message:

XEROX CP-V AT YOUR SERVICE

ON AT (time and date)

LOGON PLEASE:

You can now log onto the system (provided you have been enrolled on the system by the system manager).

### LOGGING ON AND OFF

To log on, you must have an account number, a name, and possibly a password. The account is your billing number and the name is your personal or group identification. Both are assigned by the system manager. Password is an account-protection feature that is assigned either by the system manager or by yourself (see PASSWORD Command, below). It can be modified periodically for security purposes.

Upon receipt of the message LOGON PLEASE:, enter your account, name, and password, in that order, separated by commas. The password and preceding comma are omitted if no password has been assigned.



Figure 2. Typical Dialing Unit

Account number and password may each be from one to eight characters in length. The name may consist of one to 12 characters.

The allowable characters for names, accounts, and passwords are

A-Z a-z 0-9 ← \$ \* % ; # @ -

The graphic representation of certain special characters, such as the left arrow, is terminal-device dependent, as is the availability of the lowercase alphabets. The character set shown above should be regarded as representative only in this respect.

For terminals operated in full-duplex mode, character echoing by the system is normally on but can be turned off (e.g., to suppress printing of passwords or other security-related information) by striking the Ⓢ E keys. Striking the Ⓢ E keys a second time turns echoing back on. For terminal units operated in half-duplex mode, character echoing by the system must be turned off, as above, to suppress duplicate printing of characters.

It may not always be possible to log on. If an error prevents the reading of the logon file, the message UNRECOVERABLE I/O ON RAD, or ABNORMAL ERROR ON LOGON FILE will be typed. Whenever you are unable to log on, start over by striking the BREAK key and try again. The system tries five times to log you on before dismissing you.

If a MAILBOX file (a message file) exists at log-on time, the message CHECK DC/MAILBOX will appear. You may examine this MAILBOX file by copying it to your terminal as follows:

! COPY MAILBOX

(The underscored exclamation mark is the "prompt character" issued by TEL.)

Example 1. Logging On and Off.

<u>XEROX CP-V AT YOUR SERVICE</u>	The user dials the computer.
<u>ON AT 12:30 MAR 12, '71</u>	The system identifies itself, states the time and date, and requests that the user log on.
<u>LOGON PLEASE: 2232,HALL Ⓢ</u>	In response, the user types in his account number (2232) and name (HALL). He does not use a password because the system manager has not assigned him one.
<u>12:30 03/12/71 2232 15-9 [1]</u>	A page heading is printed by the system; the items of information in the heading are, in order: time, date, account number, two internal identifiers, and page number (enclosed in square brackets).
<u>!OFF Ⓢ</u>	The Terminal Executive types its prompt character (!) indicating that the system is ready to process a TEL command. Since this was just an experiment for the user, he logs off.
<u>CPU = .0124 CON = :01 INT = 2 CHG = 10</u>	Summary of accounting information for session.

In Example 1, the user used .0124 minutes of central processor time (CPU = .0124); he was connected to the terminal (from dialing up to end of accounting summary) .01 hour (CON = :01); he interacted with the system twice (INT = 2), logging on and the OFF command. His charge was 10 charge units, an installation-dependent value.

### Example 2. Logging On with a Wrong Account Number

XEROX CP-V AT YOUR SERVICE

The user dials the computer.

ON AT 02:30 MAR 12, '71

LOGON PLEASE: 223L,HALL (RT)

He types in the right name but the wrong account number.

ACCOUNT/ID 223L/HALL ?

The system questions the incorrect account number, and asks the user to log on again, which he does.

LOGON PLEASE: 2232,HALL (RT)

-page heading-

!OFF (RT)

He then logs off.

-accounting summary-

### Example 3. Inability to Log On Due to Error in Logon File

XEROX CP-V AT YOUR SERVICE

ON AT 12:42 MAR 17, '71

LOGON PLEASE: C37-105,HALL (RT)

The user tries to log on.

ABNORMAL ERROR ON LOGON FILE

SORRY,UNABLE TO LOG YOU ON

The system cannot log him on and so informs him.

CPU = .0024 CON = :01 INT = 1 CHG = 10

The accounting summary is presented.

XEROX CP-V AT YOUR SERVICE

The system repeats its logon sequence.

ON AT 12:43 MAR 17, '71

LOGON PLEASE: C37-105,HALL (RT)

This time the user's logon is accepted.

-page heading-

!OFF (RT)

He now logs off.

CPU = .0024 CON = :01 INT = 2 CHG = 15

## PASSWORD COMMAND

The purpose of the logon password is to protect your resources and files by preventing illicit use of your name and account number. The PASSWORD command allows you to change your password frequently to make it difficult for anyone else to know what it is. You can also use the command to cancel your password if you wish.

It is important to remember your password because only the system manager is able to recover it for you if you do not remember it.

Example 4. Setting a Password

XEROX CP-V AT YOUR SERVICE

ON AT 12:49 MAR 17, '71

LOGON PLEASE: 2232,HALL (M)

The user logs on, with no password set.

!PASSWORD SECRET (M)

PASSWORD CHANGE SUCCESSFUL

The Terminal Executive types its prompt character (!) indicating it is ready to process a TEL command. The user sets his password to SECRET and must now use it whenever logging on until he or the system manager changes it.

-page heading-

!OFF (M)

The Terminal Executive types its prompt character and the user logs off. Password SECRET remains set.

-accounting summary-

Example 5. Logging On with Password and then Cancelling Password

XEROX CP-V AT YOUR SERVICE

ON AT 14:45 MAR 17, '71

LOGON PLEASE: 2232,HALL (M)

The user logs on but forgets to use his new password.

PASSWORD ?

The system indicates that the password was not entered.

LOGON PLEASE: 2232,HALL,SECRET (M)

The user logs on with an incorrect password.

PASSWORD ?

The system indicates that the password is invalid.

LOGON PLEASE: 2232,HALL,SECRET (M)

The user now logs on with the correct password.

-page heading-

!PASSWORD (M)

He cancels his password by typing the PASSWORD command and specifying no password.

PASSWORD CHANGE SUCCESSFUL

!OFF (M)

He then logs off. Next time he logs on, no password will be required.

-accounting summary-

Example 6. Setting a Password and Suppressing Its Printing

XEROX CP-V AT YOUR SERVICE

ON AT 09:05 MAR 20, '71

LOGON PLEASE: 2232,HALL (RET)

The user logs on.

-page heading-

!PASSWORD (ESC) E (ESC) E (RET)

The Terminal Executive types its prompt character (!) indicating it is ready to process a TEL command. The user sets his password but suppresses its printing by typing (ESC) E before the password (the first E is not actually echoed), then turns echoing on again. He must now use the password he has just set whenever logging on, until he or the system manager changes it. Any sequence of 1-8 permissible characters may be used as a password.

PASSWORD CHANGE SUCCESSFUL

!OFF (RET)

The Terminal Executive types its prompt character indicating it is again ready for a TEL command. The user logs off. The next time he logs on, he must use the password just set.

-accounting summary-



### 3. TERMINAL INTERFACE

#### INTRODUCTION

This chapter describes methods for correcting, modifying, and deleting terminal input and the use of the TERMINAL, PLATEN, and TABS commands.

#### EDITING OF TERMINAL INPUT

A line of terminal input may be corrected, modified, or deleted, before the line is released to the system (with  $\text{Ⓚ}$ ). This may be done by way of either character or line deletion:

1. Editing by Character Deletion: On detecting a typing error within a few characters of the point of error, you may delete the last characters typed by typing a corresponding number of rubout  $\text{Ⓚ}$  characters (echoed with a \ character), and continuing the line from the (deleted) point of error. (Any n successive  $\text{Ⓚ}$  characters effectively delete the n successive characters immediately preceding the first  $\text{Ⓚ}$  character.)
2. Editing by Line Deletion: To delete a complete line of input – before giving a carriage return, strike the ESCAPE and X keys or simultaneously depress the CONTROL and X keys ( $\text{ⓀX}$  or  $\text{X}^{\text{C}}$  in conventional notation). The system responds with a ← (left arrow), effectively deletes the line, gives a carriage-return/line-feed, and positions the carriage to the beginning of input. (The previous prompt character, if any, is not repeated.) The input can then be repeated in correct form. The  $\text{X}^{\text{C}}$  command will delete not only the current input line, but all lines typed ahead and all pending output.

These editing features apply to any untransmitted line of terminal input, under TEL or any other processor except Delta.

Example 7. Making Corrections to TEL Commands

```
XEROX CP-V AT YOUR SERVICE  
ON AT 15:30 MAR 22, '71  
LOGON PLEASE: 2232,HALK\L  $\text{Ⓚ}$ 
```

While logging on, the user hits a K instead of an L. To delete K, he strikes the rubout key which echoes back to the terminal as a backslash. Then he types L and completes the logon sequence. (Note that the characters printed at the terminal are those echoed back to the terminal and are not necessarily the same ones typed, as for example \ for  $\text{Ⓚ}$ .)

- page heading -

```
!QASSWORD Y07 XC±
```

The user then types in a password command but notices an error (password misspelled) before striking the carriage return key. Instead he depresses CONTROL and X simultaneously, which the system echoes back as a left arrow (or possibly an underline). This causes the line to be cancelled and a carriage return.

```
PASTWO\\SWORD Y07  $\text{Ⓚ}$ 
```

```
PASSWORD CHANGE SUCCESSFUL
```

The user notices still another error. This time he deletes three characters and then completes the command successfully. Note that prompt character (!) is not repeated.

```
!OFF  $\text{Ⓚ}$ 
```

He then logs off.

- accounting summary -

## TERMINAL COMMAND

The TERMINAL command is used to inform the system of the type of terminal used, and is required only if the terminal differs from a type of terminal unit specified as standard by the system. (This information can be obtained from the installation manager.)

Format:

```
TERMINAL tc
```

where tc is an alphanumeric terminal code:

33 for Teletype Model 33

35 for Teletype Model 35

37 for Teletype Model 37

7015 for Xerox 7015 Keyboard Printer.

(Additional terminal codes will become applicable as more types of terminal units are added to the system's capabilities.)

Example 8. Use of TERMINAL Command

```
XEROX CP-V AT YOUR SERVICE  
ON AT 11:45 MAR 23, '71  
LOGON PLEASE: 2232,HALL,Y07
```

- page heading -

```
!TERMINAL 37 (H)
```

Indicates a Model 37 Teletype. The system will use this information to modify response to input/output for different types of terminals, as necessary. For the rest of the session, the Monitor recognizes the terminal as a Model 37 Teletype.

⋮

```
!OFF (H)
```

- accounting summary -

## PLATEN COMMAND

The PLATEN command can be used to change the page width and/or page length for terminal input and output. The format of the command is:

```
PLATEN [w][,l]
```

where

w is the maximum number of characters to be written per line on the terminal. If more than w characters are written, a line feed and carriage return character sequence is inserted to break up the output into segments no longer than specified by w. If w is 11 or less, no line feed and carriage return sequence is supplied. In this case, the width of the line is limited only by the physical constraints of the device on which the line is produced (up to a maximum of 140 characters). If the w field is omitted, the current width setting is retained.

l is the number of lines per page of terminal output and must be within the range 0-256. If the l field is omitted, then the number of lines per page remains unchanged. If l is set to 11 or less, no heading is produced and the page length is unlimited.

The default case when a user logs on is equivalent to PLATEN 0,0. This means that no line feed and carriage return sequence is supplied, that no heading is produced, and that the page length is unlimited.

Example 9 shows how PLATEN can be used to change page width. The example contains four job steps, i.e., major functions during a session that cause the invoking of processors such as EDIT, PCL, or META.

#### Example 9. Using PLATEN Command to Change Page Width

XEROX CP-V AT YOUR SERVICE

ON AT 17:24 APR 15, '71

LOGON PLEASE: 14777,HALL (RET)

17:24 04/15/71 14777 23-7 [1]

!BUILD TEST1 (RET)

1.000 1234567890123456789012345678901234567890 (RET)

2.000 (RET)

The user enters the BUILD command to build file TEST1. File building is described in detail in Chapter 4. (This is the first job step of the session.) The (RET) alone on line 2.000 terminates the build operation and control returns to TEL.

!PLATEN 20 (RET)

The page width is set to 20.

!COPY TEST1 TO ME (RET)

12345678901234567890

12345678901234567890

File TEST1 is printed at the terminal. The page width is now 20. (The COPY command, which implicitly invokes the PCL processor, is the second job step.)

!PLATEN 39 (RET)

The page width is set to 39.

!COPY TEST1 (RET)

123456789012345678901234567890123456789

0

File TEST1 is printed again but with 39 characters per line. (This COPY constitutes a third job step. Note that the output specification TO ME is omitted. PCL assumes ME as a destination device by default.)

!PLATEN 12 (RET)

The page width is set to 12.

!COPY TEST1 (RET)

123456789012

345678901234

567890123456

7890

File TEST1 is printed again but now has 12 characters per line. (This is the fourth and last job step.)

!OFF (RET)

The user logs off. Note that the last PLATEN command is still in effect. (However, the page width and length is always set to the default case, equivalent to PLATEN 0,0, when a user logs on.)

CPU = .0097

CON= :03 INT

= 13 CHG =

42

Example 10 shows how PLATEN is used to change page length. (This example also contains four job steps.) Note that the page-length specification refers to the number of single-spaced lines in the body of the page, i.e., excluding top-of-page heading and spacing. Each line of double-spaced output, where double spacing occurs, counts as two lines. Therefore, if n double-spaced print lines are desired, the page-length must be specified as nx2. Occasionally, only n-1 lines, or less, will be printed due to various circumstances, e.g., an intervening single-spaced command line.

Example 10. Using PLATEN Command to Change Page Length

```
XEROX CP-V AT YOUR SERVICE
ON AT 17:29 APR 15, '71
LOGON PLEASE: 14777,HALL (RET)
17:30 04/15/71 14777      21-9[1]
```

```
!BUILD TEST2 (RET)
  1.000 1 (RET)
  2.000 2 (RET)
  3.000 3 (RET)
  4.000 4 (RET)
  5.000 5 (RET)
  6.000 6 (RET)
  7.000 7 (RET)
  8.000 8 (RET)
  9.000 9 (RET)
 10.000 10 (RET)
 11.000 11 (RET)
 12.000 12 (RET)
 13.000 13 (RET)
 14.000 14 (RET)
 15.000 15 (RET)
 16.000 (RET)
```

The user builds file TEST2. (The (RET) alone on line 16.000 terminates the build operation and control returns to TEL.)

```
!PLATEN 72,12 (RET)
```

The PLATEN command sets page width to 72 characters and the length to 12 lines.

```
17:30 04/15/71 14777 HALL 21-9[2]
```

The system prints the second page heading, on overflow of newly set page length.

```
!COPY TEST2 TO ME (RET)
 1
 2
 3
 4
 5
 6
 7
 8
 9
10
11
```

A copy of file TEST2 is printed at the terminal.

```
17:31 04/15/71 14777      21-9[3]
```

The third page heading prints.

12  
13  
14  
15

!OFF <sup>(RET)</sup>

The 12-line page is still in effect.

CPU=.0129 CON=:05 INT = 19 CHG = 55

## TABS COMMAND

The TABS command is used to simulate typewriter-like tab stops for terminal input and output. TABS supplies the tab-setting values that are to be used by the system when it encounters a 'tab character' in the input or output line.

You can then tabulate by typing I<sup>C</sup> (CONTROL and I), or <sup>(ESC)</sup>I (ESCAPE followed by I), in your input wherever you desire a tab in both the input and corresponding output. However, in order to cause tab characters to be inserted whenever the I<sup>C</sup> or <sup>(ESC)</sup>I sequence is typed, the space-insertion mode must be turned off by typing <sup>(ESC)</sup>S (ESCAPE followed by S).

The tab settings can be changed by another TABS command. Tab simulation can also be turned off, and then back on, with the key sequence <sup>(ESC)</sup>T.

### Example 11. Using the TABS Command

XEROX CP-V AT YOUR SERVICE  
ON AT 17:35 APR 15, '71  
LOGON PLEASE: 14777, HALL <sup>(RET)</sup>

- page heading -

!TABS 8,22,37,45,52 <sup>(RET)</sup>

The user sets tab-stop values for terminal input and output.

!<sup>(ESC)</sup>S <sup>(RET)</sup>

Space insertion mode is turned off.

!BUILD TEST3 <sup>(RET)</sup>

1.000 THIS<sup>(TAB)</sup> EXAMPLE<sup>(TAB)</sup> ILLUSTRATES<sup>(TAB)</sup> USE<sup>(TAB)</sup> OF<sup>(TAB)</sup> TABS<sup>(RET)</sup>  
2.000 <sup>(RET)</sup>

File TEST3 is built using tabulation (<sup>(TAB)</sup> = I<sup>C</sup> or <sup>(ESC)</sup>I).

!COPY TEST3 <sup>(RET)</sup>

THIS EXAMPLE ILLUSTRATES USE OF TABS

This file is printed with tab simulation on.

!<sup>(ESC)</sup>T <sup>(RET)</sup>

The user now turns off tab simulation with the sequence <sup>(ESC)</sup>T.

!COPY TEST3 <sup>(RET)</sup>

THIS EXAMPLE ILLUSTRATES USE OF TABS

The file now prints with no tabbing. Note that single spaces are inserted in place of tab characters.

!OFF <sup>(RET)</sup>

- accounting summary -

## 4. MANIPULATING FILES

### FILES IN CP-V

Almost from the moment you become a user, you start accumulating data – the information upon which the system must operate to provide the answers to the problems you pose. All of the processors mentioned in Chapter 1 produce some kind of data; for example:

- Edit allows you to create the collection of statements necessary to phrase a problem-solving procedure in the language of an assembler or compiler, called a source program, and to create input data for such programs.
- BASIC, FORTRAN, and META allow you to translate a source program, which is only a model of the external idea, into a form suitable for execution by the machine. This translation produces object code as the result of either a "compilation" or "assembly" process.
- LINK prepares the relocatable object code for machine execution, in the form of a load module.

These different kinds of data have at least one characteristic in common: each must be stored in some retrievable form, both between the steps of an information-processing operation, and between executions of the same operation.

Conventional batch systems provide the user with several ways of storing data, principally on punched cards or magnetic tape. Although these media provide low cost, long-term storage, they require operator intervention at the central computer site when the stored information is to be accessed or updated. This intervention may be merely inconvenient for batch operation when the information is used frequently, but it is generally infeasible for on-line use of a time-sharing system.

The system's file management capabilities provide an alternative and remarkably versatile medium for maintaining your working data – a medium which greatly lessens your dependence on conventional external forms of storage, and increases the flexibility with which the data can be manipulated. File storage is implemented through use of the Xerox Rapid Access Data Storage System (RAD) and/or through use of public disk packs. Generally speaking, a RAD is a nonremovable rotating-disk memory device containing approximately 6 million characters (or bytes) of storage, any portion of which can be accessed within a very short time. Public disk packs provide approximately 24 million characters of storage. (The system allows you, the on-line user, to access conventional peripheral-storage devices and private disk packs also, if you are so authorized.)

The Monitor, through its file-management system, allows information to be stored on RAD and/or disk packs and identified symbolically, simply by a file name chosen by the user. The files are segregated by account number (your identifying number assigned by the installation manager). Therefore, you cannot inadvertently generate file names that conflict with those of other users outside your account. Certain other information about the file, such as restrictions on access by other users, is also kept with the file.

Files can be used to store any kind of information. They can contain source-language programs built with Edit or BASIC, translated source programs produced by a compiler (relocatable object code), or object code in executable form (a load module) produced by the link-loader. They can also contain collections of alphanumeric data, and natural-language text.

A file is identified by a name of 1-10 characters constructed from a prescribed set of characters. (Some processors, such as Edit, allow up to 31-character file names for special purposes.) The permissible character set contains all of the alphabetic and numeric characters plus most of the commonly used special symbols. Typically, you will need no more than the alphabetic and numeric characters. In the command-language formats given throughout this manual, the symbol most commonly used to indicate a "file name" is fid, which stands for file-identification. A file-identification actually can include an explicit account number and password, as well as the file name. But in our examples, and in most actual usage, fid is interpreted simply as a file name. Complete rules for the structure of file-identifications are given in Appendix B.

Having created a file of information, you are completely free to access or delete it, replace it, or modify it, through on-line services, without any operator intervention. A general rule is that you may not delete or modify files not in your account, though often you may access such files.

Sometimes files are created automatically for you by the system. It is possible to call a processor such as FORTRAN to translate a source program without specifying a file in which to store the object code. In this case, the system creates a unique temporary file, associated with your account, for output storage. You may refer to this file with the single character \$ under certain subsystems. The \$ file is temporary in the sense that when you log off, the file is automatically released. This is useful when creating test programs where nothing of permanent value is being created as output.

Any file that is explicitly named for output is permanent, i.e., retained in the file-management system across the periods between on-line sessions. All files explicitly created with BUILD and COPY commands are also permanent. Permanent-file content is maintained and updated solely by the user. However, file storage space is a chargeable resource, and it is in your interest to delete unneeded files whenever possible.

When working with files, there are two command modifiers of importance: ON and OVER. ON implies that the named file does not yet exist. If such a file does indeed exist and ON is used, an error message is sent to the user. (In general, the word TO may be substituted for ON, with the same effect.)

OVER implies that the file may exist already and, if so, is to be reused for the new operation. Using OVER also results in a completely new version of the file; any old data in the file is lost. If the file does not exist and OVER is specified, no error is noted, and the file is automatically created. There is no limit to the number of operations that may be performed OVER a file.

Information about the immediate intended use of a file is called a file specification. These specifications are made implicitly by the use of several commands, particularly COMMENT, LIST, and OUTPUT. An explicit specification can be made by the use of the SET command. (See Chapter 10, "DCB Assignments".) For our present purposes, file specifications may be considered to indicate that a file is an input or an output file, and if an output file, what type(s) of output the particular file is to receive.

Once a file specification has been made, it remains in effect throughout a terminal session until changed or deleted by another specification — the one exception concerns source-input files (operational label SI), which always default to the user's terminal at each job step. If, for example, listing output is directed to the file "DATA", then all listing output generated by a series of assemblies or compilations are placed on this file, one behind the other. This convention is known as "file extension" and is automatically in effect for output operations on standard system-assigned files — or more precisely, through certain system-created Data Control Blocks (DCBs). (DCBs are described in the CP-V/BP Reference Manual, 90 17 64, and discussed further in the TEL chapter of the CP-V/TS Reference Manual, 90 09 07.) References to DCBs are gradually introduced further along in this manual, and they are treated specifically in Chapter 10, "DCB Assignments".

File extension is an important feature to keep in mind when operating at the terminal, especially when it is not desirable to stack any output during multiple-job-step operations. File extension is reset to the beginning of the file upon any new specification, even if the specification refers to an already existent file. For example:

<u>LIST</u> ON GRUNCH	Listing output directed to file GRUNCH.
<u>OUTPUT</u> ON RUNFILE	Object-code output directed to file RUNFILE.
<u>META</u> SOURCE	Read input-file and assemble (job step 1).
<u>META</u> ME	Assemble from terminal (job step 2).
<u>META</u> TESTY	Read input-file and assemble (job step 3).

This sequence of commands results in all output being stacked on their respective files, GRUNCH or RUNFILE.

The new listing-output specification and further job step

<u>LIST</u> OVER GRUNCH	
<u>META</u>	(job step 4)

has the effect of replacing the old contents of GRUNCH with the new assembly listing as the source input is entered from the user's terminal. The object-code output would still be stacked at the end of file RUNFILE. This basic use of file extension logic applies independent of the manner in which file specifications are made, i.e., through the SET command or through commands implying a specification.



To understand certain error comments you may encounter, you will need some knowledge of file organization. This refers to the way the file's contents, i.e., its individual records, are ordered. Three possible organizations are

- Consecutive, where the records can be accessed in sequential order only.
- Keyed, where the records may be accessed directly (randomly) or sequentially.
- Random, where the file is simply a collection of contiguous storage.

Files built with the Edit processor, having a line number associated with each record (line), are an example of a kind of keyed file. Most files you will use will probably be keyed, but you may see a system comment stating "...file not keyed...". Certain processors are not keyed-file oriented, e.g., BASIC and PCL, though they handle keyed files properly in most cases. Later we indicate what you can do in other cases.

## EDIT

The Edit processor is a general-purpose, line-number oriented text editor. It may be used to create or modify source programs, data files, reports, etc. for other CP-V processors, specifically for the FORTRAN, Meta-Symbol, BASIC, COBOL, and BATCH processors.

Edit provides file editing capability, i.e., the ability to build, delete, copy, or merge files; to edit within a line of a file; and to do a complex editing operation on each line in a specified range of lines.

The examples in this section illustrate how Edit is used to perform file editing, and to access a file and perform record (line) editing functions such as displaying (TY), inserting (IN), and deleting (DE).

One example of intrarecord, or multiline editing is also given, as a basis for general use of the intrarecord-command group. Edit commands not covered here are described in the CP-V/TS Reference Manual, 90 09 07.

In the command descriptions that follow, the word "line" refers to a line typed by the user; the word "record" refers to a line that has already been transmitted to the system and exists on some file. Thus, we can say "...the line numbered n replaces any identically numbered record..." (i.e., already on the file) without ambiguity. The examples are intended to illustrate usage of the various commands and do not necessarily show the most appropriate way of dealing with a particular kind of file content. More appropriate means may become apparent in later chapters, especially in regard to manipulation of BASIC program text.

## HOW EDIT WORKS

Edit is a line-number oriented editor in that it automatically associates a line-sequence number with each line of a file built under Edit. All record and intrarecord editing is performed with reference to these sequence numbers. That is, one or more sequence numbers must be specified for record and intrarecord editing commands and also in certain usages of the file editing commands.

To edit a file that does not have sequence numbers associated with it (e.g., a file built under BASIC or under certain batch-mode facilities), you can add the numbers by copying the file with "resequencing" (see Example Copy and Resequencing).

Edit prompts with an asterisk (\*) character to indicate that it is ready to accept a command. For file-building or line-insertion input, it prompts with a sequence number.

## FILE EDITING COMMANDS

All file editing commands explicitly name one or more files. The Edit and TEL/Edit commands at the file-editing level are:

- !EDIT [fid]  
Calls the Edit processor and optionally names a file to be edited, at TEL level (!).
- \*EDIT fid  
Names a file to be edited, at Edit processor level (\*).

- IBUILD fid[,n]

Calls Edit and names a file to be built at the TEL level (!).

- \*BUILD fid[,n]

Names a file to be built at the Edit processor level (\*). The optional number (n) specifies the sequence number with which the file is to begin. If not specified, 1 is assumed by Edit.

- \*COPY fid<sub>1</sub>  $\left\{ \begin{array}{l} \text{TO}^\dagger \\ \text{OVER} \end{array} \right\}$  fid<sub>2</sub> [,n]

Copies contents of fid<sub>1</sub> either ON a new file or OVER an existing file, fid<sub>2</sub>; and, optionally, resequences (i.e., renumbers) fid<sub>2</sub> starting with sequence-number n. COPY can also be used to produce a sequence-numbered (keyed) version of an unkeyed file, in which case n must be specified.

- \*DELETE fid

Deletes the named file from the system.

- \*MERGE fid<sub>1</sub> [,n<sub>1</sub>-n<sub>2</sub>] INTO fid<sub>2</sub>, n<sub>3</sub>-n<sub>4</sub>

Replaces records n<sub>3</sub> through n<sub>4</sub> of fid<sub>2</sub> with the contents of (or record n<sub>1</sub> through n<sub>2</sub> of) fid<sub>1</sub>; the merged records — from fid<sub>1</sub> — are renumbered in fid<sub>2</sub> starting with sequence-number n<sub>3</sub>. Note: If fid<sub>2</sub> does not already exist, the specified records on fid<sub>1</sub> are copied to the new file and numbered starting with n<sub>3</sub> (i.e., a "selective copy" operation is performed).

- \*END

Terminates execution of Edit and returns control to the system (TEL) level.

## RECORD EDITING COMMANDS

To use any of the record or intrarecord editing commands, the applicable file must first be specified with an EDIT-fid command either at the TEL or the Edit level. None of the record and intrarecord-level commands themselves can specify a file.

A useful record-editing command is TY — Type Record(s), Including Sequence Number — which displays one, several, or all of the records in a file:

TY n<sub>1</sub> [-n<sub>2</sub>]

where

n<sub>1</sub> is the sequence number of the first or only line to be typed.

n<sub>2</sub> is the optional ending sequence number of a range of lines to be typed.

More record-editing commands are described following the next example.

<sup>†</sup>Wherever TO is specified, ON may be substituted.

### Example 12. Using EDIT to Build and Display a Source File

In this example, the user builds a BASIC program file, copies it to another file, displays the copy, and deletes the original file.

```
XEROX CP-V AT YOUR SERVICE
ON AT 15:12 MAR 28, '71
LOGON PLEASE: 2232,HALL
```

- page heading -

!BUILD PRIME (RET)

The user wants to create a file called PRIME. Edit is called implicitly.

1.000 10 REM GENERATE PRIMES GR THAN 3 (RET)

Edit prompts for input by printing 1.000. The user types the first line, then types lines 2-10 in response to more prompts by Edit.

2.000 20 P=1 (RET)  
3.000 30 P=P+4,S=0 (RET)  
4.000 40 FOR I = 5 TO SQR(P) + 1 STEP 2 (RET)  
5.000 50 Q=INT(P/I) (RET)  
6.000 60 IF Q\*I=P THEN 80 (RET)  
7.000 70 PRINT P'TAB(0) (RET)  
8.000 80 IF S=1 THEN 30 (RET)  
9.000 90 S=1, P=P+2 (RET)  
10.000 100 GOTO 40 (RET)  
11.000 (RET)

The user types a carriage return immediately following the prompt for line 11.000 to indicate end-of-file, that is, that the last line of the file has been entered. (Control returns directly to TEL, rather than to Edit, because BUILD was given at the TEL level.)

!EDIT (RET)

TEL prompts for another command. The user calls Edit again, explicitly this time, to use a command not available at TEL level.

EDIT HERE

\*COPY PRIME ON PRIMES (RET)

Edit acknowledges its presence, and prompts. The user decides to change the name of his program file from PRIME to PRIMES, so he copies it to a new file named PRIMES.

..COPYING

..COPY DONE

\*EDIT PRIMES (RET)

He then indicates that he wants to edit (actually only display) file PRIMES.

\*TY 1-10 (RET)

He indicates that he wants the whole file, lines 1 through 10, typed. (A larger ending number, e.g., TY 1-99, would do the same job.)

1.000 10 REM GENERATE PRIMES GR THAN 3  
2.000 20 P=1  
3.000 30 P=P+4,S=0  
4.000 40 FOR I = 5 TO SQR(P) + 1 STEP 2  
5.000 50 Q=INT(P/I)  
6.000 60 IF Q\*I=P THEN 80  
7.000 70 PRINT P'TAB(0)  
8.000 80 IF S=1 THEN 30  
9.000 90 S=1, P=P+2  
10.000 100 GOTO 40

\*DELETE PRIME (RET)

Edit displays the copy, and prompts. The user sees that the copy is OK and decides to delete the original file, PRIME, so as not to tie up disk space unnecessarily.

..EDIT STOPPED

The record editing mode is terminated for file PRIMES because file PRIME is to be processed. The above message is printed to indicate this.

..DELETED

\*END (RET)

He then indicates that he is finished with Edit.

!OFF (RET)

and logs off.

- accounting summary -

## MORE RECORD EDITING COMMANDS

Two more commonly used record-level commands are IN (Insert Records) and DE (Delete Records). The IN command is used to insert one or more lines between two records of a file or, alternatively, to replace one record of the file with the first (or only) insert line. (The IN command can be used to replace only one record, though more records may be inserted immediately following the replacement.) The IN command format is

IN n[,i]

where

n is the sequence number of the first or only line to be inserted.

i is the optional increment value that Edit is to add to succeeding insertion-line sequence numbers.

Detailed rules for the use of IN are given following the next example.

The DE command deletes one or more (successive) records from the file. It has the format

DE n[-m]

where

n is the sequence number of the first or only record to be deleted.

m is the optional end sequence number of a range of records to be deleted.

### Example 13. Using EDIT to Modify a Source File

In this example, the user (after "desk-checking" his initial source program) sees that a logically required BASIC statement (NEXT) is missing, and inserts it. He then realizes that this original program will produce an endless listing of prime numbers, and prepares a different version, using MERGE to excerpt a portion of the original program for modification, and then to recombine this portion, after modification, with a copy of the original (thus, retaining the original version also).

XEROX CP-V AT YOUR SERVICE  
ON AT 15:28 MAR 28,'71  
LOGON PLEASE: 2232,HALL (RET)

- page heading -

!PLATEN 72,10 (RET)

The user suppresses further page headings by giving a page length of less than 12. (This practice is not recommended for normal production work, where the page headings delimit a uniform document size and provide useful identification: name, date, time, page number.)

!EDIT PRIMES (E)

He then indicates he wants to edit PRIMES.

EDIT HERE

\*TY 6-99 (E)

He asks for display of lines 6 through end-of-program, i.e., line number 99 is in this case sufficiently large to include the whole file. (Note that "6-99" is equivalent to "6.0-99.0" or "6.000-99.000", etc.)

```
6.000 60 IF Q*I=P THEN 80
7.000 70 PRINT P'TAB(0)
8.000 80 IF S=1 THEN 30
9.000 90 S=1, P=P+2
10.000 100 GOTO 40
--EOF HIT AFTER 10.
```

This message means: "End-of-file was found following line 10".

\*IN 6.5 (E)

The user asks to insert a line numbered 6.5, to add the missing statement.

```
6.500 65 NEXT I (E)
```

Edit prompts for the insertion-line with the line number. It then prompts for another command with an asterisk.

\*TY 6-7 (E)

The user requests a display of lines 6 through 7, to see if the insert really worked.

```
6.000 60 IF Q*I=P THEN 80
6.500 65 NEXT I
7.000 70 PRINT P'TAB(0)
*MERGE PRIMES, 6.1-10 INTO NEWEND,7 (E)
```

He then asks for a portion of PRIMES to be copied on a new, empty file, NEWEND, and for the lines to be renumbered, starting with 7.

```
..EDIT STOPPED
..MERGE STARTED
--DONE AT 11.
*EDIT NEWEND
*TY 1-11 (E)
```

He requests a display to see if 7-11 was "excerpted" all right.

```
7.000 65 NEXT I
8.000 70 PRINT P'TAB(0)
9.000 80 IF S=1 THEN 30
10.000 90 S=1, P=P+2
11.000 100 GOTO 40
*IN 7.5 (E)
```

He requests an insert numbered 7.5, enters the insertion as shown below, and then requests an insert at the end of the file, i.e., line 12.

```

7.500 66 IF P > 1000 GOTO 110 (RT)
*IN 12 (RT)
12.000 110 END (RT)
13.000 (RT)

```

Edit prompts for another insertion, line 13; the user replies with an immediate (RT), signifying "done".

```
*TY 6-12 (RT)
```

He then requests display of lines 7-12 (no line lower than 7 should exist).

```

7.000 65 NEXT I
7.500 66 IF P > 1000 GOTO 110
8.000 70 PRINT P'TAB(0)
9.000 80 IF S=1 THEN 30
10.000 90 S=1, P=P+2
11.000 100 GOTO 40
12.000 110 END
*COPY PRIMES TO LOPRIM (RT)

```

He requests an extra copy of PRIMES on new file LOPRIM.

```

..EDIT STOPPED
..COPYING
..COPY DONE
*MERGE NEWEND, 7-12 INTO LOPRIM,6.1-10 (RT)

```

He then asks for a replacement of the original program lines 6.1-10, with the modified program ending from NEWEND.

```

..MERGE STARTED
--DONE AT 12.1
*EDIT LOPRIM (RT)
*TY 5-13 (RT)

```

He requests display of lines 5 through end-of-file on LOPRIM.

```

5.000 50 Q=INT(P/I)
6.000 60 IF Q*I=P THEN 80
6.100 65 NEXT I
7.100 66 IF P > 1000 GOTO 110
8.100 70 PRINT P'TAB(0)
9.100 80 IF S=1 THEN 30
10.100 90 S=1, P=P+2
11.100 100 GOTO 40
12.100 110 END
--EOF HIT AFTER 12.1
*DELETE NEWEND (RT)

```

Since NEWEND is now appended, he deletes the file for the sake of economy.

```

..EDIT STOPPED
..DELETED
*IN 1, .1 (RT)

```

He then decides to replace the original 'remarks' line (1.000), and specifies a small increment to allow room for further insertion lines before line 2.

```

1.000 REM GENERATE PRIMES OVER 3 AND UNDER 1000
1.100 REM (THIS PROGRAM IS A LIMITED VERSION OF
1.200 REM MY PROGRAM "PRIMES", WHICH HAS NO
1.300 REM UPPER LIMIT BUILT IN.)
1.400
*TY 1-15 (E)

```

He requests display of result.

```

1.000 REM GENERATE PRIMES OVER 3 AND UNDER 1000
1.100 REM (THIS PROGRAM IS A LIMITED VERSION OF
1.200 REM MY PROGRAM "PRIMES", WHICH HAS NO
1.300 REM UPPER LIMIT BUILT IN.)
2.000 20 P=1
3.000 30 P=P+4,S=0
.
.
.
10.100 90 S=1, P=P+2
11.100 100 GOTO 40
12.100 110 END
--EOF HIT AFTER 12.1
*END (E)

!OFF (E)

```

- accounting summary -

## RULES FOR USE OF IN

The rules applicable to the IN command are summarized below. For ease of reference, the IN command format is repeated:

IN n[,i]

1. If n matches a sequence number already in the file, the first (or only) insertion line replaces the identically numbered line in the file.
2. If n does not match a sequence number in the file, the first (or only) insertion line n is inserted immediately following the next lower-numbered line (or at the beginning of the file if a lower line number does not exist).
3. If the insertion sequence number increment, i, is not specified, Edit assumes as a default value for i either the increment specified in the most recent record-level command given during the current Edit session, or the value 1 if no increment has been previously specified.
4. Following each record insertion, Edit prompts for further insertion lines with incremented sequence numbers, until either the incremented sequence number equals or exceeds a sequence number already existing in the file, or the user responds with a carriage return only. (In the first case, Edit rings the console bell and returns immediately to command-input mode, issuing an asterisk.)

## RULES FOR USE OF MERGE

A more complete form of the MERGE command than initially presented is

```
MERGE fid1[r1[-n2]][INTO fid2,n3[-n4][i]]
```

The optional increment value, i, was not previously presented. It is used to control renumbering of merged records. For example, by specifying a small fractional (decimal) increment it is possible to pack more records into the destination file than might otherwise be possible. The rules for MERGE are as follows:

1. The sequence numbers n<sub>3</sub> - n<sub>4</sub> specify the range of records to be deleted from the destination file (fid<sub>2</sub>), whether or not a one-for-one replacement occurs. (If n<sub>4</sub> is omitted only record n<sub>3</sub> is deleted, i.e., n<sub>3</sub> is assumed as the value for n<sub>4</sub>.)

2. Sequence numbers  $n_1 - n_2$  specify the maximum range of lines to be transmitted from the source file ( $fid_1$ ); default value of  $n_1 - n_2$  is 1 through EOF. If  $n_2$  is omitted, only record  $n_1$  is merged. (The actual number of records moved is controlled by the next sequence value above  $n_4$ ; see rule 4 below.)
3. Renumbering of the records from  $fid_1$  in  $fid_2$  proceeds from  $n_3$ , incrementing either by  $i$  or the default value, 1.
4. Records  $n_1$  through  $n_2$  are moved into the interval  $n_3 - n_4$  on  $fid_2$ , renumbered, until either the incremented sequence number of a moved record equals or exceeds the sequence number of the successor of  $n_4$ , or the range of records  $n_1 - n_2$  is exhausted.
5. Value  $n_2$  may equal  $n_1$ ;  $n_4$  may equal  $n_3$ .

Note these characteristics of MERGE: (1) the number of  $fid_1$  records moved is largely independent of the number of  $fid_2$  records deleted; (2) sequence number discontinuities may be introduced into  $fid_2$ ; and (3) by adjusting the increment value, the set of deleted records may be replaced by a much larger set of records. Note also that though it is a file-level command, MERGE has record-editing capabilities.

The rules for IN and MERGE can be used as a general guide to the operation of other record-level commands with similar formats.

## STRING SEARCH COMMANDS

The string-search type of command involves an automatic search by Edit for the occurrence of a certain string of characters within specified columns of a range of records. The records are searched one at a time and, if a "hit" is made on one or more of the records, the action specified by the command is performed (type or delete record). You specify the range of records to be searched, the string to search for, and the record columns within which the search is to be made ("all" by default). Edit does the rest. Note that the line number is not considered a part of the record and that column 1 is the first character of the record.

Two string-search commands are available at the record-editing level.

- Find and Type Records.
- Find and Delete Records.

The command formats are

```
FT  $n_1[-n_2]$ , /string/[ $c_1[c_2]$ ]
```

and

```
FD  $n_1[-n_2]$ , /string/[ $c_1[c_2]$ ]
```

where

- $n_1$  is the sequence number of the first or only record to be searched.
- $n_2$  is the sequence number of the last of a range of records to be searched (default value =  $n_1$ ).
- string delimited by slashes ( $\backslash \dots \backslash$ ), is any sequence of characters that may exist in the file.
- $c_1$  is the number of the column at which the search is to start in each record (default value = 1).
- $c_2$  is the number of the column (inclusive) at which the search is to end in each record (default value = 140).

The specified string must be found entirely within the columns specified. The columns of a record (or line) are numbered from 1 through 140, and though 72 is the upper limit for a Teletype line, columns 73-140 may exist in a record, as discussed below. (Other string-search commands are available at the intrarecord-editing level, and are generally more useful and efficient than those described above.)



## HOW TO ENTER MULTILINE RECORDS

On a terminal unit having an inherent line-width limit of less than 140 (e.g., Teletype models 33, 35, and 37), a single, multiline record may be entered into a file (using the BUILD or IN commands, for example) in either of two ways:

1. Using the local-carriage-return key marked LOC CR, if present, to "break" the input line without releasing it to the system.
2. Using the simulated local-carriage-return sequence `ESC` `RET` for the same purpose.

Either method permits entering a record of up to 139 characters plus `RET` on virtually any terminal unit.

### Example 14. Using String-Search Commands and Local-Carriage-Return

```
⋮  
!EDIT RET  
EDIT HERE  
*COPY LOPRIM TO SCRATCH RET
```

The user copies his program to a new file in order to experiment with FT, FD, and IN.

```
*EDIT SCRATCH RET  
*FT 2-15,/P= RET
```

He requests a search of records 2 through 15, all columns, for the character string "P=", with the record displayed on each hit.

```
2.000 20 P=1  
3.000 30 P=P+4,S=0  
10.100 90 S=1, P=P+2  
--EOF HIT AFTER 12.1  
*FT 1-13,/P= RET
```

He then asks for a search on "=P" in lines 1 through 13.

```
3.000 30 P=P+4,S=0  
6.000 60 IF Q*I=P THEN 80  
10.100 90 S=1, P=P+2  
--EOF HIT AFTER 12.1  
*FT 1-2,/PR= RET
```

He now asks for a search on "PR" in lines 1 through 2.

```
1.000 REM GENERATE PRIMES OVER 3 AND UNDER 1000  
1.100 REM (THIS PROGRAM IS A LIMITED VERSION OF  
1.200 REM MY PROGRAM "PRIMES", WHICH HAS NO  
*FT 1-2,/REM/,4,60 RET
```

He tries a "negative" test of the column-delimiting capabilities,

```
--NONE  
*FD 1.1-2,/REM= RET
```

then a find-and-delete of records 1.1 through 2, inclusive, containing "REM".

```
--003 RECS DLTED  
*TY 1-4 RET
```

He requests display of results.

```

1.000 REM GENERATE PRIMES OVER 3 AND UNDER 1000
2.000 20 P=1
3.000 30 P=P+4,S=0
4.000 40 FOR I= 5 TO SQR(P)+1 STEP 2.
*IN 1.5 (RET)
1.500 REM (THIS PROGRAM IS A LIMITED VERSION OF (ESC)(RET)
PROGRAM "PRIMES", WHICH HAS NO SET UPPER LIMIT.) (RET)

He tries to reenter former lines 1.1 and 1.2 as one record, with a local line-break (ESC)(RET).

*FT 1-3,/REM/ (RET)
1.000 REM GENERATE PRIMES OVER 3 AND UNDER 1000
1.500 REM (THIS PROGRAM IS A LIMITED VERSION OFPROGRAM "PRIMES", WHIC
H HAS NO SET UPPER LIMIT.)

Note, (1) that the user neglected to supply a blank (or space) following "of" prior to or after the
local carriage-return, and (2) that the system "folds" the record indiscriminately when the physical
line-width limit is reached.

*END (RET)
:
:

```

## INTRARECORD COMMAND USAGE

The intrarecord commands make changes within an individual record. They generally manipulate character strings. Intrarecord commands may only be given after the user selects an intrarecord mode with the SE, SS, or ST command. The SE command will be discussed below as an example of selecting an intrarecord mode.

The SE (Select Intrarecord Mode) command simply selects a range of records, and optionally a field within each record, for subsequent intrarecord "processing" commands to operate on. The selection remains in effect for any number of subsequent commands until a new selection is made or a record editing command is given.

After the SE is given, Edit prompts for further commands. You can then issue one processing command or several commands separated by semicolons (;) on the same input line.

If one command is issued per line, the processing specified by that command is performed against each record in the range specified by the SE. However, if more than one command is issued per line the whole set of commands will be processed successively against the first record, then against the second record, etc. (Obviously, if the range selected is only one record, the result is the same in either case.)

The format of the SE command is

$$SE n_1[-n_2][c_1[c_2]]$$

where the meanings and defaults of the record and column selection parameters are the same as for the FT and FD string-searching commands.

Two very useful and similar processing commands are S (String Substitution) and D (Delete String). The S command format is

$$[j]/string_1/S/string_2/$$

where

string<sub>1</sub> is the string to be searched for.

string<sub>2</sub> is the string to be substituted in place of string<sub>1</sub>.

- j is an integer that indicates that only the jth occurrence of string<sub>1</sub> within the search field of each record is to be replaced by string<sub>2</sub> (default value = 1). If all occurrences of string<sub>1</sub> are to be replaced, j must be specified as zero.

The D command format is

[j]/string/D

where

string is the string to be deleted.

j has the same meaning as in the S command.

Note that when substituting a longer string for a shorter string, the remainder of the line (if any) is moved right only as far as needed to preserve a single-blank separator if at least one blank existed to the right of the original string. That is, in certain cases multiple blanks to the right of the insert may be lost. (This is useful in preserving columnar alignment.)

In this regard, you may include initial, embedded, or terminal blanks (i.e., spaces) in either string. Edit treats the blank in general like any other printing character, the major exception being the suppression of multiple blanks in certain cases of string substitution and deletion. (A Blank-Preservation-Mode command, BP, in intrarecord operations provides for cases where multiple blanks must not be lost, as in "quoted" character-string literals.)

A number of other very useful, more specialized intrarecord commands exist for record modifications, but most of these are logical shortcuts to results that can usually be achieved with S and D commands only.

The two intrarecord display commands, TY (Type, Including Sequence Number) and TS (Type, Suppressing Sequence Number) are analogous to their record-level counterparts, but do not specify record numbers (i.e., you enter TY or TS only). With or without sequence numbers, the commands display the currently active record(s), as illustrated by the following example.

#### Example 15. Using Intrarecord Commands

```

:
!EDIT SCRATCH (E)
EDIT HERE
*FT 1-2,/PROG/ (E)

```

The user enters the FT command to find and type lines containing PROG, within the range 1 through 2, inclusive. (Only line 1.5 should satisfy the requirement.)

```

1.500 REM (THIS PROGRAM IS A LIMITED VERSION OF PROGRAM "PRIMES", WHIC
H HAS NO SET UPPER LIMIT.)
*SE 1.5 (E)

```

He then enters the intrarecord mode selection command, which is required to fix the error in the line by string substitution.

```

*/OFPRO/S/OF PRO/ (E)

```

He substitutes OF PRO for OFPRO (first instance only: j = 1 by default).

```

*TY (E)
1.500 REM (THIS PROGRAM IS A LIMITED VERSION OF PROGRAM "PRIMES", WHI
CH HAS NO SET UPPER LIMIT.)
*TS (E)

```

To see if the line-break problem in line 1.5 would disappear if the line were displayed without its sequence number (as will happen under the BASIC subsystem), he uses the TS command.

REM (THIS PROGRAM IS A LIMITED VERSION OF PROGRAM "PRIMES", WHICH HAS NO SET UPPER LIMIT.)

\*O/P/S/N/ (REF)

This does in fact solve the problem. Now he wants to change all program variables named P to Ns. (This will have no effect on the program, since we have no variables named N.)

\*TY (REF)

1.500 REM (THIS NROGRAM IS A LIMITED VERSION OF NROGRAM "NRIMES", WHI CH HAS NO SET UNNER LIMIT.)

He forgot to reset the range selection (SE).

\*O/N/S/P/ (REF)

\*SE 2-13 (REF)

\*O/P/S/N/ (REF)

He reverses the N for P substitution in line 1.5, then sets proper range, and tries his original substitution again;

9 STRINGS CHANGED

--EOF HIT AFTER 12.1

\*TY (REF)

and checks the result.

```
2.000 20 N=1  
3.000 30 N=N+4,S=0  
4.000 40 FOR I=5 TO SQR(N)+1 STEN 2  
5.000 50 Q=INT(N/I)  
6.000 60 IF Q*I=N THEN 80  
6.100 65 NEXT I  
7.100 66 IF N > 1000 GOTO 110  
8.100 70 NRINT N'TAB(0)  
9.100 80 IF S=1 THEN 30  
10.100 90 S=1, N=N+2  
11.100 100 GOTO 40  
12.100 110 END  
--EOF HIT AFTER 12.1
```

The substitution worked, except that it was not possible to delimit the search string narrowly enough; STEP to STEN, and PRINT to NRINT, were changed as well.

\* /STEN/S/STEP;/NR1/S/PRI (REF)

This reverses the change.

\*SE 4;TY (REF)

The user requests a display of line 4 and, below, of line 8.1.

```

4.000 40 FOR I=5 TO SQR(N)+1 STEP2
*SE 8.1;TY (RT)

8.100 70 PRINT N' 'TAB(0)
*DELETE SCRATCH (RT)

```

Since he did not actually need this file, he deletes it.

```

..EDIT STOPPED
..DELETED
*END (RT)
!OFF (RT)

```

- accounting summary -

### TEL EDITING COMMANDS VS EDIT COMMANDS

The TEL command !EDIT fid implies the sequence

```

!EDIT
*EDIT fid

```

The TEL command !BUILD implies the sequence

```

!EDIT
*BUILD
:
*END
!

```

Both are, therefore, shortcuts provided for your convenience. However, note that the TEL EDIT command must be given before the Edit COPY command can be used, as distinct from the TEL COPY command. The TEL COPY command implies a call to the PCL subsystem; the COPY command under PCL is different from the Edit COPY command in scope, intent, and format.

TEL/PCL COPY and other PCL commands are described in the next section.

### PCL

The Peripheral Conversion Language, PCL, provides you with on-line facilities for initiating and controlling:

- Movement of files between peripheral storage devices.
- Movement of files between peripheral storage devices and RAD or disk pack storage (or other forms of secondary storage).
- Movement of files within disk storage.
- Concatenation of files and selection of records from files during file movement.
- Data-record formatting and code conversion during file movement.
- Deletion of files.
- File building on any type of device or storage media from an on-line terminal.

- Display of peripheral input-device files or RAD or disk pack files on an on-line terminal.
- Listing of a RAD or disk pack file directory or of file names on a labeled magnetic tape.
- Positioning (and releasing) of magnetic-tape volumes.

The peripheral storage devices referred to may be

1. Magnetic-tape drives: CP-V labeled, ANS labeled, or unlabeled tape.
2. Unit-record devices: card punch and line printer (card reader cannot be requested on-line).

As mentioned before, one common characteristic of peripheral devices is that they generally require operator intervention, e.g., for the mounting and dismounting of physical file volumes. Therefore, an on-line user must be specially authorized in order to be able to use these devices via PCL (or any other on-line means); otherwise he will simply receive an error message on any attempt to do so.

Many of the facilities listed above are mainly of interest to the experienced on-line user doing the kinds of programming that were heretofore necessarily restricted to central-site batch operations: commercial and large-scale scientific applications involving large volumes of input and output data, system development, etc. Actually, the complete set of PCL facilities, plus the TEL SET command and direct user-to-operator messages, provide control of total system resources analogous to that obtainable only with "hands on", central-site batch operations under previous systems.

We will describe only the PCL functions commonly used by all on-line users. These include keyed-file merging, building of unkeyed files, concatenation of unkeyed files, terminal display of either type of file, listing of file names, and file deletion.

## PCL COMMANDS

The PCL COPY, L (which is the TEL form of the PCL LIST command), and DELETE commands may be given at TEL level, but PCL must be called explicitly (!PCL) for all other PCL commands. PCL prompts for command input with the less-than (<) character, and for file input and responses to questions with a period.

The PCL commands covered here are COPY, LIST, DELETE, and DELETEALL. COPY allows a vast array of options in its variable field; it is the workhorse of the PCL language. Therefore, only a subset of the possible variations of the command is described here.

The COPY command format is

$$C[OPV][d][/fid_1[,fid_2,\dots,fid_n]]\left[\begin{matrix} TO^\dagger \\ OVER \end{matrix}\right][d][/fid_m]$$

where

d is a PCL identification code, which may include

DC - RAD file storage (default value for d).

DP [#serial no., . . . #serial no.] - disk pack (serial no. default is system disk pack).

ME - User's terminal.

LP - Line printer.

CP - Card punch.

LT [#serial no., #serial no.] . . . - CP-V labeled magnetic tape (serial no. default is "scratch tape").

AT [#serial no., #serial no.] . . . - ANS labeled magnetic tape (serial no. default is "scratch tape").

FT [#serial no., #serial no.] . . . - Free form magnetic tape; i.e., unlabeled.

fid is a file identification, for DC, DP, LT, or AT files only; normally only a file name. Each PCL identification can be followed immediately by one or more special options in parentheses: i.e., d (option) or d/fid (option). If the default device code DC is not explicitly specified, the slash (/) preceding fid<sub>1</sub> may be omitted; see the following example.

<sup>†</sup>Wherever TO is specified, ON may be substituted.

If TO is specified, a new file is created (and must not already exist). If OVER is specified, the output file may exist; and if it does it will be deleted and replaced by a copy of the input file. The TO/OVER clause is optional following a prior COPY specifying a TO/OVER destination file or device (during the same session with PCL). If the TO/OVER clause is omitted under these circumstances, the last-named file will be extended according to the file-convention. A subsequent TO/OVER clause or an exit from PCL terminates file extension.

If multiple source files – e.g., FILA, FILB, FILC – are specified, the several file contents are either concatenated, i.e., joined end to end, on the destination file in the case of unkeyed files, or merged on the basis of record-key values in the case of keyed files. Both cases are illustrated in the following examples.

The remaining commands to be discussed in this introduction to PCL are LIST, DELETE, and DELETEALL.

L[IST] lists all your disk-file names (i.e., all names in your account directory). This is the simplified form of the LIST command. Additional specifications allow the user to list the files that are on a particular device.

DELETE  $\left\{ \begin{array}{l} [DC/] \\ DP[\#serial no.] \end{array} \right\} / fid[,fid]. . .$  deletes the specified files.

DELETEALL  $\left\{ \begin{array}{l} DC/ \\ DP[\#serial no.] \end{array} \right\} / [from][,to]$  deletes all files in the log-on account if 'from' and 'to' are not specified. Deletes a range of files in the log-on account if 'from' and/or 'to' are specified. 'From' and 'to' are sort keys or file names. With this command, PCL asks for a confirmation:

```

DELETEDALL?
.YEISS (RET) ("YEISS" is the only correct positive response.)

```

#### Example 16. Keyed-File Update and Display, Using PCL COPY

The user wants to produce another version of the PRIMES program that will allow him to set, via the terminal, the range of the prime numbers produced during each run. He creates the modification files using Edit BUILD, but uses PCL COPY to achieve the actual file updating.

:

```
!BUILD MOD1,1,.125 (RET)
```

The user wants to build a file starting with sequence number 1 and incrementing by only .125, instead of the standard (default) increment of 1. Note that we have added an i parameter (.125) to BUILD that corresponds to that of MERGE and INsert.

```
1.000 10 REM GENERATE PRIME NUMBERS (>3) WITHIN USER-SET LIMITS (RET)
```

```
1.125 11 PRINT 'ENTER LOWER BOUND FOR PRIMES' (RET)
```

```
1.250 12 INPUT L (RET)
```

```
1.375 13 PRINT 'ENTER UPPER BOUND FOR PRIMES' (RET)
```

```
1.500 14 INPUT U (RET)
```

```
1.625 (RET)
```

```
!BUILD MOD2,7.1,.5 (RET)
```

He requests a second new file, starting with sequence number 7.1, but incrementing by .5 in this case.

```
7.100 67 IF P<L THEN 80 (RET)
```

```
7.600 68 IF P<U THEN 110 (RET)
```

```
8.100 (RET)
```

```
!COPY LOPRIM,MOD1,MOD2 TO VPRIM (RET)
```

He requests PCL to copy files LOPRIM, MOD1, and MOD2, in succession to form new file VPRIM. Note that these are keyed files, and as such are not simply linked together end-to-end on VPRIM. MOD1 is merged with LOPRIM, records from MOD1 replacing any records from LOPRIM having matching keys, and all nonmatching records falling into their natural sequence. The same process is repeated between MOD2 and the results of LOPRIM,MOD1 – and so on if more files were specified. (The source files themselves are not modified in any way.) However, the three input files may be concatenated without loss of any records by using the LN option (after VPRIM in the command) to assign new keys.

!COPY VPRIM TO ME <sup>(47)</sup>

He displays the results directly, using the PCL COPY command. Note that ME is a PCL identification code, not a name; VPRIM, not being a PCL identification code, is understood by default as DC/VPRIM.

```
10 REM GENERATE PRIME NUMBERS (>3) WITHIN USER-SET LIMITS  
11 PRINT 'ENTER LOWER BOUND FOR PRIMES'  
12 INPUT L  
13 PRINT 'ENTER UPPER BOUND FOR PRIMES'  
14 INPUT U  
20 P=1  
:  
:  
65 NEXT I  
67 IF P<L THEN 80  
68 IF P>U THEN 110  
70 PRINT P'TAB(0)  
:  
:  
110 END  
  
!EDIT VPRIM (47)  
EDIT HERE  
*TY 1-13 (47)
```

The user then displays the same results using Edit.

```
1.000 10 REM GENERATE PRIME NUMBERS (>3) WITHIN USER-SET LIMITS  
1.125 11 PRINT 'ENTER LOWER BOUND FOR PRIMES'  
1.250 12 INPUT L  
1.375 13 PRINT 'ENTER UPPER BOUND FOR PRIMES'  
1.500 14 INPUT U  
2.000 20 P=1  
3.000 30 P=P+4,S=0  
4.000 40 FOR I=5 TO SQR(P)+1 STEP 2  
5.000 50 Q=INT(P/I)  
6.000 60 IF Q*I=P THEN 80  
6.100 65 NEXT I  
7.100 67 IF P<L THEN 80  
7.600 68 IF P>U THEN 110  
8.100 79 PRINT P'TAB(0)  
9.100 80 IF S=1 THEN 30  
10.100 90 S=1, P=P+2  
11.100 100 GOTO 40  
12.100 110 END  
--EOF HIT AFTER 12.1  
*END (47)  
:  
:
```

The last example points to several differences between the Edit COPY and the PCL COPY: The Edit COPY can only specify disk filenames; the PCL COPY can specify or imply devices (e.g., ME, DC, LT) and filenames, either singly or in combination as appropriate. Note that the specification DC/ME is possible and results in no ambiguity, though in this case "DC/" must be specified or the file name may be written as 'ME'. A second difference is that the PCL COPY TO ME, though it accepts keyed files, does not display the keys as sequence numbers as does Edit TY; it is functionally the same as Edit TS in this respect.

The output option K must be used to display keys (in addition to the record sequence numbers) in a format comparable to the Edit TY display.



The next example is designed simply to illustrate these differences as well as to further clarify the merging action of PCL COPY on keyed files.

Example 17. Keyed-File Update and Display (Further Examples)

```
⋮  
!BUILD FILA (RET)  
  1.000 LINE 1 IN FILA (RET)  
  2.000 LINE 2 IN FILA (RET)  
  3.000 LINE 3 IN FILA (RET)  
  4.000 LINE 4 IN FILA (RET)  
  5.000 (RET)  
!BUILD FILB,.5,.5 (RET)
```

Here the user requests a new file starting with sequence number .5 and incrementing by .5 also

```
0.500 LINE 1 IN B (RET)  
1.000 LINE 2 IN B (RET)  
1.500 LINE 3 IN B (RET)  
2.000 LINE 4 IN B (RET)  
2.500 LINE 5 IN B (RET)  
3.000 LINE 6 IN B (RET)  
3.500 LINE 7 IN B (RET)  
4.000 (RET)  
!BUILD FILC,2,.75 (RET)
```

and a new file starting at 2 and incrementing by .75.

```
2.000 LINE 1 IN C (RET)  
2.750 LINE 2 IN C (RET)  
3.500 LINE 3 IN C (RET)  
4.250 LINE 4 IN C (RET)  
5.000 LINE 5 IN C (RET)  
5.750 LINE 6 IN C (RET)  
6.500 (RET)  
!COPY FILA,FILB,FILC TO DC/ME (RET)
```

He combines the three files on new disk file ME.

```
!COPY DC/ME (RET)
```

With PCL COPY he displays file ME on device ME.

```
LINE 1 IN B  
LINE 2 IN B  
LINE 3 IN B  
LINE 1 IN C  
LINE 5 IN B  
LINE 2 IN C  
LINE 6 IN B  
LINE 3 IN C  
LINE 4 IN FILA  
LINE 4 IN C  
LINE 5 IN C  
LINE 6 IN C
```

```
!EDIT ME (RET)  
EDIT HERE  
*TY .5-6 (RET)
```

Then he displays it with Edit.

```

0.500 LINE 1 IN B
1.000 LINE 2 IN B
1.500 LINE 3 IN B
2.000 LINE 1 IN C
2.500 LINE 5 IN B
2.750 LINE 2 IN C
3.000 LINE 6 IN B
3.500 LINE 3 IN C
4.000 LINE 4 IN FILA
4.250 LINE 4 IN C
5.000 LINE 5 IN C
5.750 LINE 6 IN C
--EOF HIT AFTER 5.75
*END (R)

```

Note that the merging action of the multiple-file PCL COPY eliminates duplicately keyed records on file ME by successive replacement: record n from FILB replaces record n from FILA, and is in turn replaced by record n (if any) from FILC. Only record 4.000 survives from FILA, for example. If the LN option had been used on output, all records in the three input files would have been kept, and the records in file ME would be assigned new keys.

```

!PCL (R)
PCL D00 HERE
<LIST (R)

```

Now he asks for a listing of current disk-file names, to see which are deletable.

```

FILA
FILB
FILC
LOPRIM
ME
MOD1
MOD2
PRIMES
VPRIM
<DELETE FILA, FILB, FILC, 'ME', MOD1, MOD2 (R)
.. 6 FILES DELETED
<END (R)
:
:

```

#### Example 18. Building and Concatenating Unkeyed Files

In this example, the user creates two unkeyed files using PCL COPY; in most real instances of file concatenation, however, the files are outputs of other processors, e. g., FORTRAN. The user copies the files in the desired order to a single new file. A display of the resultant file shows the ordering of records produced by a multiple unkeyed-file copy. This example also shows how to copy a file to the system line printer. (Note that permission for such use of central-site peripherals requires explicit installation authorization; the system carries a record of this authorization.)

```

:
:
!PCL (R)
PCL D00 HERE

<COPY ME TO A (R)

```

The user requests a copy of terminal input to file A.

.\_1ST LINE IN A (RET)  
.\_2ND LINE IN A (RET)  
.\_3RD LINE IN A (RET)  
.\_4TH LINE IN A (RET)  
.\_ (ESC) F

He enters input to new file A from the terminal. PCL prompts for input of each data line. An Escape F sequence ends the data input, i. e., indicates end-of-file.

<COPY ME TO B (RET)  
.\_1ST LINE IN B (RET)  
.\_2ND LINE IN B (RET)  
.\_3RD LINE IN B (RET)  
.\_4TH LINE IN B (RET)  
.\_ (ESC) F

He enters input to new file B from the terminal.

<COPY DC/A,B TO DC/C (RET)

He copies files A and B in succession to form new file C, incidentally showing the syntax of explicit device identification (optional) in the case of multiple-file specification.

<COPY C TO ME (RET)

He now copies the contents of file C to the terminal.

1ST LINE IN A  
2ND LINE IN A  
3RD LINE IN A  
4TH LINE IN A  
1ST LINE IN B  
2ND LINE IN B  
3RD LINE IN B  
4TH LINE IN B

<COPY A TO LP (RET)

He then asks PCL to print file A on the system printer.

<DELETE A (RET)  
.. 1 FILES DELETED  
<END (RET)  
!  
:  
:

## 5. USING LANGUAGE PROCESSORS

### INTRODUCTION

The term "language processor" refers to a processor that processes a specific programming language. Such processing consists essentially of some form of translation of the source language to the internal language of the computer, or machine language. (This machine-language translation is also commonly referred to as "object code".)

The most frequently used language processors available under CP-V in on-line mode are BASIC, Extended FORTRAN IV, ANS COBOL, Meta-Symbol, and APL. Although these processors are also available for batch-mode operations, this guide is limited to a description of their on-line usage.

It is important at this point to distinguish between a programming language and the on-line command language associated with it. You use statements (i.e., sentences) of the programming language to form a program, whereas the commands are used to control what is done to or with that program. This chapter is intended to illustrate elementary uses of the command languages. (Succeeding chapters cover increasingly complex usages.) Therefore, to understand the program content of any of the following examples, knowledge of the relevant programming languages is necessary.

The following manuals contain descriptions of the language processors:

- BASIC/LN,OPS Reference Manual, 90 15 46.
- Extended FORTRAN IV/LN Reference Manual, 90 09 56.
- Extended FORTRAN IV/OPS Reference Manual, 90 11 43.
- ANS COBOL/LN Reference Manual, 90 15 00.
- ANS COBOL/OPS Reference Manual, 90 15 01.
- Meta-Symbol/LN,OPS Reference Manual, 90 09 52.
- APL/LN,OPS Reference Manual, 90 19 31.

### BASIC

The CP-V BASIC processor is a compiler for a significantly extended and enhanced Xerox version of the standard BASIC language (Beginner's All-Purpose Symbolic Instruction Code), a mathematical language designed specifically for time-sharing usage.

BASIC is particularly suited to small and medium scale computational applications. The outstanding advantage of BASIC is that it is easy to learn and simple to use. It is an ideal "starter" language, even though it does offer sophisticated problem-solving capabilities.

The BASIC processor is called with the TEL command BASIC. The processor then prompts for either BASIC program statements or BASIC commands with a "greater than" (>) character. During program execution, it prompts for program-requested terminal input (if any) with a question mark (?). When you have finished using BASIC, you exit back to TEL by giving the SYSTEM command.

Since BASIC includes a program-building and editing facility, a program file need not be built under EDIT (as is the general case for FORTRAN and Meta-Symbol programs).

A useful Xerox enhancement of BASIC is its capability for direct execution of individual statements. This allows you to operate BASIC in the "desk-calculator mode", without building a program; it also provides a powerful on-line debugging feature. These topics are discussed in a later section of this chapter.

### PROGRAM BUILDING, EDITING, AND EXECUTION

Having called BASIC, you build a source program simply by entering BASIC program statements — each beginning with the required one to five digit stepnumber (see following example)—in response to the prompt character (>). Typing error corrections can be made before the line is released with the  $\text{Ⓜ}$ ,  $\text{ⓃX}$ , or  $\text{X}^c$  controls as usual. Program statements entered in this fashion reside in an internal program-text area and constitute the current program.

The complete set of statements that are to constitute a given program need not be entered consecutively (e.g., BASIC commands may intervene) and need not be entered in a sequence corresponding to their step numbers. The step numbers of the individual statements completely control the logical ordering of the statements within the program, providing for automatic insertion, replacement, and deletion of single statements on the basis of relative step numbers, as follows:

- Insertion - A statement entered with a step number falling in numerical sequence between the step numbers of two previously entered statements is automatically inserted between those two statements.
- Replacement - A statement entered with a step number matching the step number of a previously entered statement automatically replaces that previously entered statement.
- Deletion - A step number followed immediately by  $\text{\textcircled{C}}$ , i.e., a "null statement", causes any previously entered statement having a matching step number to be deleted.

(Explicit editing commands that can affect more than one statement are covered in a subsequent section.)

After entering a program in this manner, you can have it compiled, error-checked, and executed (if no detectable errors exist) by issuing the RUN command. Syntax (i.e., language) errors, if any, will be reported by BASIC, and a prompt character (>) issued. You may at this point correct these errors, via statement insertion, replacement, or deletion as described above. Note that when terminal input is requested by your program during its execution, a question mark (?) is issued as a prompt character.

Once a program has been tested and is known to be working correctly, you can request subsequent execution with the command FAST instead of RUN. FAST bypasses the checking of indices for subscripted variables.

The following example illustrates three intrinsic—or built in—functions: DEG(x) - convert x from radians to degrees; ASN(x) - calculate arcsin of x, in radians; and ABS(x) - use absolute value of x. The first two, DEG and ASN, are specific CP-V additions to the standard BASIC language.

#### Example 19. BASIC Program Building, Editing, and Execution

```

:
:
!BASIC  $\text{\textcircled{C}}$ 

    The user calls the BASIC subsystem, and begins to build a program, entering a BASIC statement in
    response to each prompt character.

>10 REM SAMPLE PROGRAM  $\text{\textcircled{C}}$ 
>15 REM $A IN STMT 20 IS A STRING VARIABLE  $\text{\textcircled{C}}$ 
>20 $A = "COMPUTE ARCSINE OF X, IN DEGREES"  $\text{\textcircled{C}}$ 
>30 PRINT $A  $\text{\textcircled{C}}$ 
>40 FOR I = 1 TO 5  $\text{\textcircled{C}}$ 

    After typing the minus-sign (or dash) character by mistake - i.e., by forgetting to shift - he uses a  $\text{\textcircled{C}}$ ,
    echoed as \, to erase it and continues.

>50 INPUT X  $\text{\textcircled{C}}$ 
>60 PRINT DEG (ASN(X)) " = ARCSIN OF "X"  $\text{\textcircled{C}}$ 
>70 NEXT I  $\text{\textcircled{C}}$ 
>80 END  $\text{\textcircled{C}}$ 
>RUN  $\text{\textcircled{C}}$ 

    He enters the final statement (step 80) and then requests compilation and execution with the RUN
    command.

```

```

16:18 NOV 09 RUNIDAA...
COMPUTE ARCSINE OF X, IN DEGREES
?.001 (RET)
5.72958E-02 = ARCSIN OF 1.00000E-03
?.707 (RET)
44.9913 = ARCSIN OF .707000
?-0.707 (RET)
-44.9913 = ARCSIN OF -.707000
?.246 (RET)

```

He now tries a value that is much too large.

```
60 ASN-ACS ARG ERROR
```

He gets an error message, and a return to editing/command level (where he will enter additional program statements for detecting the out-of-range condition).

```

>55 IF ABS(X) > 1 THEN 90 (RET)
>90 PRINT X; "VALUE OUT OF RANGE" (RET)
>95 GOTO 70 (RET)
>RUN (RET)

```

After inserting steps 55, 90, and 95, he tests again.

```

16:27 NOV 09 RUNIDAA...
COMPUTE ARCSINE OF X, IN DEGREES
?.1.5 (RET)
1.50000 VALUE OUT OF RANGE
? (RET) ≥

```

He gets the desired result on the exception condition, and terminates execution.

⋮

## PROGRAM SAVING, LOADING, AND RENAMING

A program created under BASIC can be saved on a permanent file with the SAVE command, and can be subsequently reloaded for execution with the LOAD command. The command form SAVE ON filename (where filename does not name an already-existing file) creates a file named as specified, on which your current program is copied. If, on the other hand, you use the command SAVE OVER filename, your current program is copied on the named file. If the specified name is not that of an already existing file, a new permanent file is created.

To retrieve a saved program, you use the command LOAD filename. In general, the LOAD command causes loading of the named program into the program-text area, but the results of this loading will depend upon the state of this area at the time the command is given. If the program-text area is empty, i.e., no current program has been entered or loaded during the current BASIC session, the saved program simply becomes the current program.

If, however, the program-text area is not empty at the time of the LOAD, the result depends on the current operating mode, or status. If the status is not "running", i.e., not execution mode, then the statements of the saved program are "woven" into the current program, on the basis of step numbers. This "weaving" process is analogous to a linked-file PCL COPY  $f_1, f_2$  to  $f_3$ .

The result is not usually the one desired; it can be circumvented by using the command CLEAR, prior to the LOAD. The CLEAR command clears the contents of the program-text area, i.e., the current program. This command may be given at any time. If BASIC is in execution mode, or "running", the program-text area is automatically clear prior to loading. The operating mode can be ascertained at any time by use of the

STATUS command. Use it frequently to become familiar with mode transitions. (The responses to STATUS are EDITING, COMPILING, or RUNNING.)

### ADDITIONAL EDITING FACILITIES

Two BASIC editing commands that facilitate the display and deletion of current-program statements are LIST and DELETE, respectively. These two commands have identical formats; LIST is shown:

```
LIST [s1 [-s2]][,s3 [-s4]]...
```

where s<sub>i</sub> is a step number.

If one or more pairs of dash-separated step numbers (s<sub>1</sub>-s<sub>2</sub>, etc.) are specified, the corresponding range(s) of statements are listed or deleted. If only s<sub>1</sub> (,s<sub>3</sub>, etc.) is specified, only the corresponding individual statement(s) is listed or deleted. If no step number is specified in a LIST command, the entire current program is listed. Note: The command form DELETE Ⓢ is ignored; to delete the entire program you must use the CLEAR command.

#### Example 20. Program Modification, Saving, and Reloading

```
:
```

(This example takes up at the point at which we left Example 19.)

```
>10 Ⓢ
```

```
>15 Ⓢ
```

The user deletes the two REM statements (which are not necessary to the program's operation) and, below, requests a display (LIST) of the current program.

```
>LIST Ⓢ
```

```
20 $A = "COMPUTE ARCSIN OF X, IN DEGREES"
```

```
30 PRINT $A
```

```
40 FOR I = 1 TO 5
```

```
50 INPUT X
```

```
55 IF ABS(X) > 1 THEN 90
```

```
60 PRINT DEG (ASN(X)) " = ARCSIN OF "X
```

```
70 NEXT I
```

```
80 END
```

```
90 PRINT X; "VALUE OUT OF RANGE"
```

```
95 GOTO 70
```

```
>25 REM NEXT STMT SHOWS STRING CONCATENATION (+) Ⓢ
```

```
>30 PRINT $A + ", TESTING FOR OUT-OF-RANGE VALUES" Ⓢ
```

```
>40 FOR I = 1 TO 2 Ⓢ
```

```
>LIST 20-40 Ⓢ
```

He inserts step 25, replaces steps 30 and 40, and lists steps 20 through 40 to observe the results.

```
20 $A = "COMPUTE ARCSIN OF X, IN DEGREES"
```

```
25 REM NEXT STMT SHOWS STRING CONCATENATION (+)
```

```
30 PRINT $A + ", TESTING FOR OUT-OF-RANGE VALUES"
```

```
40 FOR I = 1 TO 2
```

```
>RUN Ⓢ
```

```
14:53 NOV 10 RUNIDAA...
```

```
COMPUTE ARCSIN OF X, IN DEGREES, TESTING FOR OUT-OF-RANGE VALUES
```

```
? .253877 Ⓢ
```

```
14.7071 = ARCSIN OF .253877
```

```
? -.00000009 Ⓢ
```

```
-5.15662E-06 = ARCSIN OF -9.00000E-08
```

```
80 HALT
```

```
>45 PRINT "ENTER SINE VALUE, PLEASE" (RT)
```

He inserts a final modification, then saves the program on new permanent file ARCSINE.

```
>SAVE OVER ARCSINE (RT)
```

```
>CLEAR (RT)
```

```
>LOAD ARCSINE (RT)
```

After clearing the program-text area, he loads the saved copy back in, and tries it once more (note the new current-program name when he executes it again).

```
>RUN (RT)
```

```
15:04 NOV 10 ARCSINE...
```

```
COMPUTE ARCSIN OF X, IN DEGREES, TESTING FOR OUT-OF-RANGE VALUES
```

```
ENTER SINE VALUE, PLEASE
```

```
? .001 (RT)
```

```
5.72958E-02 = ARCSIN OF 1.00000E-03
```

```
ENTER SINE VALUE, PLEASE
```

```
? .002 (RT)
```

```
.114592 = ARCSIN OF 2.00000E-03
```

```
80 HALT
```

```
>
```

```
⋮
```

### TEMPORARY SAVING, RENAMING, AND RENUMBERING OF CURRENT PROGRAM

The FILE and NAME commands, used in conjunction with CLEAR and LOAD, provide a convenient short-cut means of temporarily saving the current program, e.g., for "backup" purposes prior to extensive modification, and of renaming the current program for the execution-report heading. (You will have noticed a default program name, i.e., RUNIDAA, in the previous examples – this default name varies from session to session.)

The command FILE simply causes the current program to be copied onto a temporary file (known as the "runfile" in other Xerox operating-system environments). This copy of the program can be explicitly named by using the command NAME newname prior to the FILE command. If the NAME command is not used (or no name is specified) the default program name applies. At any point after a program has been FILEd, a CLEAR and then a LOAD, with no filename, reestablishes the field copy as the current program. The copy will remain on file during the whole terminal session until another program is FILEd over it.

When using FILE and LOAD (no name), it is important to remember that these commands always refer to the last runfile referred to with a NAME command, if one or more have been issued. If not, the default runfile name is "current". (The default runfile name can be reestablished with a null NAME command, i.e., simply NAME (RT).) Multiple runfiles can exist concurrently, resulting from multiple pairs of NAME newname and FILE commands having been issued; they can be selectively retrieved by a LOAD name command. Note: If NAME newname is used, newname may not also be used as the name of a permanent file during the same terminal session.

The command sequence for changing the execution name of a current program would be

```
⋮  
>NAME newname  
>FILE  
>CLEAR  
>LOAD  
_
```



Note that in this instance the CLEAR command that precedes the LOAD is functionally unnecessary since the current program and the filed program are identical, but it is included because of resultant savings in processing time and space.

At any time you can cause your current program to be automatically renumbered by giving a RENUMBER (or REN) command. Its format is

REN[UMBER] [s<sub>1</sub> [,s<sub>2</sub> [,i]]]

where

s<sub>1</sub> is the initial new step number (default value = 100).

s<sub>2</sub> is the old step number at which to begin renumbering (default value = 1, i.e., "first statement").

i is the increment by which successive new step numbers are to be increased (default value = 10).

(For example, REN alone is equivalent to RENUMBER 100, 1, 10; REN, 10 equivalent to RENUMBER 100, 10, 10; REN,,5 to RENUMBER 100, 1, 5.)

This command allows you to clean up, or regularize, the numbering of your program with full control over the starting value, the point in the program at which to begin, and the step-value spacing. During the renumbering process, proper replacements are made for all step-number references, i.e., in GOTO statements, THEN clauses, etc., within the program. If the renumbered program was loaded from a permanent file, simply resaving it over the same file will make the renumbering "permanent".

#### Example 21. Temporary Filing, Reloading, and Renaming

⋮

(Continued from previous example.)

>FILE Ⓢ

The user files the current program (ARCSINE) on a temporary "runfile", under the default "runfile" name - whatever that is.

>CLEAR Ⓢ

He then clears the current program, to play safe.

>LOAD VPRIM Ⓢ

>RUN Ⓢ

He loads and executes the program VPRIM, previously built under Edit. (If it were now to be resaved over VPRIM, that file would no longer be keyed, as BASIC is not a keyed-file oriented processor - BASIC step numbers are part of the file records, not record keys.)

```

18:30  NOV 12 VPRIM...
ENTER LOWER BOUND FOR PRIMES
?100 (RET)
ENTER UPPER BOUND FOR PRIMES
?250 (RET)
101 103 107 109 113 127 131 137 139 149 151 157 163 167 173 179 181 191

193 197 199 211 223 227 229 233 239 241
180 HALT
>STATUS (RET)

```

Following a successful execution of VPRIM, he requests the current status of BASIC.

```

RUNNING
>LOAD (RET)

```

He now loads the default-named temporary file, without a preceding CLEAR, since clearing is automatic in execution mode.

```

>RUN (RET)
18:05  NOV 12 RUNIDAA...
COMPUTE ARCSIN OF X, IN DEGREES, TESTING FOR OUT-OF-RANGE VALUES
ENTER SINE VALUE, PLEASE
? (RET) ←
>NAME ARC (RET)

```

He breaks off execution, names another temporary "runfile", and (below) files the current program on it.

```

>FILE (RET)
>CLEAR (RET)
>LOAD (RET)

```

Note here that LOAD with no name specified will refer to the last-named "runfile" (if any – otherwise to the default-named "runfile").

```

>RUN (RET)
18:09  NOV 12 ARC...
COMPUTE ARCSIN OF X, IN DEGREES, TESTING FOR OUT-OF-RANGE VALUES
ENTER SINE VALUE, PLEASE
.2.4 (RET)
23.5782 = ARCSIN OF X
ENTER SINE VALUE, PLEASE
? (RET) ←
>SYS (RET)

```

This command, SYS, causes an exit from BASIC and a return to TEL.

```

!OFF (RET)

```

## DIRECT STATEMENT EXECUTION AND DESK-CALCULATOR MODE

Direct statements are BASIC statements entered without a step number either in editing or execution mode. They can be executed either with or without a current program – the latter being called "desk-calculator mode". In normal execution mode, i.e., with a current program, direct statements are used for on-line debugging, or program verification.

Direct statements are recognized as such by BASIC and are executed (if possible) immediately. The most commonly used forms of direct statements in editing or desk-calculator mode are PRINT statements containing an arithmetic expression, and one or more LET statements followed by a PRINT statement. For on-line debugging, GOTO, LET, and PRINT are commonly used, singly or in combination, referring to variables and statements in the current program.

Most BASIC statements can be issued as direct statements; the few exceptions, e.g., FOR, NEXT, are statements that cannot be expected to "execute" by themselves in any meaningful way.

A further enhancement of the direct-statement execution capability is the EXECUTE (or EXE) command, which is provided specifically for convenience in on-line debugging and verification. The command format is

EXE[CUTE][s<sub>1</sub>][-s<sub>2</sub>]

where s<sub>1</sub> and s<sub>2</sub> refer to step numbers in the current program.

In either editing or execution mode, a step number reference causes one statement or a range of statements of the current program to be executed. Note that if a range is specified, the last statement in the range, s<sub>2</sub>, is not executed. (You can achieve the same effect by combinations of direct statements, but the EXECUTE command is significantly faster and more convenient.)

#### Example 22. Use of Direct Statements - "Desk-Calculator Mode"

```
⋮  
⋮  
!BASIC Ⓢ  
>PRINT DEG(ASN(.5)) Ⓢ
```

The user calls BASIC and immediately enters a direct statement, i.e., one with no line number. Note that (1) there is no current program, and (2) the user doesn't have to be in execution mode.

```
30.0000  
>PRINT DEG(ASN(1.1)) Ⓢ
```

Now he tries one that should result in an error comment.

```
ASN-ACS ARG ERROR  
>LET X=SQR(2)/2 Ⓢ
```

Then he tries a sequence of two statements with a common variable.

```
>PRINT DEG(ASN(X)) Ⓢ  
45.0000  
>SYS Ⓢ
```

```
!OFF Ⓢ
```

```
-accounting summary-
```

## ABBREVIATIONS OF BASIC COMMAND VERBS

All of the BASIC command verbs may be shortened to the first three letters, i.e., CLE(ar), DEL(ete), LOA(d), etc. In addition, you may use the following short forms of the SAVE command: SAV N for SAVE ON, and SAV VER for SAVE OVER.

Another direct-statement execution example follows, illustrating EXECUTE command usage.

### Example 23. Using the EXECUTE Command

```
1BASIC (M)  
>LOAD VPRIM (M)  
>1 PRINT 'P='P;'I='I;'Q='Q;'S='S' (M)
```

The user inserts a statement that facilitates inspection of variable values as he executes selected portions of it below.

```
>LIST (M)  
1 PRINT 'P='P;'I='I;'Q='Q;'S='S'  
10 REM GENERATE PRIME NUMBERS (>3) WITHIN USER-SET LIMITS  
20 PRINT 'ENTER LOWER BOUND FOR PRIMES'  
30 INPUT L  
40 PRINT 'ENTER UPPER BOUND FOR PRIMES'  
50 INPUT U  
60 P=1  
70 P=P+4,S=0  
80 FOR I=5 TO SQR(P)+1 STEP 2  
90 Q=INT (P/I)  
100 IF Q*I=P THEN 150  
110 NEXT I  
120 IF P<L THEN 150  
130 IF P>U THEN 180  
140 PRINT P'TAB(0)  
150 IF S=1 THEN 70  
160 S=1, P=P+2  
170 GOTO 80  
180 END  
>RUN (M)  
13:02 NOV 18 VPRIM...  
P=0 I=0 Q=0 S=0
```

ENTER LOWER BOUND FOR PRIMES

?17 (M)

ENTER UPPER BOUND FOR PRIMES

?17 (M)

17

180 HALT

>EXE 1 (M)

P= 19 I= 5 Q= 3 S= 1

>EXE 70-120 (M)

120 -EXEC- HALT

>EXE 1 (M)

P= 23 I= 5 Q= 4 S= 0

>LET U=50 (M)

Here the user enters a direct statement to change the upper-bound parameter.

>EXE 110-150 (M)

23

150 -EXEC- HALT

```

>EXE 150-180 (SET)
  29 31 37 41 43 47
  180 -EXEC- HALT
>SYS (SET)

!OFF (SET)

-accounting summary-

```

## FORTRAN IV (FORT4)

The Extended FORTRAN IV processor is a mathematical-language compiler that processes an extended version of the standard FORTRAN IV language. It is appropriate to the solution of medium-to-large scale computational problems, and offers full file input/output capabilities. Unlike BASIC - compile-and-execute processor - it produces savable and reusable object programs, eliminating the need to recompile frequently used programs.

A related facility, the FORTRAN Debug Package (FDP), permits on-line debugging during program development and checkout. Use of FDP is covered in Chapter 7, "Debugging User Programs". FORT4 accepts source-program input either from a previously built source file or directly from the user's terminal, a line at a time. Normally, the former method is employed, the file having been built with the Edit processor.

The line-at-a-time method has an advantage for novice FORTRAN users in that "conversational" syntax-error diagnostic comments are issued immediately following input of the line to which they refer, an effective learning device. (When using this method, a source file can be preserved for subsequent modification and recompilation by means of the special compilation option SO, and an appropriate !SET command, as shown in a subsequent example.)

The standard outputs of the compilation process are the compiled object program, called the relocatable object module (ROM), and error comments. A listing of the source program may be (and generally is) requested, with the LS compilation option, described below.

### CONTROLLING THE COMPILATION PROCESS

FORT4 is called with the TEL command FORT4. The format of this command is:

```
!FORT4 [source] [ON [rom] [,list]]
      [ME ] [OVER
```

where

source specifies a disk file containing the source program.

ME indicates source input from the user's terminal (the default assumption for this field).

rom specifies the disk file that is to receive the object program (the default temporary file name is "\$").

list specifies the destination of source-listing output: either a disk file (fid), the terminal (ME), or central-site line printer (LP) - no default assumption is made.

Note that the ON or OVER qualifier refers only to the rom file, but one of the two must be given if either rom or list is specified. For example: FORT4 ME ON ,LISTFIL.

This command, then, serves to call FORT4, identify the input source, and direct the compiler outputs.

Note that you can direct the compiler outputs prior to giving the FORT4 command with the !OUTPUT, !LIST, and !COMMENT commands (the latter allows a separation of source-listing and error-commentary destination). If the OUTPUT command is used, the default value for the rom given above does not apply.

After the FORT4 command, the processor responds with the question OPTIONS>, at which point you may enter one or more compilation options. These control the compilation process and are used primarily to request optional outputs or suppress standard outputs. The options controlling listing of outputs are:

- LS - Produce source-program listing and full compilation summary.
- LO - Produce source- and object-program listing, and full compilation summary.
- PS - Produce partial instead of full compilation summary (default option).
- NS - Suppress compilation summary.

Note that if none of the above are specified, a partial summary only is produced, as if the PS option were specified. The PS or NS option can be used in conjunction with LS or LO, or NS alone may be specified (no listing, no summary). If you use the LS or LO option, a destination for this output must be specified in the FORT4 command.

There are many other options, mostly having to do with the nature of the source input and the object output. These are described in the CP-V/TS Reference Manual, 90 09 07, and the FORTRAN IV/OPS Reference Manual, 90 11 43.

If you enter source lines directly from the terminal (i.e., FORT4 ME ...), you may want to use the SO option, which requests that the source program be reproduced as an output; in this case you must assign this output (the M:SO DCB) to a file with a !SET command (see Chapter 11, "DCB Assignments"). Several examples are given below.

Following a successful compilation, link-loading and execution of the resulting object program can be requested with the !RUN command. This command, as well as the related !LINK and !START commands are described in Chapter 6, "Loading and Executing Object Programs". Simple uses of !RUN are shown in the following examples.

In the following example, the user employs Edit to create a file, INPUT, containing the source program. Note that the source lines contain a tab character: for FORT4, only one tab per line is accepted, and its value is fixed by the compiler as column 7 (regardless of specified setting). The example program computes the length of a three-dimensional vector, D, for input values of X, Y, and Z. Execution-time input to the program is initially from file DATA; input is terminated by a zero value for X. Output is initially directed to the terminal.

The user then decides to execute again with new X, Y, and Z values from the terminal. Accordingly, he changes the DCB assignments for FORTRAN I/O units 5 and 6 so that data input is from the terminal and program output goes to the disk file VALUES. To examine this output, he issues a !COPY command to copy this file to the terminal.

#### Example 24. Compiling and Executing FORTRAN Input from a File

```

:
:
!TABS 7 (REF)

The user sets a tab value of 7, so that he can see the tab effect as he builds the file.

!BUILD INPUT (REF)
1.000 (TAB) WRITE (6,100) (REF)
2.000 10 (TAB) READ (5,200) X,Y,Z (REF)
3.000 (TAB) IF (X) 20,50,20 (REF)
4.000 20 (TAB) D = SQRT(X**2+Y**2+Z**2) (REF)
5.000 (TAB) WRITE (6,300)X,Y,Z,D (REF)
6.000 (TAB) GO TO 10 (REF)
7.000 50 (TAB) STOP (REF)
8.000 100 (TAB) FORMAT (7X,1HX,11X,1HY,11X,1HZ,11X,1HD) (REF)
9.000 200 (TAB) FORMAT (3E) (REF)
10.000 300 (TAB) FORMAT (4(1X,E11.3)) (REF)
11.000 (TAB) END (REF)
12.000 (REF)

He builds a file of source input, named INPUT.

```

!BUILD DATA <sup>(REF)</sup>

1.000 1.0,2.0,3.0 <sup>(REF)</sup>

2.000 1.0,1.0,1.0 <sup>(REF)</sup>

3.000 0.0 <sup>(REF)</sup>

4.000 <sup>(REF)</sup>

He builds a program-data file.

!COMMENT ON ME <sup>(REF)</sup>

and requests error commentary at the terminal.

!FORT4 INPUT ON BIN <sup>(REF)</sup>

He asks for a compilation of INPUT, with ROM output on BIN.

EXT.FORTRAN IV,VERSION D00

OPTIONS> <sup>(REF)</sup>

and accepts the default option, partial summary.

1: WRITE (6,100)

11: END

HIGHEST ERROR SEVERITY: 0 (NO ERRORS)

The partial summary prints at the terminal.

!SET F:5 /DATA;IN <sup>(REF)</sup>

The user assigns the file DATA to the F:5 DCB, and defines it as an input file. (This is a "file assignment".)

!SET F:6 UC <sup>(REF)</sup>

He assigns the user's terminal to the F:6 DCB, via the operational label UC. (This is a "device assignment".)

!RUN <sup>(REF)</sup>

He requests a run, i.e., link-load and execution, of the program. Since the RUN command assumes as its input the results of the latest compilation or assembly if no input file is specified, he does not need to specify BIN.

LINKING \$

P1 ASSOCIATED

The loader's messages print.

<u>X</u>	<u>Y</u>	<u>Z</u>	<u>D</u>
<u>.100E+01</u>	<u>.200E+01</u>	<u>.300E+01</u>	<u>.374E+01</u>
<u>.100E+01</u>	<u>.100E+01</u>	<u>.100E+01</u>	<u>.173E+01</u>

\*STOP\* 0

Then the program's output appears, and a normal program-halt is indicated.

!SET F:5 UC <sup>(REF)</sup>

The user resets the input unit to the terminal

!SET F:6 /OUTPUT;OUT <sup>(REF)</sup>

and the output unit to a file, named OUTPUT.

!RUN BIN (REF)

He reruns, this time specifying the ROM name (not actually required in this case, as explained above).

LINKING BIN

P1 ASSOCIATED

?4.4,5.5,6.6 (REF)

?0.0 (REF)

The program-input-request prompt is given, and the user enters a set of values and a zero value to indicate end of data.

\*STOP\* 0

A normal program halt is indicated.

!COPY OUTPUT (REF)

The user requests a copy of the output file to the terminal.

X	Y	Z	D
.440E+01	.550E+01	.660E+01	.965E+01

!  
:  
:

The next example shows a very simple program entered directly from the terminal. The user requests the source program to be reproduced (SO), and uses a !SET command to assign a source-output file, SOURCE. He also uses the !SET command to assign FORTRAN unit 6, the program output, to the terminal.

#### Example 25. Submitting Terminal Input for FORTRAN Compilation

!  
:  
:  
!SET M:SO /SOURCE (REF)

The user sets the DCB for source output produced by the compiler, M:SO, to the file SOURCE. Here, since he does not specify a file function (e.g., IN, OUT), OUT is assumed by default.

!ESC\ (REF)

This sequence will cause the FORT4 prompt character (>) to be excluded as part of the input line when tabbing. The backslash prints automatically as a result of the (ESC) C sequence.

!FORT4 ME (REF)

He asks for a compilation of direct terminal input.

EXT. FORTRAN IV, VERSION D00

OPTIONS> NS,SO (REF)

He suppresses the partial summary (NS), and requests source output (SO).

>C THIS EXAMPLE ILLUSTRATES HOW SOURCE LINES ARE ENTERED (REF)

>C DIRECTLY FROM THE TERMINAL, AND HOW A LINE IS CONTINUED. (REF)

> (TAB) WRITE (6,100) (REF)

>100 (TAB) FORMAT (1X, : (REF)

> C25HTHIS IS A CONTINUED LINE.) (REF)

> (TAB) END (REF)

FORTAN prompts for source input with >. Note that the C in the fifth line is in column 6, the rest following a tab starting in column 7. (The user assumes that the tab setting of 7 from the previous example is still in effect.)



!ESC C \ RET

The user turns off the tab relative mode.

!SET F:6 UC RET

He sets the output unit to the terminal (operational label UC),

!RUN RET

and requests a run.

LINKING \$

PI ASSOCIATED

THIS IS A CONTINUED LINE.

\*STOP\* 0

!COPY SOURCE TO ME RET

He displays the reproduced source file.

C THIS EXAMPLE ILLUSTRATES HOW SOURCE LINES ARE ENTERED  
C DIRECTLY FROM THE TERMINAL, AND HOW A LINE IS CONTINUED.

WRITE (6,100)

100 FORMAT (1X,

C25HTHIS IS A CONTINUED LINE.)

END

Note that the "to be continued" marker (;) in the fourth line has been stripped off by FORT4.

!OFF RET

-accounting summary-

## COBOL

COBOL (COmmon Business Oriented Language) is a language that is especially efficient in the processing of business problems. Such problems typically involve relatively little algebraic or logical processing. Instead, they most often manipulate large files of basically similar records in a relatively simple way. This means that COBOL mainly emphasizes the description and handling of data items and input/output records.

The COBOL compiler is called from an on-line terminal by the following command:

COBOL[sp]  $\left[ \begin{array}{l} \text{ON} \\ \text{OVER} \end{array} \right] [\text{rom}] [, \text{list}]$

where

sp specifies a source program and may be either a file identification (fid) or the terminal identification (ME). If no source file is specified, TEL assumes input is from the file/device currently assigned to the M:SI DCB. If the M:SI DCB is not assigned, TEL expects input to come from the terminal (ME). (Note that on-line DCB assignments are made explicitly by the SET command and implicitly by the COBOL command. Once set, DCB assignments remain in effect until reassignment by subsequent SET commands or specified COBOL options except for M:SI, which is reset at each job step.)

ON indicates that ROM output is to be on a new file.

OVER indicates that ROM output is to be over an existing file or on a new file.

rom specifies that the relocatable object module produced by compilation is to be directed to a specific file (fid). If no ROM is specified and no previous LIST command has been issued, no listing output is produced (list is assigned implicitly to the M:LO DCB).

list specifies that listing output is to go to a file (fid), a line printer (LP), or the terminal (ME). If list is not specified, TEL assumes that the listing output is to go to the file/device currently assigned to the M:LO DCB. If the M:LO DCB is not assigned, TEL produces no listing output.

When the compiler is entered, it sends a request for options to the terminal.

### OPTIONS?

If no options are desired, a carriage return may be entered following the request. This initiates the compilation.

If compilation options are desired, the word COBOL must be entered followed by the codes for the desired options. These codes are separated by commas and terminated by a carriage return or line feed character which initiates the compilation. A few of the options that are available are

GO – Specifies that a load-and-go copy of the object program is to be written via M:GO.

LO – Requests an object program listing via M:LO.

LS – Requests a source program listing via M:LO.

SO – Requests source output via M:SO.

Example 26 shows how to build and execute a COBOL program using the COBOL compiler.

### Example 26. Building and Executing a COBOL Program

```
!TABS 9,13 (RET)
```

The user sets the simulated tab stops for his terminal to columns 9 and 13. Since the COBOL prompt character will print in column 1 of his terminal, COBOL will interpret these tabs as being set in 8 and 12.

```
!SET M:SO DC/SOURCE (RET)
```

The user wants the source output file (SO) to be named SOURCE.

```
!COBOL ME ON ROM (RET)
```

The user calls the COBOL compiler and specifies that source input is to be read from the terminal.

```
COO COBOL  
OPTIONS?
```

The compiler identifies itself and requests compiler options.

```
!$COBOL GO, SO (RET)
```

The user enters a COBOL control command, specifying that he wants source output and a load-and-go copy of the object program.

```
!$ IDENTIFICATION DIVISION.(RET)  
!$ PROGRAM-ID. SIMPLE.(RET)  
!$ DATA DIVISION.(RET)  
!$ PROCEDURE DIVISION.(RET)  
!$ PARA-1. DISPLAY 'A.O.K' UPON PRINTER.(RET)  
!$ STOP RUN.(RET)  
!$ (RET)F
```

The programmer enters a COBOL program and then enters ESCAPE F to indicate that the program is ready for compilation. The program is compiled and the following diagnostic message is output:

```
***NUMBER OF DIAGNOSTIC MESSAGES 0***HIGHEST  
SEVERITY LEVEL 0***
```

```
!RUN ROM(NL)(NP) OVER LMN;BLIB:.COBLIB 41
```

Since there were no errors in the program, the user decides to execute it. The RUN command specifies that an executable load module named LMN is to be built using the object module named ROM, no public libraries or core libraries are to be searched, the BLIB: library in the COBLIB account is to be used to satisfy any external references, and the load module is to be executed.

```
LINKING ROM  
LINKING BLIB:  
A.O.K.
```

The message A.O.K. is printed on the terminal because the terminal is the default LO device when COBOL is run in the on-line mode.

## META-SYMBOL (META)

Meta-Symbol is a macro-assembler that processes an assembly language, Symbol, (which is a symbolic representation of the machine language) and macro-procedure language, Meta-Symbol (which is a powerful logical extension of the assembly language). Assembly language is the "lowest level" language normally used for programming.

The advantage of Meta-Symbol programming is the maximum speed and efficiency that is possible in the resultant object programs. Its disadvantage is that it is more time-consuming to learn and to use than "higher-level" languages such as FORTRAN.

Also available is an extensive and sophisticated debugging processor, Delta, designed specifically – though not exclusively – for debugging Meta-Symbol object programs. Its use is covered in Chapter 7 and in Example 47.

The META processor is called by the TEL command META. There are many examples throughout the following chapters that illustrate the use of META:

Example 38 shows an assembly and execution.

Example 43 shows use of OUTPUT, LIST, and COMMENT commands.

Example 44 shows use of SET commands before calling META.

Example 45 shows discontinuation and resumption of output while assembling with META.

These examples all illustrate the use of META to assemble from a source file. META can also be used to assemble source lines directly from the terminal, as shown in the following example. Unlike the FORT4 processor however, diagnostics are not produced until after the END statement is received. ("Diagnostic" is a general term for the warning and error commentaries resulting from the error checking performed by the assembler.)

The format of the META command is

META [source] [ON  
ME] [OVER [rom] [,list]]

where

source specifies a disk file containing the source program.

ME indicates source input from the terminal (the default assumption for this field).

rom specifies the disk file that is to receive the object program (the default temporary-file name is "\$").

list specifies the destination of the source-program listing: either a disk file (fid), the terminal (ME), or the line printer (LP) – ME is assumed by default but no listing output is produced (unless !LIST is issued during a subsequent interruption of the assembly).

Note that the ON or OVER qualifier refers only to the rom file, but one of the two must be given if either rom or list is specified.

The effect of the META command variable field is to assign the M:SI (source input) DCB, the M:GO ("go", or object output) DCB, and the M:LO (listing output) DCB to the source, rom, and list specifications, or to their defaults. Note also that if these DCBs have been assigned previously in the session, either by an OUTPUT, LIST, FORT4, or prior META command, the corresponding default values given above do not apply. (The effect of the COMMENT command is to explicitly assign the M:DO (diagnostic output) DCB; i.e., to specify a destination for diagnostics separate from the source listing, if any.)

After the META command is given, the processor asks for assembly options: WITH>. A description of these options for on-line usage can be found in the CP-V/TS Reference Manual, 90 09 07, Chapter 4. The only options we need mention here are SO (source output), which functions exactly as in a FORTRAN compilation – shown in the previous section – and SD (symbolic-debugging), which is covered in Chapter 7. Note that source-listing output is implicitly requested or suppressed by the list parameter in the META command, unless a LIST command is given before the META command.

Note also that the format of the assembler source listing is not very suitable for display at the terminal, and is best directed to the line printer (LP), or omitted. Comments go to the terminal (by default) in either case.

#### Example 27. Using META to Assemble Terminal Input

```
⋮  
!META ME RET  
The user asks for an assembly of terminal input, with no source listing.  
  
WITH> RET  
He doesn't request any assembly options and, below, begins to type in the source lines following  
META's prompt character (>). (A tab setting and tab characters could be used to achieve the desired  
starting columns as shown in later examples.)  
  
> *THIS EXAMPLE ILLUSTRATES DIRECT INPUT FROM TERMINAL. RET  
> *IT ALSO SHOWS HOW TO CONTINUE A LINE. RET  
> SYSTEM BPM RET  
> SYSTEM SIG7 RET  
> REF M:UC RET  
> START M:WRITE M:UC,(BUF,M; (CONTINUED LINE) RET
```

```

>      ES),(SIZE,26)  (CONTINUATION) (REF)
>      M:EXIT (REF)
>MES   TEXT 'EXAMPLE OF CONT',; (REF)
>      'INUED LINE.' (REF)
>      END START (REF)

```

```

*NO UNDEFINED SYMBOLS
*  ERROR SEVERITY LEVEL:  0
* NO ERROR LINES

```

```
!RUN (NP) (REF)
```

Here the library-search option NP is used to suppress association of the default public library, P1, by the loader, as it is only required for FORTRAN programs.

```

LINKING $
EXAMPLE OF CONTINUED LINE.

```

The program executes, printing its output, and control returns to TEL.

```
!OFF (REF)
```

## APL

APL is an acronym for A Programming Language, the language invented by Kenneth Iverson. APL is an interpretive, problem-solving language. As an interpretive language, APL does not wait until a program is completed to compile it into object code and execute it; instead, APL interprets each line of input as it is entered to produce code that is immediately executed. As a problem-solving language, APL requires minimal computer programming knowledge; a problem is entered into the computer and an answer is received, all in the APL language.

APL operates in three modes. In the Desk Calculator Mode, expressions may be entered for immediate execution. In the Function Definition Mode, expressions may be combined into programs and stored for future use. In the Function Editing Mode, functions that were previously stored may be modified.

The APL examples in this manual are written for operation on a standard 2741 APL terminal (that is, a 2741 terminal with an APL typeball). See Appendix B of the Xerox APL/LN, OPS Reference Manual, 90 19 31, for a description of how to use APL with other terminals.

Example 28 provides an example of logging on to CP-V with an APL terminal, calling APL, using APL in the Desk Calculator Mode, and logging off. In Example 29, APL is used in the Function Definition Mode and the Function Editing Mode.

### Example 28. Using APL in the Desk Calculator Mode

```
* (REF)
```

The user identifies the 2741 terminal to the system.

```

XEROX CP-V AT YOUR SERVICE
ON AT 10:16 MAY 16, '73
LOGON PLEASE: 2466,SMITH (REF)

```

The CP-V system identifies itself and the user logs on.

```
10:17 05/16/73 2466 50-37 [1]
```

```

o APL (REF)
APL-03/16/73
CLEAR WS

```

Note that TEL prompts with a ◦ character at an APL terminal. The user calls APL and APL acknowledges control and prints the workspace status.

```
456+2095+74 (RET)
```

2625

The user begins using APL in the Desk Calculator Mode by adding three numbers together. Note that APL provides the indentation but does not use a prompt character.

```
    L05*.5 (RET)
UNDEFINED
    L05*0.5
    ^
```

The user then unsuccessfully attempts to take the square root of 105.

```
    105*.5 (RET)
10.24695077
```

The square root operation is now successful.

```
    6 15 8 495 *2 (RET)
36 225 64 245025
```

In the above operation, the user requests the square of the numbers 6, 15, 8, and 495.

```
)OFF (RET)
```

```
CPU = .0069 CON= :08 INT = 13 CHG = 0
```

The user logs off from both APL and CP-V. If the command had been )OFF HOLD, the user would have been logged off from APL and control would have returned to TEL.

#### Example 29. Using APL in the Function Definition and Function Editing Modes

```
* (RET)
```

```
XEROX CP-V AT YOUR SERVICE
ON AT 09:44 MAY 17, '73
LOGON PLEASE: 356101,KEYS (RET)
```

```
09:45 05/17/73 356101 22-39 [1]
```

```
◦APL (RET)
APL-03/16/73
CLEAR WS
```

The user logs on and calls the APL processor.

```
ΔC+A HYP B (RET)
```

He decides to define a function that will calculate the length of the hypotenuse of a right triangle, given the lengths of the two sides. The del (▽) character signals function definition and is followed by the function name.

```
[1] C ← ((A*2)+B*2)*0.5 (RET)
```

```
[2] ▽ (RET)
```

The system responds with [1] and waits for the first program line. Each successive line is also numbered until the routine is closed by another ∇. (The user could have closed the function by placing the ∇ character at the end of line 1.)

```

3 HYP 4 Ⓢ
5
92 HYP 3 Ⓢ
92.04890005

```

The user tries a few examples.

```

∇A GEOMETRY B Ⓢ
[1] 'FUNCTION WRITTEN BY M. W. SMITH' Ⓢ
[2] 'GIVEN A RECTANGLE OF ' Ⓢ
[3] 'SIZE ' ;A; ' BY ;B Ⓢ
[4] ' PERIMETER: ' ;A+B Ⓢ
[5] ' AREA: ' ;A×B Ⓢ
[6] ' DIAGONAL: ' ;A HYP B ∇ Ⓢ

```

The user writes a second function – one to calculate the perimeter, area, and diagonal of a rectangle. Note that he makes use of the previously defined HYP function within this function. He also made a mistake which will later need to be corrected.

```
10 GEOMETRY 12 Ⓢ
```

The user tries to use the GEOMETRY function and receives the printout listed below.

```

FUNCTION WRITTEN BY M. W. SMITH
GIVEN A RECTANGLE OF
SIZE 10 BY 12
PERIMETER: 22
AREA: 120
DIAGONAL: 15.62049935

```

After examining the printout, the user notes that the perimeter was not calculated correctly. The value should be twice the sum of the two sides.

```
∇GEOMETRY[4]22 Ⓢ
```

The user indicates that he would like to modify line 4 of the GEOMETRY function beginning at column 22.

```

[4] ' PERIMETER: ' ;A+B
[4] ' PERIMETER: ' ;2×A+B Ⓢ
[5] ∇ Ⓢ

```

APL types line 4, performs a carriage return and spaces to column 22. The user types three slashes indicating that he wants the characters in columns 22 through 24 deleted. APL then retypes the line and waits, allowing the user to add new characters to the line if he so desires. The user types in 2×A+B. APL responds with the next line number, allowing the user to perform further modification to the function if he so desires. The user has completed the modification that he planned and indicates this with a ∇ character.

```

10 GEOMETRY 12 Ⓢ
FUNCTION WRITTEN BY M. W. SMITH
GIVEN A RECTANGLE OF
SIZE 10 BY 12
PERIMETER: 44
AREA: 120
DIAGONAL: 15.62049935

```

The user tries the function again to see if it is working correctly and sees that it is. However, now he has second thoughts about the line that says "FUNCTION WRITTEN BY M. W. SMITH" and decides to delete that line.

```
∇GEOMETRY[1] Ⓢ
```

He opens the function and directs the system to line 1.

```
[1] Ⓢ Ⓢ  
  ∇
```

The system prompts with [1] and the user presses the ATTN key followed by the RETURN key.

```
[2]  ∇ Ⓢ
```

The user closes the function because no further editing is to be performed.

```
      10 GEOMETRY 12 Ⓢ  
GIVEN A RECTANGLE OF  
SIZE 10 BY 12  
PERIMETER: 44  
AREA: 120  
DIAGONAL: 15.62039935
```

The user executes the function again and is pleased with the results. He lists the function definition for future reference, saves the 'workspace' containing HYP and GEOMETRY, and then logs off.

```
      ∇GEOMETRY[ ] Ⓢ  
      ∇A GEOMETRY B  
[1]  'GIVEN A RECTANGLE OF '  
[2]  'SIZE ' ; A , ' BY ' ; B  
[3]  ' PERIMETER: ' ; 2×A+B  
[4]  ' AREA: ' ; A×B  
[5]  ' DIAGONAL: ' ; A HYP B  
[6]  ∇ Ⓢ  
      )SAVE MYMATH Ⓢ  
MYMATH SAVED 10:00 MAY 17, '73  
      )OFF Ⓢ
```

In later sessions, the user can access HYP and GEOMETRY by using a )LOAD or )COPY command on the workspace named MYMATH which has been saved as a file.





\*BUILD INPUT <sup>(RET)</sup>

```
1.000 (TAB) SYSTEM (TAB) SIG7 (RET)  
2.000 (TAB) SYSTEM (TAB) BPM (RET)  
3.000 (TAB) REF (TAB) M:UC (RET)  
4.000 BEGIN (TAB) M:WRITE (TAB) M:UC, (BUF,MESS), (SIZE,45) (RET)  
5.000 (TAB) M:EXIT (RET)  
6.000 MESS (TAB) TEXT (TAB) 'THIS MESSAGE SHOULD ', ; (RET)  
7.000 (TAB) 'PRINT AT THE TERMINAL.' (RET)  
8.000 (TAB) DATA (TAB) X'15000000' (TAB) NEW LINE CHARACTER (RET)  
9.000 (TAB) END (TAB) BEGIN (RET)  
10.000 (RET)
```

\*END <sup>(RET)</sup>

!META INPUT ON BIN <sup>(RET)</sup>

META is called to assemble source file INPUT with ROM output going to file BIN and no assembly listing produced.

WITH> <sup>(RET)</sup>

No assembly options are desired.

!RUN <sup>(RET)</sup>

A run is requested from the last compilation/assembly output, i. e., BIN in this case.

LINKING \$

The system acknowledges the LINK function (the LINK processor is implicitly called).

DEFAULT CORE LIBRARY IS NOT NEEDED

See Example 31 for meaning of this message.

THIS MESSAGE SHOULD PRINT AT THE TERMINAL.

The program's output is printed.

!OFF <sup>(RET)</sup>

The user logs off. The temporary file containing the load-module output of RUN is now lost. (The ROM file BIN is permanent, however.)

## LINK COMMAND

The LINK command requests link-editing, as does RUN, but does not cause loading and execution of the resulting load module. A more complex variable-field format than those shown in the previous section for RUN is given here:

$$\text{LINK } \text{rom}_1 [ , \text{rom}_2 , \dots , \text{rom}_n ] \left[ \begin{array}{l} \text{ON} \\ \text{OVER} \end{array} \text{lmn} \right] [ ; \text{lid}_1 [ , \text{lid}_2 , \dots , \text{lid}_n ] ]$$

where

$\text{rom}_i$  specifies a disk file containing a ROM.

$\text{lmn}$  specifies a disk file for the LM output.

$\text{lid}_i$  specifies a disk file containing a user's subroutine-library.

In the format above, the several ROMs specified will be linked into one LM, with user's libraries  $\text{lid}_1$  through  $\text{lid}_n$  searched (prior to any public or system libraries) to satisfy external references, and the result placed ON or OVER  $\text{lmn}$  if specified.

In addition to the above, a parenthesized library-search code may be given. It is conventionally placed after the command verb, as in LINK (code) . . . . These codes request or suppress searching of system-supplied libraries, and are listed in Appendix D. Also, internal symbol tables for several ROMs may be merged or selectively deleted in the load module (see the CP-V/TS Reference Manual, 90 09 07, for these formats).

#### Example 31. Using the LINK Command

```
⋮
!LINK BIN ON LOAD (NP)

    A link-edit of the ROM on file BIN is requested, with the resultant LM placed on LOAD.

LINKING BIN

    The system responds to the LINK command.

DEFAULT CORE LIBRARY IS NOT NEEDED

    The absence of a library search code (see Appendix D) in the LINK command causes this message if
    the default library (P1) is not required. The specification of search code NP will suppress associa-
    tion of P1 and also suppress this message.

!OFF (NP)

    Since the user does not want to execute the program at this time, he logs off. Files BIN and LOAD
    are permanent and can be accessed in subsequent sessions.

- accounting summary -
```

#### START COMMAND

The !START command can be used to load and execute a load module produced by a prior LINK command, or to reexecute an LM already RUN (or STARTed). Three forms are applicable:

1. START

This form causes the last LM produced, either via a LINK or RUN, to be loaded and executed. Note that the prior LINK or RUN must have been given during the current terminal session; the load-module file may have been explicitly named (l<sub>mn</sub>), or named by default (\$).

2. START \$

This form causes the last LM produced on the temporary file \$ to be loaded and executed; the load-module file must have been named by default (\$).

3. START l<sub>mn</sub>

This form causes the load module contained on the specified file to be loaded and executed. The LM may have been the result of either a LINK or RUN operation.

See Chapter 8, User Programs, for an alternate way of loading and executing user-developed object programs:

#### Example 32. Using the START Command

```
⋮
!START LOAD (NP)

    The load module LOAD created in Example 31 is loaded into core and execution begun.
```

THIS MESSAGE SHOULD PRINT AT THE TERMINAL.

The program's output is printed.

!OFF (SE)

- accounting summary -

## 7. DEBUGGING USER PROGRAMS

Two dynamic debugging facilities are available for on-line use:

- Delta processor for debugging Meta-Symbol programs.
- FORTRAN Debug Package (FDP) for debugging Extended FORTRAN IV programs.

"Debugging" is a general term for program-error detection and correction; dynamic debugging implies that the debugging process is carried out during the execution of an assembled or compiled program (as opposed to "desk checking"). Both Delta and FDP allow symbolic, i. e., source-program level references to elements of the object program.

### ASSEMBLY LANGUAGE DEBUGGING (DELTA)

Delta provides conversational debugging capability for checkout and modification of Meta-Symbol programs at execution time. Delta allows full use of symbolic references to elements of the object program, and enables you to

- Control program execution, i. e., stop and restart it at any point, by means of breakpoints that you may insert in the program at your discretion. These breakpoints may be unconditional ("always stop"), conditional ("stop under certain circumstances"), or based on changes in data values.
- Examine, modify, and insert various program elements: instructions, constants, variable values, and encoded data of all types and formats. This can be done both prior to execution and during any halt in execution (e. g., due to a breakpoint).
- Trace continuous program execution by requesting a repeated display of specified sets of related information: register contents, switches, data values, etc., at specified points in the program.
- Search programs and data for specific elements and values.

Delta may also be used to write and check short Meta-Symbol or machine language programs.

Please refer to the CP-V/TS Reference Manual, 90 09 07, for a comprehensive description and explanation of the commands available under Delta.

### EXECUTING IN DEBUG MODE

To initiate execution of a program in debug mode, you must append the clause UNDER DELTA to your RUN or START command. Also, you must specify the SD (symbolic debugging) assembly option in response to WITH> to preserve the internal symbol table(s) of your program, if you want to refer to internal symbols with Delta commands — the normal case. (Internal symbols are those whose point of definition and points of use are entirely within one ROM.)

Note that the global (or external) symbols of your program are always available for reference (see the following section).

When UNDER DELTA has been specified, Delta intervenes between program loading and initial execution. At this point you can issue debugging commands to examine or modify locations, insert breakpoints, start execution at a specified point, etc. Delta also assumes control at any halt in execution.

The following example illustrates the usual method of using Delta in the debug mode of execution. A simple program is assembled with the SD option, run UNDER DELTA, and patched to create a missing M:EXIT statement. Note that before you refer to internal symbols you must tell Delta the name(s) of the desired symbol table(s) by ROM-file name (even though only one ROM may have been assembled).

To leave Delta and return to TEL, you issue a Y<sup>c</sup> control combination.

Example 33. Assembling and Loading in the Debug Mode

⋮

```
!META ME ON BFILE (RET)
WITH> SD (RET)
```

The user calls META to assemble statements from the terminal. He uses the SD option to cause an internal symbol table to be produced.

```
> SYSTEM SIG7 (RET)
> SYSTEM BPM (RET)
> REF M:UC (RET)
>BEGIN M:WRITE M:UC,(BUF,MES),(SIZE,9)(RET)
>MES TEXT 'GREETINGS' (RET)
> END BEGIN (RET)
```

```
* NO UNDEFINED SYMBOLS
* ERROR SEVERITY LEVEL: 0
* NO ERROR LINES
```

Although there are no assembly errors, the user notes that he forgot to include an M:EXIT in the program and decides to make this correction with patches.

```
!RUN BFILE UNDER DELTA (NP) (RET)
LINKING BFILE
```

He links and loads UNDER DELTA, suppressing loading of the default library with the code NP.

DELTA HERE

"ring"

Delta identifies itself and prompts with a ring of the console bell.

```
BFILE;S (RET)
```

The user selects the internal symbol table associated with ROM BFILE.

```
BEGIN/ CALL,1 MES+.3 (RET)
```

This command opens the cell at location BEGIN and displays its contents.

```
BEGIN(X/ .410C004 (TAB)
```

A command is now entered to cause the contents of BEGIN to be displayed in hexadecimal format. The user terminates the command with the tab-key sequence, CONTROL I, which causes the cell addressed by this command (location C004) to be opened and displayed.

```
MES+.3/ .11008C3C (LF)
MES+.4/ .30000000 (LF)
MES+.5/ .C001 (LF)
MES+.6/ .9 (RET)
```

The contents of the function parameter table (FPT) referenced by the M:WRITE (at location BEGIN) are displayed. Note that location C004 is shown symbolically as MES+.3. A line feed causes the next cell to be opened and displayed. A carriage return terminates the sequence. Note that the hexadecimal conversion format is maintained over the (TAB) and (LF).

```
BEGIN\ B MES+20 (RET)
```

The user issues a command to open the cell at BEGIN and enters a branch to location MES+20, a patch area he has chosen that is well beyond the main program and the FPT displayed above.

MES+20\ CAL1,1 MES+3 (EF)

He enters symbolic code for the M:WRITE instruction (as originally contained in BEGIN, displayed above). The line feed causes the next cell to be opened for modification.

MES+.15\ CAL1,9 1 (EF)

The next location prints with a hexadecimal displacement. He then enters symbolic code corresponding to an M:EXIT. He has now entered all his patches.

BEGIN;G (EF)

He initiates execution.

GREETINGS

EXIT AT MES+.15

The output message prints, and Delta reports execution of the M:EXIT, stating the location of the M:EXIT (MES + .15).

Y<sup>c</sup> ←

The user interrupts with Y<sup>c</sup> and then logs off.

!OFF (EF)

FINI

The system informs him that Delta was terminated.

- accounting summary -

### USING DELTA IN NONDEBUG MODE

Delta may also be called for use when you have not initially executed in debug mode, i. e., you did not specify UNDER DELTA in your RUN or START command. The next example illustrates this type of usage.

Note that only the global symbol table is available, and that the user's first Delta command must be ;S to cause this symbol table – associated with the load module as a whole – to be loaded. Otherwise, no symbols will be available for reference. (If rom;S is specified, as was possible in the preceding example, the global table is loaded implicitly.)

Example 34. Calling Delta after Assembling and Executing in Nondebug Mode

```
⋮
    The user wants to assemble lines from the terminal and to default all options.

!META ME (EF)
WITH> (EF)
> SYSTEM SIG7 (EF)
> SYSTEM BPM (EF)
> DEF START (EF)
> REF M:UC (EF)
>START LI,3 55 (EF)
> M:STIMER (SEC,5),XY (EF)
>AB LI,4 0 (EF)
> STW,4 X (EF)
```

```

> LW,4 X (REF)
> CL,4 0 (REF)
> BE $-2 (REF)
> M:STIMER (SEC,5),XY (REF)
> M:WRITE M:UC,(BUF,MES),(SIZE,17) (REF)
> BDR,3 AB (REF)
> M:EXIT (REF)
>XY LI,4 1 (REF)
> STW,4 X (REF)
> M:TRIN (REF)
>X RES 1 (REF)
>MES TEXT '5-SEC INTERVAL' (REF)
> DATA,1 X'15' (REF)
> END START (REF)

```

\*NO UNDEFINED SYMBOLS

\* ERROR SEVERITY LEVEL: 0

\* NO ERROR LINES

!RUN (NP) (REF)

LINKING \$

He initiates loading and execution of the program.

5-SEC INTERVAL

5-SEC INTERVAL

5-SEC INTERVAL

5-SEC INTERVAL

5-SEC INTERVAL

5-SEC INTERVAL

5-SEC INTERVAL

The program output begins to print.

Y<sup>C</sup> ←

The user notes that the program is looping more than was intended, and notices that an error was made in the first statement (he typed 55 instead of 5), and decides to interrupt with Y<sup>C</sup> and call Delta to enter a patch. (The system did not echo a left arrow since it was in output mode.)

!DELTA (REF)

Control goes to TEL. The user calls the Delta processor.

DELTA HERE

"ring"

Delta identifies itself and prompts with a bell.

;S (REF)

The user loads the global symbol table. The only symbol that can be referred to is START which is the only DEF in the program.

START(X/ .22300037 .22300005 (REF)

He enters a Delta command to display the contents of START in hexadecimal format, and changes this value to the hexadecimal equivalent of LI,3 5.

START;G (REF)

He directs execution to the beginning of the program (location START).



5-SEC INTERVAL  
5-SEC INTERVAL  
5-SEC INTERVAL  
5-SEC INTERVAL  
5-SEC INTERVAL

This time the program executes as was intended.

EXIT AT START + .A

Delta reports execution of the M:EXIT, i. e., normal termination.

Y<sup>c</sup> ⊕

CONTROL and Y interrupts Delta and returns control to TEL.

!OFF ⊕

The user logs off.

- accounting summary -

### USING DELTA TO WRITE PROGRAMS

The user may write and check short Meta-Symbol or machine language programs using Delta. Example 35 illustrates the method by which this is done. In the example, a table TAB with ten numeric entries is created and a program is written to find the sum of the numbers and to store the result in location SUM. It would be helpful to review the commands:

e\  
and  
e(f<S>[K]

in Chapter 7 of the CP-V/TS Reference Manual, 90 09 07, before studying the example.

#### Example 35. Using Delta to Write a Program

!DELTA ⊕

DELTA HERE

.10000(X<TAB>K ⊕

The user begins creating the data for his program by defining the global symbol TAB at location .10000. (The range of addresses available to the user is .C000 - .1BFFF.)

TAB\5 ⊕

The page at .10000 is obtained from the Monitor with the command TAB\  
. Also, the cell at .10000 is opened. The user then loads ten values into the table TAB, the first value being the 5 above.

TAB+.1\ 6 ⊕  
TAB+.2\ 23 ⊕  
TAB+.3\ 41 ⊕  
TAB+.4\ 90 ⊕

```

TAB+.5\ -2 (LF)
TAB+.6\ 57 (LF)
TAB+.7\ -34 (LF)
TAB+.8\ 2 (LF)
TAB+.9\ 588 (REF)
TAB+.A(I<SUM>K (REF)

```

The global symbol SUM is defined at the next available location.

```

TAB+.B(R<BEGIN>K (REF)
BEGIN\ LI,2 0 (LF)
BEGIN+.1\ LI,3 0 (REF)

```

The global symbol BEGIN is defined at the next available location and the first two instructions of the program are written.

```

BEGIN+.2(R<RETURN>K (REF)

RETURN AW,3 TAB,2 (LF)
RETURN+.1\ AI,2 1 (LF)
RETURN+.2\ CI,2 10 (LF)
RETURN+.3\ BNE RETURN (LF)
RETURN+.4\ STW,3 SUM (LF)
RETURN+.5\ CAL,9 1 (REF)

```

The global symbol RETURN is defined at the next available location and the remaining instructions of the program are written.

```
BEGIN;G (REF)
```

The user executes the program.

```
EXIT AT RETURN+.5
```

```
SUM/776
```

The user obtains the answer by displaying the contents of SUM.

## FORTRAN DEBUGGING (FDP)

The FORTRAN Debug Package provides a powerful conversational facility for convenient and rapid checkout of FORTRAN IV programs. The debugging features provided are dynamically controllable from the terminal at program-execution time, and include the following:

- Statement stepping.
- Conditional breakpoints.
- Data-change breakpoints.
- Execution-flow tracing and event-history recording.
- Display and modification of scalar and array-element values.
- Branching.
- Program restart.
- Statement skipping and deletion.
- Automatic calling-argument display.

You may refer to variables by name and to statements by source-line number or statement label. These references may be further qualified by subprogram name.

The FDP facility consists of a sublibrary of run-time subroutines (a portion of public library P0), plus the necessary symbol tables and in-line coding generated by the compiler when debug-mode is requested. (FDP can be used only when debug-mode compilation has been performed.) Programs compiled in debug mode should not be used indiscriminately, as they require approximately 2.5 times the amount of memory required for nondebug runs and may even double normal execution times.

In order to use FDP, you must do the following:

1. Specify the DEBUG compilation option when FORT4 prompts for options.
2. Specify in the RUN or LINK command either one of the library-search options (FDP or P0), or the clause UNDER FDP (the three forms are synonymous).

The two examples given here illustrate, in addition to TEL command usage, some of the more commonly used FDP commands. See the FDP/Reference Manual, 90 16 77, for a complete description of the FDP commands, and a full explanation of their use.

In the following example, the user compiles file INPUT, created in a previous example, in debug mode. Values for X, Y, and Z are read from file DATA (also created in the prior example). The ON debugging command causes values of D, X, Y, and Z to be displayed whenever D is computed.

Example 36. Use of FDP ON and PRINT Commands

```

:
:
:
!FORT4 INPUT ON ,ME (M)

    The user compiles file INPUT and directs the listing and compilation summary to the terminal.
EXT. FORTRAN IV, VERSION C00
OPTIONS >DEBUG,LS (M)

    Note the specification of DEBUG as an option.
1:      WRITE (6,100)
2: 10   READ (5,200) X,Y,Z
3:      IF (X) 20,50,20
4: 20   D = SQRT(X**2+Y**2+Z**2)
5:      WRITE (6,300) X,Y,Z,D
6:      GO TO 10
7: 50   STOP
8: 100  FORMAT (7X,1HX,11X,1HY,11X,1HZ,11X,1HD)
9: 200  FORMAT (3E11.3)
10: 300 FORMAT (4(1X,E11.3))
11:      END

```

NAME	TYPE	CLASS	HEX LOC	DEC WORDS	NAME	TYPE	CLASS	HEX LOC	DEC WORDS
D	R	SCALR	00003	V 1	SQRT	R	SPROG	INTRIN	
X	R	SCALR	00000	V 1	Y	R	SCALR	00001	V 1
Z	R	SCALR	00002	V 1					

LABEL	HEX LOC	LABEL	HEX LOC	LABEL	HEX LOC	LABEL	HEX LOC
10	00008	20	00017	50	00036	100	0003A
200	00043	300	00046				

```

LOCAL VARIABLES (4 WORDS):

00000 X      00001 Y      00002 Z      00003 D

```

BLANK COMMON (0 WORDS)

INTRINSIC SUBPROGRAMS USED:

SQRT

EXTERNAL SUBPROGRAMS REQUIRED:

<u>F:UF</u>	<u>F:108</u>	<u>M:DO</u>	<u>M:OC</u>	<u>M:SI</u>	<u>9BCDREAD</u>
<u>9BCDWRT</u>	<u>9DBDCKIN</u>	<u>9DBFHGO</u>	<u>9DBFHIF</u>	<u>9DBINIT</u>	<u>9DBSCKIN</u>
<u>9ENDIOL</u>	<u>9IODATA</u>	<u>9SQRT</u>	<u>9STOP</u>		

HIGHEST ERROR SEVERITY: 0 (NO ERRORS)

	<u>DEC</u>	<u>HEX</u>
	<u>WORDS</u>	<u>WORDS</u>
<u>GENERATED CODE:</u>	<u>119</u>	<u>00077</u>
<u>CONSTANTS:</u>	<u>0</u>	<u>00000</u>
<u>LOCAL VARIABLES:</u>	<u>4</u>	<u>00004</u>
<u>TEMPS:</u>	<u>4</u>	<u>00004</u>
<u>TOTAL PROGRAM:</u>	<u>127</u>	<u>0007F</u>

The program listing and compilation summary is printed.

!SET F:6 /VECTORS;OUT (SET)

The user directs the program output to file VECTORS.

!SET F:5 /DATA;IN (SET)

Program input will be read from file DATA.

!RUN (FDP) (SET)

The user loads and executes in the debug mode. Alternatively he could have specified:

!RUN UNDER FDP or  
!RUN (PO)

LINKING \$

The loader's message prints.

@ON D;PRINT X,Y,Z (SET)

FDP prompts with @. The user enters commands to cause the value for D to be displayed each time it is stored into, and at the same time to display values for X, Y, and Z.

@GO (SET)

The user does not want to enter any more debug commands at this point and issues a GO command to start execution.

/4(20S): D=3.74166 X=1.00000  
Y=2.00000  
Z=3.00000

```
4(20S): D=1.73205 X=1.00000
Y=1.00000
Z=1.00000
```

Values for D, X, Y, and Z are displayed. The slash (/) indicates main program and is followed by line number and statement number (if present) in parentheses.

```
*STOP* 0
```

This message is produced by the library subroutine STOP.

```
7(50S): RDY TO STOP
```

This message is produced by the debugger.

```
@QUIT @
```

The QUIT command causes return to the monitor.

```
!OFF @
```

- accounting summary -

In the next example, the user enters a FORTRAN source program from the terminal without initializing variables, setting loop control, and providing for I/O. He runs in the debug mode and issues FDP commands to provide the omitted functions.

This program generates a Fibonacci sequence, in which the value of any number (beyond the second) in the sequence is equal to the sum of the values of the two preceding numbers, e. g., 1, 1, 2, 3, 5, 8, 13, 21, 34, 55, . . .

#### Example 37. Further Uses of FDP Commands

```
⋮
!FORT4 ME ON ,LP @
OPTIONS >DEBUG @
≥10 I=I+J @
≥20 J=I+J @
≥30 GO TO 10 @
≥40 END @
```

```
HIGHEST ERROR SEVERITY: 0 (NO ERRORS)
```

```
!RUN UNDER FDP @
```

This command causes the user's program to be loaded and executed, with public library FDP associated.

```
LINKING $
```

```
@I=0 @
@J=1 @
```

FDP prompts with @. The user initializes I and J.

```
@ON I @
@ON J @
```

These ON commands will cause values for I and J to be displayed when these variables are stored into.

@STOP AT 3#5 <sup>(FDP)</sup>

This command causes execution to halt the fifth time that statement 3 (the GO TO statement) is encountered.

@GO <sup>(FDP)</sup>

Execution is now begun with the above commands in effect.

/1(10S): I=1  
2(20S): J=2  
1(10S): I=3  
2(20S): J=5  
1(10S): I=8  
2(20S): J=13  
1(10S): I=21  
2(20S): J=34  
1(10S): I=55  
2(20S): J=89

Values for I and J are displayed. The slash (/) indicates main program and is followed by line number and statement number (in parentheses).

3(30S):

The program halts the fifth time that statement 3 is reached.

@KILL <sup>(FDP)</sup>

FDP prompts for a command. This KILL cancels all previous FDP commands.

@STOP ON I>500 <sup>(FDP)</sup>

A conditional stop, or breakpoint, is set.

@AT 3; PRINT I,J <sup>(FDP)</sup>

These commands will cause values of I and J to print each time statement 3 is reached.

@RESTART <sup>(FDP)</sup>

This specifies restart of program from beginning.

@GO <sup>(FDP)</sup>

The user resumes execution.

/3(30S): I=144  
J=233  
3(30S): I=377  
J=610

Values for I and J are displayed each time statement 3 is reached.

1(10S): I=987

At statement 1, the value for I exceeds 500 and the program halts.

@KILL ON I <sup>(FDP)</sup>

This command cancels the last ON I, effectively the last STOP command issued.

@STOP ON J>10000 <sup>(FDP)</sup>

Another conditional stop is issued.

@GO <sup>REF</sup>

Execution is resumed at statement 3, which is where the previous stop occurred.

/3(30S) : I=987

J=1597

3(30S) : I=2584

J=4181

2(20S) : J=10946

Values for I and J print until J exceeds 10000 which occurs at statement 2.

@PRINT I <sup>REF</sup>

6765

Since statement 3 was not reached to cause the current value for I to be displayed, the user gives a PRINT command to cause this value to print.

@QUIT <sup>REF</sup>

The user now leaves FDP and returns to TEL.

!OFF <sup>REF</sup>

- accounting summary -

## 8. EXECUTING USER PROGRAMS

An object program stored on a file in load-module form may be called by its load-module name (l<sub>mn</sub>) used as a TEL command verb. The load-module file may be stored either in your own account, someone else's account, or the system account. Thus far, the l<sub>mn</sub>-as-verb command is synonymous to the !START l<sub>mn</sub> command (except for a difference in account-number defaults). Within the !l<sub>mn</sub> command, however, you can also very conveniently make file or device assignments for three standard system DCBs: M:SI, M:GO, and M:LO.

The format of the variable field of the command is analogous to that of the FORT4 and META commands; the full format is

$$!l_{mn} [input] \left[ \begin{array}{l} ON \\ OVER \end{array} [output_1][, output_2] \right]$$

where

l<sub>mn</sub> is the fid of an LM that can take the full form:

$$name \left[ . [account] [ . password ] \right]$$

(see below for special defaults)

input may be a fid or ME to be assigned to the input DCB M:SI.

output<sub>1</sub> may be a fid to be assigned to the output DCB M:GO.

output<sub>2</sub> may be a fid, ME, or LP to be assigned to the output DCB M:LO.

(Normal default assignments apply. That is, the M:SI and M:LO DCBs, if referenced, default to the user's terminal, and M:GO to a temporary file named \$.)

The called program must, of course, directly or indirectly utilize one or more of the above-mentioned DCBs for any of these assignments to make sense.

You can imply or specify the account number under which the LM file is stored, and specify a password, as follows:

1. filename – (alone, with no period) implies the system account.
2. filename. – implies your account (i.e., the log-on account value).
3. filename.account – specifies an account number.
4. filename.account.password – specifies an account number and password.
5. filename..password – implies your account and a password.

Note that this particular convention of default account number values is not the standard one that applies to most fid specification in TEL and other commands, as described in Appendix B. The reason for the system account default in particular is that installations may want to include, at system generation time, certain user-developed "production" programs in the system account; special forms of these may then be accorded preferential disk-storage and loading, depending upon frequency of use and programming characteristics. (META and FORT4 commands, for example, are actually special instances of !l<sub>mn</sub> commands.)

The two examples following show very simple programs, developed wholly within the example for purposes of illustration. Actual uses of the command may, of course, call a program developed some time in the past, and possibly by another programmer.

The program in Example 38 reads a Meta-Symbol source program via M:SI, and writes out any comment lines (asterisk in column 1) contained in the program via M:LO. The input file and output device are assigned within the calling command. As a test, the user specifies as input the source program from which the called object-program was assembled.

Example 39 merely shows a simple FORTRAN IV program call by its load-module name. Since the compiler automatically provides (indirectly) program-file DCBs identified with names of the form F:n, file/device assignments cannot also be made within the !l<sub>mn</sub> command for FORTRAN object programs.



Example 38. Using Load-Module-Name as Command Verb (Meta-Symbol Program)

```

:
:
:
!EDIT (EF)
EDIT HERE
*TA M (EF)

```

The user sets tabs for META. Then he builds a Meta-Symbol Program to extract comments lines from Meta-Symbol source programs. (Usage of tab control not shown.)

```

*BUILD SOURCE (EF)
  1.000 *      ***UTILITY PROGRAM "EXTRACT"*** (EF)
  2.000 * THIS ROUTINE LISTS ONLY THE COMMENTS LINES, IF ANY, FROM (EF)
  3.000 * A META SOURCE-PROGRAM FILE. IT ISSUES A BLANK (EF)
  4.000 * LINE TO INDICATE ONE OR MORE CODING LINES (EF)
  5.000 * INTERVENING BETWEEN COMMENTS. IT READS ITS INPUT (EF)
  6.000 * FROM M:SI, AND WRITES TO M:LO. (EF)
  7.000      SYSTEM   BPM (EF)
  8.000      SYSTEM   SIG7 (EF)
  9.000      REF      M:SI,M:LO (EF)
10.000 *      ***INPUT BUFFER*** (EF)
11.000 INN      RES      20 (EF)
12.000 *      ***80 BLANKS*** (EF)
13.000 BLANKS   EQU      S (EF)
14.000      DO1      20 (EF)
15.000      TEXT      ' ' (EF)
16.000 * WE GIVE A TOP-OF-PAGE AT BEGINNING (AND END) (EF)
17.000 START    M:DEVICE M:LO,(PAGE)
18.000 * SWITCH: "HAVE WE ISSUED A BLANK LINE ?": 0 = YES/1 = NO (EF)
19.000      LW,4      =0
20.000 RDNXT    M:READ   M:SI,(BUF,INN),(SIZE,80),(ABN,EXIT)
21.000      LB,5      INN
22.000      CI,5      '* '
23.000      BE      PRINT
24.000      CI,4      0
25.000      BE      RDNXT
26.000      M:WRITE  M:LO,(BUF,BLANKS),(SIZE,72)
27.000 * WE SET THE SWITCH: "BLANK LINE ISSUED SINCE LAST
28.000 * COMMENT"
29.000      LI,4      0
30.000      B      RDNXT
31.000 * WE RESET THE SWITCH: "BLANK LINE NOT ISSUED SINCE THE
32.000 * LAST COMMENT"
33.000 PRINT    LI,4      1
34.000      LW,1      M:SI+4
35.000      SLS,1     -17
36.000      M:WRITE  M:LO,(BUF,INN),(SIZE,*1)
37.000      B      RDNXT
38.000 EXIT    M:DEVICE M:LO,(PAGE)
39.000      M:CLOSE  M:LO,(SAVE)
40.000      M:EXIT
41.000      END      START

!META SOURCE (EF)

WITH> (EF)

* NO UNDEFINED SYMBOLS
* ERROR SEVERITY LEVEL: 0
* NO ERROR LINES

!LINK (NP) ON EXTRACT (EF)

LINKING $

```

```
!COPY SOURCE TO SORCNC(NC) (M)
```

```
..COPYING
```

The user copies the source file using the NC option to strip the carriage-return off each record; otherwise the output below would be double spaced.

```
!EXTRACT. SORCNC ON ,ME (M)
```

Here he calls the LM EXTRACT, with a following period to indicate "my account", and assigns the input file, SORCNC, and directs M:LO output to the terminal.

```
* ***UTILITY PROGRAM "EXTRACT"***  
* THIS ROUTINE LISTS ONLY THE COMMENTS LINES, IF ANY, FROM  
* A META SOURCE-PROGRAM FILE. IT ISSUES A BLANK  
* LINE TO INDICATE ONE OR MORE CODING LINES  
* INTERVENING BETWEEN COMMENTS. IT READS ITS INPUT  
* FROM M:SI, AND WRITES TO M:LO.  
  
* ***INPUT BUFFER***  
  
* ***80 BLANKS***  
  
* WE GIVE A TOP-OF-PAGE AT BEGINNING (AND END)  
  
* SWITCH: "HAVE WE ISSUED A BLANK LINE ?": 0 = YES/1 = NO  
  
* WE SET THE SWITCH: "BLANK LINE ISSUED SINCE LAST  
* COMMENT"  
  
* WE RESET THE SWITCH: "BLANK LINE NOT ISSUED SINCE THE  
* LAST COMMENT"
```

The program's output has printed and control reverts to TEL.

```
!  
.  
.  
.
```

#### Example 39. Using Load-Module-Name as Command Verb (FORTRAN Program)

```
-page heading-
```

```
!TABS 7 (M)
```

The user sets a tab stop for terminal input.

```
!BUILD FILE1 (M)
```

```
1.000 (TAB) I=1 (M)  
2.000 (TAB) WRITE (6,20) (M)  
3.000 (TAB) DO 10 J=1,10 (M)  
4.000 (TAB) I=I*3 (M)  
5.000 10 (TAB) WRITE (6,30) I (M)  
6.000 20 (TAB) FORMAT (1X,15HPOWERS OF THREE) (M)  
7.000 30 (TAB) FORMAT (5X,I7) (M)  
8.000 (TAB) END (M)  
9.000 (M)
```

```
!COMMENT ON ME (M)
```

!FORT4 FILE1 ON OUTFILE <sup>(81)</sup>

FORT4 is called to compile source program FILE1, with ROM output going to OUTFILE.  
EXT. FORTRAN IV, VERSION C02  
OPTIONS>NS <sup>(81)</sup>

FORT4 prompts for options. The user suppresses the partial-summary output.

!SET F:6 UC <sup>(81)</sup>

This command will cause output to device 6 to be directed to the terminal.

!LINK OUTFILE ON POW3 <sup>(81)</sup>

Call LINK to create load module POW3.

LINKING OUTFILE

The LINK processor responds.

P1 ASSOCIATED

!POW3. <sup>(81)</sup>

Load module POW3 is loaded into core and executed. The log-on account is used.

POWERS OF THREE

<u>3</u>
<u>9</u>
<u>27</u>
<u>81</u>
<u>243</u>
<u>729</u>
<u>2187</u>
<u>6561</u>
<u>19683</u>
<u>59049</u>

\*STOP\* 0

The program's output is printed.

!OFF <sup>(81)</sup>

-accounting summary-

## 9. GETTING IN AND OUT OF PROCESSORS

### GENERAL

Once having logged on, you are always in one of three states of processing:

1. In a Job Step: You are in a system (or user) processor, i.e., in "normal" user-program execution.
2. In an Interrupt of a Step: You are at TEL level but have an interrupted processor associated.
3. Between Steps: You are at TEL level with no processor associated.

If you are in a processor, you can return control to TEL by depressing certain terminal keys (discussed shortly). Certain TEL commands can then be issued to perform minor operations after which control can be returned to the processor that was interrupted. The issuance of other TEL commands will cause either an abort of the previous job step or a diagnostic message. For example, interrupting META to issue a DONT COMMENT command does not cause an abort and allows return of control to META; interrupting META to call Edit will result in an abort of META; interrupting META to issue a SET command will result in the message "QUIT?", at which point the user may choose between quitting or continuing the META processor. A complete description of the TEL commands and their effect when used during a job step interrupt is given in Chapter 3 of the CP-V/TS Reference Manual, 90 09 07.

### BREAK, CONTROL Y, ESC Y, AND ESC ESC

Any CP-V processor or user's object program can be interrupted by depressing the BREAK key. Use of the BREAK causes one of the following to occur:

1. If you are in a processor that has no command language (e.g., assembling with META), control is given to TEL whenever a convenient interrupt point is reached. TEL then prompts for a command.
2. If you are in communication with a processor that has break control (e.g., Edit, BASIC), and in a sub-process such as listing or copying, control is given to the processor, which prompts for its next command or possibly issues an interrupt message.
3. If an object program or processor is in a process that does not have break control (i.e., has not used the M:INT Monitor service) control is given to TEL.

The CONTROL Y combination or the ESC Y or ESC ESC sequences always return control to TEL. This type of interrupt can also be caused by depressing the BREAK key more than three times. (Certain processors may take special action on receipt of two or three break signals.) Examples of interrupting a processor are given in Example 40.

Example 40. Using CONTROL Y and the BREAK Key

```

:
:
!EDIT FILES (M)
EDIT HERE

The user decides to make changes to FILES.

*IN 7,1 (M)
7.000 Y ←

He starts to modify the file but changes his mind and interrupts by hitting CONTROL and Y simultaneously. The system echoes a left arrow.

!PCL (M)

Control returns to TEL. The user calls PCL.
```

PCL B00 HERE

PCL identifies itself.

≤ LIST <sup>ESC</sup>

The user asks to have the names of the files that are currently in his disk directory listed.

ARCSINE

CONWAY

DATA

FILES

INPUT

<sup>ESC</sup>

.. 5 FILES LISTED

He does not want to see the entire list, so he hits BREAK to stop the output.

≤ COPY FILES TO LP <sup>ESC</sup>

Return is made to the command state of PCL. The user issues a COPY command to copy file FILES to the line printer.

≤ END <sup>ESC</sup>

He leaves PCL.

!EDIT FILES <sup>ESC</sup>

EDIT HERE

\*TY1-7 <sup>ESC</sup>

He calls Edit and issues commands to type lines in file FILES.

1.000 \* THIS PROGRAM SEARCHES NAME/ADDRESS-RECORD FILES ORDERED BY

2.000 \* ZIP-CODE LOCALITIES. IT ALSO INSERTS AND DELETES N/A RECORDS. THE

3.000 \* CALLING SEQ <sup>ESC</sup> <sup>ESC</sup> <sup>ESC</sup> <sup>ESC</sup> ←

He does not want to see the entire file, so he returns to TEL by hitting BREAK four times. He could also have returned to TEL by depressing CONTROL and Y or <sup>ESC</sup> <sup>ESC</sup>.

--ENTER X TO ABORT COMMAND. ANY OTHER CHARACTER CONTINUES.

The Edit processor has break control and types this message in response to the first break. The subsequent breaks cause direct return to TEL.

!OFF <sup>ESC</sup>

- accounting summary-

## QUIT AND CONTINUE COMMANDS

After you have interrupted a processor and have optionally issued one or more commands, you have three alternative courses of action if the interrupted processor has not been aborted during the interrupt:

1. Return to the interrupted processor by issuing a CONTINUE command.
2. Discontinue use of the current processor by issuing a QUIT command.
3. Call another processor, which has the effect of aborting the previous operation.

Each of these actions is illustrated in the following example.

Note that both END and STOP are equivalent to QUIT, and that GO is equivalent to CONTINUE.

### Example 41. Interrupting, Continuing, and Quitting Execution

```
⋮  
⋮  
!BUILD INPUT (RE)  
1.000 SYSTEM YC ±
```

The user wishes to build file INPUT but forgot to set tab stops before building the file. So he now interrupts Edit by simultaneously depressing CONTROL and Y which the system echoes as a left arrow. Control is given to TEL.

```
!TABS 10,19,37 (RE)
```

He now sets tab stops for the terminal I/O.

```
!CONTINUE (RE)
```

He issues a CONTINUE command which takes him back to Edit (with no prompt). He retypes his first line, since he interrupted while typing this line.

```
(←) SYSTEM (TAB) SIG7 (RE)  
2.000 (←) SYSTEM (←) BPM (RE)  
3.000 START (←)M:PRINT (←) (MESS,MES) (RE)  
4.000 (←) M:EXIT (RE)  
5.000 MES (←) TEXT (←) 'MESSAGE TO TERMINAL' (RE)  
6.000 (←) END (←) START (RE)  
7.000 (←)  
!META INPUT ON BOFILE,LP (RE)  
WITH > (RE)  
YC ±
```

He calls META to assemble the program, but then spots an error in the program and interrupts with Y<sup>C</sup>.

```
!EDIT (RE)
```

He calls Edit to correct the error. META is automatically aborted.

```
EDIT HERE
```

```
*EDIT INPUT (RE)
```

He wants to retype line 5 to change TEXT to TEXTC.

\*IN5 (REF)

He issues an insert command (IN) to correct the line. (Note that a space is not required between the command and the line number.)

5.000 MES (LDS) TEXTC (L48) 'MESSAGE TO TERMINAL' (REF)

\*END (REF)

!META INPUT OVER BOFILE,LIST (REF)

WITH> (REF)

He again calls META to assemble file INPUT and request an output listing. Note use of OVER to reset file extension, ensuring that any output from the previous aborted assembly is overwritten.

\*NO UNDEFINED SYMBOLS

\* ERROR SEVERITY LEVEL:0

\*NO ERROR LINES

!LINK (NP) BOFILE ON MES (REF)

LINK is called to create load module MES.

LINKING BOFILE

!EDIT INPUT (REF)

EDIT HERE

\*TY1-6 (REF)

He now wishes to see the corrected source and calls Edit to display the file. (Note that a space is not required between the command and the line number.)

1.000 SYSTEM SIG7

2.000 SYSTEM BPM

Y<sup>c</sup>

He decides he does not want to see the entire file after all, so he simultaneously depresses CONTROL and Y to interrupt Edit and return control to TEL. The system did not echo a left arrow since it was in the output mode.

!QUIT (REF)

He then issues a QUIT command so that use of the Edit processor will be discontinued.

!NES. (REF)

He now wants to load and execute program MES (but misspells the program name).

Y<sup>c</sup>

He realizes that MES is misspelled and that NES (which happens to be another valid program name) is now operating, so he returns control to TEL and types in the correct name.

!MES. (RET)

QUIT?

The system informs him that the program cannot be loaded without quitting the previous process (NES), and that he must issue either a QUIT or a CONTINUE command. An implied QUIT may be issued by entering a RETURN or LINE FEED character by itself. (This message would not have appeared had the user preceded the MES. command with a QUIT command.)

! (RET)

The implied QUIT command causes the processor previously specified (MES) to be loaded and executed.

MESSAGE TO TERMINAL

The program output prints.

!OFF (RET)

- accounting summary -

## PROGRAM ABORTS

Many conditions can cause your program to be aborted, e. g., an invalid operation code. When an abort occurs, the system prints an abnormal or error code (e. g., 4A00) followed by a message telling you the reason for the abort. The CP-V/TS Reference Manual, 90 09 07, Appendix B, contains listings and explanations of the Monitor error messages.

The following example shows a program that will simply read two records of predetermined size from a file and print them at the terminal. However, a misspelled label in line 8 (BUF instead of BUFF – not a syntax error) causes an attempt at execution time to read into relative location 12. Since this location is in a write-protected procedure area of the program (i. e., the area cannot be stored into), the program is aborted and an appropriate message issued by the system. (Note that the program in this example is not intended to be realistic, but is designed solely to illustrate as simply as possible the "bug", and thereby the point of the example.)

### Example 42. System Handling of an Abort during Execution

⋮

!BUILD READ (RET)

The user builds files READ and LINES (following line 14).

<u>1.000</u>	SYSTEM	SIG7 (RET)
<u>2.000</u>	SYSTEM	BPM (RET)
<u>3.000</u>	REF	M:SI (RET)
<u>4.000</u>	REF	M:UC (RET)
<u>5.000</u> BUF	EQU	10 (RET)
<u>6.000</u> START	M:READ	M:SI, (BUF, BUFF), (SIZE, 16) (RET)
<u>7.000</u>	M:WRITE	M:UC, (BUF, BUFF), (SIZE, 17) (RET)



```

8.000          M:READ      M:SI,(BUF,BUF+2),(SIZE,8)Ⓜ
9.000          M:WRITE     M:UC,(BUF,BUFF+2),(SIZE,9)Ⓜ
10.000         M:EXIT Ⓜ
11.000 BUFF     RES         4 Ⓜ
12.000         DATA,1     X'15'Ⓜ
13.000         END         START Ⓜ
14.000 Ⓜ

```

```
!BUILD LINES Ⓜ
```

```
  1.000 HELLO, TERMINAL! Ⓜ
```

```
  2.000 GOODBYE! Ⓜ
```

```
  3.000 Ⓜ
```

```
!COMMENT ON ME Ⓜ
```

```
!META READ Ⓜ
```

```
WITH > Ⓜ
```

```
**** ILLEGAL BUF/PARAM-RETURN ADDRESS
```

```
 * NO UNDEFINED SYMBOLS
```

```
 * ERROR SEVERITY LEVEL: 3
```

```
 * ERROR LINES
```

```
  8
```

He calls META to assemble the source file. META produces summary messages indicating that there was an assembly error. However, the user decides to run the program anyway.

```
!SET M:SI DC/LINES;IN Ⓜ
```

He sets M:SI to the input file.

```
!RUN (NP) Ⓜ
```

```
  LINKINGS
```

```
  HELLO, TERMINAL!
```

The first record is written.

```
4A00 SPECIFIED BUFFER DOES NOT BELONG TO THE USER
```

The system returns an abort message with an error code when the user tries to read the second record into location 12, which is in a protected area.

```
!
```

```
⋮
```

## 10. ASSIGNING DCBs

### DATA CONTROL BLOCKS

A data control block (DCB) is a standardized table of information about the characteristics of an existent data-file or one to be created. The system's file-management service routines use the DCBs essentially to obtain detailed information both about the file, (i. e., the data) and the physical storage media assigned to it. This, combined with information supplied in a given service request, completely defines the requested operation. These routines also use the DCB to post or update dynamically-variable "historical" information concerning the data file (specific results of the last I/O operation performed, for example) to which the user's program and other system routines may refer.

The DCB also is, effectively, the connecting link between the user's input/output service requests, file-management commands, etc., and the actual disk storage space or peripheral device from which or on which a given data file is to be read, written, copied, saved, deleted, and so on. Sometimes the reference to this "link" is explicit at the user's level, as for example in an M:READ or M:WRITE Monitor procedure in a Meta-Symbol program, or in a SET command when the user needs to assign or reassign program input or output DCBs to specific disk files or devices.

### MEANS OF FILE/DEVICE ASSIGNMENT

The !SET command may be used to explicitly assign any DCB (excepting M:UC, M:OC, and M:XX) to a file or device, as seen in a number of preceding examples. (SET can also be used for setting and resetting various parameters, or relatively fixed items of information in a DCB, e. g., file options, but a general discussion of this usage does not concern us here.)

The !OUTPUT, !LIST, and !COMMENT commands can be used to implicitly assign several standard system DCBs commonly used by system processors: M:GO, M:LO, and M:DO, respectively. Usage of these commands was also shown and described for specific cases in preceding chapters. And, summarizing topics covered in Chapters 5 and 8, the source, rom, and list parameters of META, FORT4, and lm-name commands implicitly assign the M:SI, M:GO, and M:LO DCBs.

In general, the SET command need only be used to assign user-program files for DCBs that have no default assignment (or an undesired one), or to assign standard system DCBs, other than the ones named above, for special-option processor outputs, e. g., the CO, BO, and SO options and the corresponding M:CO, M:BO, and M:SO DCBs. To assign M:SI, M:GO, M:LO, and M:DO, the choice between the several means described above is simply a matter of the user's convenience, as they each "do the same job", excepting that SET cannot be used in a job-step interruption. (See SET Command below, for specific information concerning BASIC.)

### STANDARD SYSTEM DCBs

The system includes an extensive set of standard DCBs that provide for the majority of system- and user-program needs. The link-loader supplies a uniform loader-constructed copy of these DCBs to the user's program as required to satisfy references thereto. These DCBs all have names of the form M:xy, where xy generally corresponds to a system-defined operational label (discussed under SET Command below). These DCBs, when used on-line, have the on-line default assignment (if any) defined by the system for the corresponding operational label. Note that the default assignments for M:UC and M:OC, the user's terminal in both cases, are really fixed assignments, i. e., you cannot change them. (The default assignments can vary with individual installations, and most of them differ for batch operations.)

Although a number of system DCBs default to the user's terminal, the M:UC DCB is unique because (1) its fixed assignment is to the terminal — like M:OC, and (2) output through it is treated differently by the Monitor than output to the terminal via any other DCB — unlike M:OC. For terminal output via any DCB other than M:UC, the Monitor's COC (Character-Oriented Communications) routines automatically append a carriage-return/line-feed combination to each record written without a terminating carriage return. The COC routines do not append such a combination to output written via M:UC; it will substitute that character combination, however, for any carriage-return or line-feed character in the record. This difference allows you, when using M:UC, to produce one physical line at the terminal with a series of records. (See CP-V/TS Reference Manual, 90 09 07, Chapter 10, for details.)

In addition to the standard system DCBs, the link-loader will supply a uniform loader-constructed DCB for any M:ab DCB reference where M:ab is not known to the system, and for any DCB reference of the form F:ab, such as produced by FORTRAN IV for program files, where ab corresponds to the FORTRAN unit number. In these cases, the DCBs neither have a default assignment nor are they automatically defined for input or output – excepting F:101 through F:108, the FORTRAN standard units. They are also not defined for final disposition, and an I/O function and disposition parameter (e.g., IN, SAVE) may need to be set as well if the assignment is to a file or labeled tape. (These settings are described below.)

### ASSIGN/MERGE TABLE

DCB assignments, excepting those for M:SI, automatically remain in effect across job steps until reset or negated. Assignments can be reset or negated between job steps. The mechanism for setting and resetting assignments is the assign/merge table, during an on-line session. An M:SI assignment is effective only for a single job step; following that step it always reverts to its default assignment, the user's terminal.

Any assignment made by any of the means described above causes an entry to be made in your assign/merge table. At the beginning of any job step involving a processor (including LINK) or a user's program, the entries in the assign/merge table are merged into the corresponding DCBs. (An entry in the table is deleted by a !SET dcb 0.)

If an error occurs when accessing the ASSIGN/MERGE record, the user will be logged off. He must log back into the system to continue.

The apparent negation of an assignment achieved specifically by means of a DONT... command, e.g., DONT LIST, bypasses the assign/merge table and affects only a switch in the user's JIT (job information table) at the time the command is issued, whether between job steps or during a job-step interruption. (The implied DCB is not affected.) Only the standard processor outputs written via M:GO (OUTPUT), M:LO (LIST, and M:DO (COMMENT) DCBs can be affected in this way.

### OUTPUT, LIST, AND COMMENT COMMANDS

Control over output from META, or FORT4, or a standardized user-processor may be exercised with the following commands before the processor command is issued:

- OUTPUT ON or OUTPUT OVER followed by a file name. This command specifies the destination of the relocatable-object output (ROM) from the processor via the M:GO DCB. M:GO defaults to a special file, which you may refer to in some cases with a dollar sign (\$).
- LIST ON or LIST OVER followed by ME, LP, or file names. This command specifies the destination of the listing output from the processor, via the M:LO DCB. For META and FORT4, M:LO effectively has no default assignment. Either an explicit assignment must be made or the !LIST command given to turn on the LO-output switch in the user's JIT. Apart from META and FORT4, M:LO defaults to the terminal.
- COMMENT ON or COMMENT OVER followed by ME, LP, or file name. This command specifies the destination of error commentary from the processor, via the M:DO DCB. M:DO defaults to the user's terminal. Therefore, COMMENT need not be used unless you want to direct error commentary to a destination other than your terminal.

In the following example, we specify destination files for the META output by using the LIST and OUTPUT commands, and (for purposes of illustration only) turn off the diagnostic output. We then assemble and execute the subprogram, but trap. We do not detect any errors in the source program, so in order to find out if we have assembly errors (which do show on the listing, however) we issue a COMMENT command to turn error commentary back on. We reassemble, find that we have a syntax error, and correct the line before reassembling again.

#### Example 43. Controlling the Destination of Processor Output

```

:
:
!BUILD COUNTER Ⓢ
  1.000      SYSTEM SIG7 Ⓢ
  2.000      SYSTEM BPM Ⓢ
  3.000 BEG  LI,1 100 Ⓢ

```

```
4.000 STW 1,X (RET)
5.000 M:EXIT (RET)
6.000 X RES 1 (RET)
7.000 END BEG (RET)
8.000 (RET)
```

```
!LIST ON LOFILE (RET)
```

Before calling META, the user directs listing output to file LOFILE.

```
!OUTPUT ON BIN (RET)
```

He specifies that the ROM output is to go to file BIN.

```
!DONT COMMENT (RET)
```

He overconfidently turns off error commentary.

```
!META COUNTER (RET)
```

```
WITH> (RET)
```

```
!RUN BIN ON CNTR100 (RET)
```

He requests load module output on file CNTR100.

LINKING BIN

DEFAULT CORE LIBRARY IS NOT NEEDED

A400 YOU TRAPPED

An abort message prints indicating the program would not execute properly.

```
!COMMENT (RET)
```

The user does not spot any errors in the source, so he issues a COMMENT command to cause error commentary from META to appear at the terminal.

```
!META COUNTER OVER BIN,LOFILE (RET)
```

```
WITH> (RET)
```

He calls META again. Files BIN and LOFILE were created when META was previously called, so they must be respecified in order to be recreated or written over, rather than extended. This time the error commentary prints at the terminal and indicates that statement 4 is in error.

```
4 01 0000 1 35060001 N STW 1,X
                                4.000
```

\*\*\*\* ILLEGAL CF

\* NO UNDEFINED SYMBOLS

\* ERROR SEVERITY LEVEL: 3

\* ERROR LINES

4

```
!EDIT COUNTER (RET)
```

EDIT HERE

```
*IN 4 (RET)
```

He wants to change line 4 and uses the Insert (IN) command to enter a corrected statement.

4.000 STW,1 X <sup>RET</sup>

\*END <sup>RET</sup>

!META COUNTER OVER BIN,LOFILE <sup>RET</sup>

WITH> <sup>RET</sup>

He calls META again. Error commentary will still be directed to the terminal, since the previous COMMENT command is still in effect.

\*NO UNDEFINED SYMBOLS

\* ERROR SEVERITY LEVEL: 0

\* NO ERROR LINES

!RUN (NP) BIN OVER CNTR100 <sup>RET</sup>

LINKING BIN

Since there are no errors in the assembly, he reloads and reexecutes the program, to recheck and get an updated load module.

Normal execution is indicated by a return to TEL with no message.

!OFF <sup>RET</sup>

- accounting summary -

## SET COMMAND

The general form of the !SET command is given in the CP-V/TS Reference Manual, 90 09 07, with descriptions of its many options and varied examples of its use. It is a complex command. Several forms, selected for particular uses, are as follows:

- To Assign a public disk File

SET dcb /fid[;filopt...;filopt]

where

filopt is one of the file-option parameters given in Appendix C, Table C-3. Some of these are

IN	- input file	}	function
OUT	- output file		
INOUT	- update file		
OUTIN	- scratch file		
REL	- release on close	}	disposition
SAVE	- save on close		

The defaults for the function and disposition parameters are interrelated, as follows: for IN or INOUT files, SAVE is the default; for OUT or OUTIN files, REL is the default. (Note that for an OUT or OUTIN

file the SAVE parameter does not actually cause the file to be permanently saved, but merely allows SAVE to be effectively specified in an M:CLOSE operation.)

- To Assign a Labeled-Tape File or Private Disk Pack

```
SET dcb dc [#nnnn]/fid [;filopt. . .;filopt]
```

where

dc is a device code: MT - any unit; 9T - 9-track, 7T - 7-track, DP - disk pack.

#nnnn is a tape or disk pack serial number (i.e., an internal reel number).

fid is the file identification of a file on the tape or pack.

filopt is as above, under disk file assignment.

Note that the disposition file options, SAVE and REL, have specialized meanings for tape operations, as described in the CP-V/BP Reference Manual, 90 17 64.

- To Assign a Peripheral Device (Other Than Magnetic Tape) or Private Disk Pack

```
SET dcb {devoplb} [;devopt...;devopt]
```

where

dev is a symbiont-output device code: LP - line printer, CP - card punch.

oplb is a system-defined operational label. These are given in Appendix C, Table C-1 (see also below).

devopt is a device-dependent device option; these are given in Appendix C, Table C-2, and mainly concern format control and read/write codes and modes.

The system-default value of an operational label, e.g., SI, LO, or CO, is set by the individual installation, and normally will differ from on-line to batch mode. In CP-V as distributed, the following operational labels and correspondingly named DCBs default on-line to the user's terminal: C, DO, EI, LL, LO, OC, SI, SL, and UC. Excepting the special label NO, all other operational labels have no "as-directed" default value. The operational label NO has the fixed meaning "no assignment", and while it is in force, effectively prevents any default assignment from being applied. This causes any output via a so-assigned DCB to be lost, and an immediate end-of-file return on input.

- To Clear a User-Set Assignment

```
SET dcb[0]
```

This form causes any prior assign/merge table entry for the named DCB to be deleted from the table. Thus, any system-default assignments are allowed to take effect in subsequent job steps.

- To Clear All User-Set Assignments

```
R[ESET]
```

This form deletes all previously assigned entries from the assign/merge table. All system default assignments for all standard system DCBs are in effect for subsequent steps.

## GENERAL USAGE RULES

The following usage rules apply in general:

1. File or device options can be added or respecified, between job steps, for an already assigned DCB if the assignment was made by a previous SET, OUTPUT, LIST, or COMMENT command, or a processor-call parameter.
2. As stated earlier in this chapter, when assigning a file to any nonsystem-defined, loader-constructed DCB (excluding F:101, F:102, ...F:106 for FORTRAN standard units) you must also specify one of the file-option function parameters (IN, OUT, INOUT, OUTIN), and also the disposition parameter unless the default is desired. Thus, an output-file assignment for, say, FORTRAN unit 6 would be as follows:

```
!SET F:6 /OUTFIL;OUT;SAVE
```

3. No more than 12 concurrent DCB assignments can be in effect via the assign/merge table. If necessary, clear any not-currently-needed entries via SET dcb. The RESET command resets all standard system DCBs to the default assignments.

### Example 44. Setting DCB Assignments and Parameters with the SET Command

This example illustrates use of the SET command to direct input to and output from an assembly. The user obtains source output on tape, a compressed-output deck, a double-spaced output listing on the printer, and ROM output on a disk file.

⋮

```
!SET M:SO MT#A123/Z REF
```

This command will cause the source output from META to go to file Z on the magnetic tape having the serial number A123.

```
!SET M:LO LO;SPACE=2 REF
```

The user wants the output listing double-spaced. Note that he must first assign M:LO. (But, see the META command below, where this assignment is changed.)

```
!SET M:BO /BINOUT REF
```

He wants the binary output to go to disk file BINOUT. He could alternatively have used the command:

```
!OUTPUT ON BINOUT
```

```
!SET M:CO CP REF
```

This command assigns the DCB for compressed output to the card punch (utilization privilege is required).

```
!META INFILE ON ,LP REF
```

```
WITH>SO,CO REF
```

The user now calls META to assemble a source file. He requests a source listing on the line printer (privilege required) and a compressed output deck.

!RUN (NP) BINOUT <sup>(RET)</sup>

He now calls RUN to load and execute the program.

LINKING BINOUT

!

⋮

Control returns to TEL, with no error messages having been issued.

### BASIC PROCESSOR REQUIREMENTS

The BASIC processor uses the following DCBs for its I/O:

<u>DCB</u>	<u>Definition</u>	<u>Default Assignment</u>
M:SI	Source input.	User's console (on-line job) Card reader (batch job)
M:EI	Stream 1.	File
M:EO	Stream 2.	File
M:CI	Stream 3.	File
M:LO	Stream 4.	File
M:DO	Diagnostic output and output that results from a PRINT statement or a LIST command.	User's console (on-line job) Line printer (batch job)
M:SO	Output that results from a SAVE, FILE, LOAD, RENUMBER, or CHAIN command.	File

The assignments for any of these DCBs may be changed via the SET command. For example, the assignment for the M:DO DCB for an on-line job may be changed to line printer by the command

```
!SET M:DO LP
```

If either the M:SI or M:DO DCB has been affected inappropriately by previous processing during the on-line session, it may be reset to the BASIC default assignment by means of the SET dcb command. Both of them may be reset at the same time via the RESET command. All other DCBs are reset to their BASIC default assignments automatically by the BASIC processor.



# 11. CONTROLLING OUTPUT

## GENERAL

The several outputs from a compilation or assembly (or "standardized" user processor) can be selectively turned off by a DONT LIST, DONT OUTPUT, or DONT COMMENT command, either before calling a processor or during an interrupt of the processor. These specifications retain their effect across job steps, until reset or negated. Outputs may be resumed by a LIST, OUTPUT, or COMMENT command, or by specifying output destinations in a META, FORT4, or user-processor command. LIST affects the M:LO DCB, normally used for listing output; OUTPUT affects the M:GO DCB, normally used for ROM output, and COMMENT affects the M:DO DCB, normally used for diagnostic output. (M:DO cannot be affected with the META, FORT4, etc., command parameters.)

If you have assigned output to a "symbiont device", such as line printer or card punch, the output is stored on disk until you give an explicit or implicit indication that it is complete and ready to be printed or punched. You do this explicitly by issuing the TEL command PRINT, or implicitly by logging off. (Note that utilization privilege is required for these central-site units, however.)

## DISCONTINUING AND RESUMING STANDARD OUTPUTS

You may interrupt META or FORT4 and turn off output by one of the following commands:

- DONT LIST turns off list output.
- DONT OUTPUT turns off binary output.
- DONT COMMENT turns off error commentary.

The DONT LIST and DONT OUTPUT commands may also be given before calling META or FORT4 if these outputs are not desired.

Output may be resumed by one of the following commands:

- LIST resumes list output as previously specified.
- OUTPUT resumes binary output as previously specified.
- COMMENT resumes error commentary as previously specified, or at the terminal by default.

Each of the above commands remains in effect during a session until you issue another command to redirect output.

The forms of these commands for explicitly directing or redirecting outputs are given in Chapter 10.

### Example 45. Discontinuing and Resuming Output by OUTPUT, LIST, and COMMENT Commands

```

:
!BUILD INFILE (REF)

The user builds a source file of Meta-Symbol statements.

1.000 SYSTEM BPM (REF)
2.000 SYSTEM SIG7 (REF)
3.000 START LI,R1 1 (REF)
4.000 SLS,R1 24 (REF)
5.000 LW,R2 R1 (REF)
6.000 STW,R2 Y (REF)
```

```
7.000          M:EXIT (RET)
8.000 Y        RES          1 (RET)
9.000          END          START (RET)
10.000 (RET)
```

```
!OUTPUT ON OUTFILE (RET)
!LIST ON LFILE (RET)
```

The user specifies the destination files for binary output and object listing.

```
!DONT OUTPUT (RET)
!DONT LIST (RET)
```

For his first assembly, he only wants to test for assembly errors, and so he turns off the OUTPUT and LIST options.

```
!META INFILE (RET)
WITH> (RET)
```

He calls META to assemble the source file.

```
3  01 00000  22000001 N  START  LI,R1 1
                                     3.000
**** UNDEF SYM
4  01 00001  25000018 N           SLS,R1 24
                                     4.000
**** UNDEF SYM
5  01 00002  32000000 N           LW,R2 R1
                                     5.000
```

Y<sup>c</sup>+

```
!QUIT (RET)
```

The user notices that he forgot to define R1 and R2, and so he interrupts by depressing Y<sup>c</sup> and aborts META by typing a QUIT command.

```
!EDIT INFILE (RET)
EDIT HERE
```

He calls Edit to insert definitions into the source file.

```
*IN2.5,.1 (RET)
2.500 R1  EQU  1 (RET)
2.600 R2  EQU  2 (RET)
2.700 (RET)
*END (RET)
```

He then leaves Edit.

!OUTPUT (REF)

!LIST (REF)

This time he believes that the program is error-free, and so he now resets the OUTPUT and LIST options.

!META INFILE (REF)

He now reassembles. File INFILE must be respecified since M:SI defaults to the terminal at each new job step.

WITH> (REF)

\* NO UNDEFINED SYMBOLS  
\* ERROR SEVERITY LEVEL: 0  
\* NO ERROR LINES

!  
:  
:

## PRINT COMMAND

Output directed to the symbiont output devices (card punch and printer) is normally not queued for actual output on those devices until you log off. This feature has the advantage of causing all of the output for one job to come out together.

However, you may want some of your output printed or punched immediately. The PRINT command causes your symbiont files to be closed and queued for output at once (if you have the required utilization permission).

### Example 46. Causing Printer or Punch Output to be Queued by Issuing a PRINT Command

:  
:  
!COPY ME TO LP (REF)

The user wants to enter lines at the terminal to be copied to the line printer.

!THESE LINES ARE DIRECTED TO THE LINE PRINTER (REF)

!THEY ARE NORMALLY NOT QUEUED FOR PRINTING UNTIL THE USER LOGS OFF. (REF)

!THE FOLLOWING PRINT COMMAND WILL CAUSE THEM TO BE PRINTED. (REF)

!ESC F

The Escape F signals end-of-input.

!PRINT (REF)

This command causes the line printer output to be queued immediately.

!  
:  
:

The session continues.

## 12. SAVING/RESTORING CORE IMAGES AND FILES

### GENERAL

A core image of a program in process, along with relevant program context, can be saved on a disk file during an interruption of execution. You might often want to save the core image of a patched program at one or several stages of a complex debugging process, e.g., to ensure against errors in ensuing patches. The saving and reloading of core images is achieved with the !SAVE and !GET commands, shown in the first two examples to follow.

Although program-I/O file identification information is saved along with the core image, file-positioning information is not saved (and the files themselves may not be saved if closed automatically by the system). If, however, a given program is not sensitive to these considerations, then SAVE/GET can also be used as a production checkpoint-restart mechanism.

Disk (i.e., RAD or disk pack) storage is the predominant file-storage medium for the on-line user, because of the nature of remote on-line operation and the central role played by this type of storage in integrated batch/time-sharing operating systems such as CP-V. The advantages of disk storage over other types of file media were discussed briefly in Chapter 4. Disk files are, however, susceptible to loss in certain types of catastrophic system failures, or "crashes", that sometimes occur. Although the system provides extensive, automatic protection against complete file loss (as described below), generally on an "all files" basis, you can selectively create backup files anytime you feel this action is indicated. (For example, after creating an important file when working with a relatively new installation that has not yet ironed out all the wrinkles.)

Files may be saved or backed up either on the standard system save/restore magnetic tape by means of the TEL BACKUP command, or on your own private tape, pack, or on punched cards by means of the PCL COPYALL or COPY command.

Another characteristic of disk storage is that its capacity is fixed in a sense that magnetic-tape or punched-card storage is not, and that you can easily misuse it: (1) by not promptly deleting unneeded files (you are normally charged for permanent disk space actually used, not the total extent allowed for your use), and (2) by allowing little-used files to remain on disk. You can transfer files of the latter class to tapes by the same means used to create backup copies — but do not forget to delete them from disk after verification of the copying!

### SAVE AND GET COMMANDS

You can take a "checkpoint" of a core image at some desired point by interrupting the execution and issuing a SAVE command. The core image of the program and other information that enables the system to reconstruct the program's environment (other than I/O-file positioning) are then saved on disk. After you issue the SAVE command, the interrupted program can be resumed by a GO or CONTINUE command.

Later you can restore the checkpointed program to core by issuing a GET command. Following the GET command by a GO or CONTINUE command causes processing to be resumed at the point at which the checkpoint was taken.

In the next example, we assemble a program with META but discover coding errors when it does not execute properly. Instead of editing the source file and reassembling, we choose to enter patches with DELTA (see Chapter 7). To preserve a patched version of the program, we interrupt prior to execution and issue a SAVE command. The patched version is restored by a GET command in Example 48 and executed again.

Example 47. Saving a Core Image of a Program (SAVE Command)

```
⋮
!BUILD INPUT (M)

1.000      SYSTEM      BPM (M)
2.000      SYSTEM      SIG7 (M)
```

<u>3.000</u>	REF	M:UC (REF)
<u>4.000</u>	START LI,1	RETURN (REF)
<u>5.000</u>	STW,1	EXIT (REF)
<u>6.000</u>	LCI	0 (REF)
<u>7.000</u>	STM,0	REGS (REF)
<u>8.000</u>	B	SUBR (REF)
<u>9.000</u>	RETURN CW,15	REGS+15 (REF)
<u>10.000</u>	BNE	ERROR (REF)
<u>11.000</u>	CW,14	REGS+14 (REF)
<u>12.000</u>	BNE	ERROR (REF)
<u>13.000</u>	LI,14	BA(REGS) (REF)
<u>14.000</u>	LI,15	56 (REF)
<u>15.000</u>	SLS,15	24 (REF)
<u>16.000</u>	CBS,14	0 (REF)
<u>17.000</u>	BNE	ERROR (REF)
<u>18.000</u>	M:EXIT (REF)	
<u>19.000</u>	ERROR LB,2	ERR (REF)
<u>20.000</u>	M:WRITE	M:UC, (BUF,ERR), (SIZE,*2), (BTD,1) (REF)
<u>21.000</u>	M:EXIT (REF)	
<u>22.000</u>	ERR TEXT	'REGISTERS NOT PRESERVED IN SUBR' (REF)
<u>23.000</u>	REGS RES	16 (REF)
<u>24.000</u>	SUBR LI,2	100 (REF)
<u>25.000</u>	BDR,2	\$ (REF)
<u>26.000</u>	B	*EXIT (REF)
<u>27.000</u>	EXIT RES	1 (REF)
<u>28.000</u>	END	START (REF)
<u>29.000</u>	(REF)	

!META INPUT ON BO (REF)

WITH>SD (REF)

The user assembles the program, and asks for symbolic debugging code to be produced.

\* NO UNDEFINED SYMBOLS  
 \* ERROR SEVERITY LEVEL: 0  
 \* NO ERROR LINES

!RUN BO (REF)

LINKING BO

REGISTERS NOT PRESERVED IN SUBR

The program error message prints.

!RUN BO UNDER DELTA (RET)

The user now runs under Delta because he wants to add patches to the program before executing again.

LINKING BO

DELTA HERE

"ring"

The Delta debugging processor identifies itself and prompts with a bell.

BO;S (RET)

The user identifies the symbol table associated with the ROM (BO).

EXIT+20\ STW,1 EXIT+19 (LF)

EXIT+.15\ LI,1 100 (LF)

EXIT+.16\ BDR,1 \$ (LF)

EXIT+.17\ LW,1 EXIT+19 (LF)

EXIT+.18\ B \*EXIT (RET)

SUBR\ B EXIT+20 (RET)

He enters patches into the program (see Example 33 for meaning of these commands).

Y<sup>c</sup> ←

He depresses CONTROL and Y after the prompt to interrupt Delta. The system echoes a left arrow.

!SAVE MYJOB (RET)

He issues a SAVE command to save the patched program on file MYJOB.

!GO (RET)

The GO command takes him back to Delta.

START;G (RET)

He issues a Delta command to start execution of the program. (No prompt is given.)

EXIT AT RETURN + .9

Delta prints this message on execution of an M:EXIT.

Y<sup>c</sup> ←

The user now leaves Delta.

!

⋮

#### Example 48. Restoring a Checkpointed Program (GET Command)

```

:
:
!GET MYJOB (RET)
    The user restores the checkpointed core image (the patched program on file MYJOB). This file was
    created by the SAVE command in Example 47.

!GO (RET)
    The GO command causes a return to Delta, the processor that was interrupted to perform the SAVE.

START;G (RET)
    The user initiates execution. (No prompt is given for this line.)

EXIT AT RETURN + .9
    The program completes execution.

Y^C+
!
:
:
```

### BACKUP COMMAND

The BACKUP command provides a means of creating backup files. Files are copied to the standard system backup tape. Note that the usage of BACKUP may be subject to rules and restrictions conditioned by specific installation practices concerning the saving/restoring of files.

A keyed file called MAILBOX in the user's account will contain completion messages resulting from the backup process.

The next example illustrates use of the BACKUP command. This example also shows that we must wait for the backup process to complete before finding out what is in the MAILBOX file.

#### Example 49. Saving a File on the Standard System Backup Tape

```

:
:
!BUILD MYFILE (RET)
    The user builds file MYFILE.

:
:
!BACKUP MYFILE (RET)
    He issues a BACKUP command to copy the file on the system backup tape.

!COPY MAILBOX (RET)
    §
    300 FILE DOES NOT EXIST.
    He wants to see what is in the MAILBOX file, but this file does not yet exist because the backup process
    is not complete.

!COPY MAILBOX (RET)
    He waits a minute or so for the backup process to complete then issues the COPY command again.

16:18 MAY 25, '71 BY ABCD ON SN45A1 BACKED UP FILE MYFILE
    The completion message in file MAILBOX now prints.

!
:
:
```

## COPYALL AND COPY COMMANDS

### SAVING ON TAPE

Many times you will want to save one, several, or all of your files on magnetic tape, in addition to those implied by the "proper usage" guideline offered near the beginning of this chapter. For instance, if you were going on an extended vacation, you might want to copy all your disk files to tape and thus save disk storage charges. Or, if you are making many versions of a file, perhaps many assemblies, you may want to back up the original file on tape. In the next example, the user transfers all the files in his account to tape and pulls them off as needed in the session. He also transfers a single, additional file to the tape. The example shows the use of CP-V labeled tape rather than free-form tape. Using labeled tape, the user can request his files by name from the tape, as he would call them by name from his disk directory. With free-form tape, he would have to know the ordinal positions of the files on the tape, and space forward or backward the appropriate number of files before he could read or write the files he wanted. (This example is illustrative of what can be done, but not necessarily of what may normally be done, since it implies usage of a central-site resource in a manner that may or may not be allowed in a given installation.) Note that copying one file or the entire account to tape does not automatically delete the file(s) from disk; disk files must be explicitly deleted by command. Also, tape files are no longer "in the system". That is, the system "knows" only of files in the user's account on disk; the user is responsible for knowing the tape's label or number, and for notifying the central-site operator of the same (see Chapter 14).

Remember that any utilization of magnetic tape, as well as any other central-site resource, requires a prior permission by the installation.

See the CP-V/TS Reference Manual, 90 09 07, Chapter 5, for a description of the Rewind (REW) and Space-to-EOT (SPE) commands shown in the next example.

#### Example 50. Transfer of All Files in User's Account to Labeled Tape

```
⋮  
!PCL RET  
PCL DOO HERE  
<LIST RET  
ARCSINE  
DATAFIL  
JOBFIL  
ROMFIL  
SOURCE  
VPRIME
```

The user lists the names of the files in his disk account.

```
<REW #3B96 RET
```

He rewinds the tape (#3B96) he is going to write on, to be certain it is positioned to start of tape. This assumes, of course, that the tape has been mounted at the computer site. See Chapter 14 on user-operator communication. If the tape already contained files he wanted to keep, he would instead want to skip to the position following the last file on the tape by issuing the command <SPE LT#3B96.

```
<COPYALL TO LT#3B96 RET
```

He copies all the files in his account, in succession, to labeled tape (LT) #3B96.

```
<REW #3B96 RET
```

He rewinds tape #3B96 that he has just written on before listing it. He visually compares the list with the one he received when he listed the disk directory.



<LIST LT#3B96 (RET)

ARCSINE

DATAFIL

JOBFIL

ROMFIL

SOURCE

VPRIME

<COPY ME TO NEW (RET)

.  
:  
:  
:  
.  
F

The user creates a new file from the terminal.

<SPE LT#3B96 (RET)

He spaces labeled tape #3B96 to the mark following the last file on the tape.

<COPY NEW TO LT#3B96/NEW (RET)

He adds file NEW to labeled tape #3B96.

<REW #3B96 (RET)

<LIST LT#3B96 (RET)

ARCSINE

DATAFIL

JOBFIL

ROMFIL

SOURCE

VPRIME

NEW

He rewinds tape #3B96 and lists the names of its files. PCL has successfully added file NEW after the last file written to tape, VPRIME.

<DELETEALL (RET)

DELETEALL?

<YESS (RET)

.. 7 FILES DELETED

Satisfied that his files are safely stored on tape, he now deletes all files in his disk account. PCL requires a "YESS" verification of the DELETEALL request, and upon its receipt, PCL deletes all of the user's files and so notifies him.

<REW #3B96 (RET)

<COPY LT#3B96/NEW TO INPUT (RET)

The user wishes to use file NEW as input to a processor later in the session. He calls it from the tape back to his account with a new name, INPUT.

<REM #3B96 (RET)

He issues the REMOVE command, which rewinds the tape and automatically issues a "dismount" message to the control-site operator.

<END (RET)

!

:

:

## 13. SUBMITTING BATCH JOBS

### BATCH COMMAND

The BATCH command is used to submit a batch job deck stored on a file to the batch input stream. This job deck must include all appropriate batch control cards that would be needed for normal batch job submission.

#### Example 51. Submitting a Job via BATCH Subsystem for Execution

```

:
:
!EDIT (REF)
EDIT HERE
*BUILD BATCHIN (REF)

    The user builds a source program that he wishes to assemble in the batch environment.

1.000      SYSTEM      SIG7 (REF)
2.000      SYSTEM      BPM (REF)
3.000      REF          M:LO (REF)
4.000 START  M:WRITE    M:LO, (BUF, MES), (SIZE, 9) (REF)
5.000      M:EXIT (REF)
6.000      ERROR      THIS LINE CONTAINS AN ERROR (REF)
7.000 MES   TEXT      'IT WORKS.' (REF)
8.000      END        START (REF)
9.000 (REF)

*BUILD JOBA (REF)

    He builds a file containing a batch job-control deck that will assemble the file called BATCHIN.

1.000 !JOB (REF)
2.000 !ASSIGN M:SI, (FILE, BATCHIN) (REF)
3.000 !ASSIGN M:BO, (FILE, BINARY) (REF)
4.000 !ASSIGN M:DO, (FILE, ERRORS) (REF)
5.000 !METASYM SI, BO, LO (REF)
6.000 (REF)
*END (REF)
!BATCH JOBA (REF)
ID=0028  SUBMITTED  9:13 MAY 26, '71

    He submits the batch job he has just created. The job identification (ID) prints as a hexadecimal value.
    Note that the JOB command did not specify an account, user name, or priority. When these parameters
    are omitted, they are supplied by the system and default to the logged-on account, user name, and the
    highest priority authorized that user.

!
:
:
```

## CANCEL COMMAND

If the user wishes to cancel a job previously submitted by the BATCH command, he may do so by using the CANCEL command.

```
CANCEL jid
```

where jid is the job identification that printed just after the job was submitted.

## JOB COMMAND

The JOB command is used to ask for the status of a batch job. The system responds that the job is either completed, running, or still waiting to be run. The format of the command is

```
JOB jid
```

where jid is the job identification that printed just after the job was submitted.

### Example 52. Using the JOB Command

```

:
:
!JOB 28 (RET)

The user requests the status of the job submitted in the previous example. The job identification 0028
is the same as the one reported when the job was submitted using the BATCH command.

WAITING: 1 TO RUN

The system answers that there is one batch still to be run before this job is run.

:
:
!JOB 28 (RET)

Later the user asks again.

COMPLETED

Now the job is complete.

!COPY ERRORS ON ME (RET)

The user displays the diagnostics from the job at the terminal. Note that M:DO was assigned to file
ERRORS in the job-deck JOBA.

_____ 6 _____ ERROR THIS LINE CONTAINS AN ERROR
                6.000

**** UNDEF SYM
**** ILLEGAL AF
****
* UNDEFINED SYMBOLS
  THIS
* ERROR SEVERITY LEVEL: 3
* ERROR LINES
                6
!
:
:
:
```

## 14. COMMUNICATION WITH THE OPERATOR

### MESSAGE COMMAND

The MESSAGE command causes a message to be sent to the central-site computer operator. The message may be from 1 to 44 characters in length.

The format of the command is

```
!M[MESSAGE] message-text
```

If the message-text exceeds 44 characters, the first 44 characters are transmitted rather than reinsertion of the message being required.

In the next example, the user informs the operator that he needs a scratch tape.

Example 53. Sending a Message to the Operator

```

:
!MESSAGE READY SCRATCH TAPE TO BECOME #9055.Ⓜ

The user sends a message to the computer operator requesting that he be ready to mount a scratch tape.

!BUILD DATAPOINTS Ⓜ

He builds file DATAPOINTS.

:
!COPY DATAPOINTS TO FT#9055 Ⓜ

He requests that the file to be copied to a free-form tape with the serial number 9055. The system informs the operator where to mount the requested scratch tape.

:
```

### MESSAGES FROM THE OPERATOR

The computer operator can send a message to an individual terminal or broadcast a message to all users. When he broadcasts a message, the message is placed into the right-hand part of the page title for the terminals and it will be seen by a user when he receives a new page heading. A message sent to an individual terminal may appear anywhere in the user's output.

Note: If the PLATEN command was used to turn page headings off, the broadcast message will not appear.

In the next example, the user receives a message informing him that the system will soon go off. He issues a BACKUP command before logging off to insure that his latest files will be saved. This action may not really be necessary, depending on installation practice; the system normally will save all files automatically before going off.

Example 54. Receiving a Message from the Operator

```

:
!BUILD XYZ Ⓜ

The user builds a source file.
```

<u>1.000</u>	SYSTEM	BPM (REF)
<u>2.000</u>	SYSTEM	SIG7 (REF)
<u>3.000</u>	REF	M:UC,M:LO (REF)

⋮

!L<sup>c</sup>

He wants to continue file building (or processing) on a new page, so he simultaneously depresses CONTROL and L to cause a page eject.

(page eject)

23:45 05/26/71 JONES ABC 1BB-F[17] CP-V WILL GO OFF AT 2400

Included as part of the page heading is the message from the operator CP-V WILL GO OFF AT 2400. This message has been sent to all users.

!BACKUP XYZ (REF)

The user decides to terminate his processing at this time, and he uses a BACKUP command to save his last file.

!OFF (REF)

-accounting summary-

## APPENDIX A. TEL COMMAND SUMMARY

Table A-1 is a summary of TEL commands. The first column gives the command format, the second column gives the command's function and option codes. For the structure of file names (fid, rom, lmn) see Table B-1.

Table A-1. TEL Command Summary

Command	Description
BACKUP fid	Saves the specified file on a system tape. In case of a crash in which files are lost, files on the tape will be restored.
BATCH fid [,fid]. . .	Enters the specified file(s) in the batch job stream.
B[UTILD] fid	Accepts a new file from the terminal.
BYE	Disconnects the terminal from the system and provides an accounting summary. This command is equivalent to the OFF command.
CANCEL jid	Cancels a previously submitted batch job.
COMMENT $\left[ \begin{array}{l} \text{ON} \\ \text{OVER} \end{array} \right]$ list	Directs error commentary to the specified device, or counteracts the preceding DONT COMMENT command. Options: list may be fid, LP, or ME.
CONTINUE	Continues processing from the point of interruption. This command is equivalent to the GO and PROCEED commands.
C[OPY] d[(s)][/fid[(s)],[fid[(s)]]...][;d[(s)] $\left[ \begin{array}{l} \text{TO} \\ \text{OVER} \end{array} \right]$ d[(s)][/fid[(s)]]	<p>Copies file between devices or between RAD storage and devices:</p> <p>Options:</p> <p>d may be CP, DC, DP, FT, LP, LT, or ME.</p> <p>s may be a data code (E, H); a data format (X, C); a mode (BCD, BIN, 7T, 9T, PK, UPK, SSP, DSP, VFC, NC, FA, NFA, TX, DEOD, K); a sequence (CS, NCS, LN, NLN); an account (RD, WR); or selection (x-y).</p>
D[ELETE] $\left\{ \begin{array}{l} \text{[DC/]} \\ \text{DP [#serial no.]} \end{array} \right\}$ /fid[,fid]. . .	Deletes the specified files.
DELTA	Calls the DELTA processor.
DI[SPLAY]	Lists the current values of various system parameters.
DONT COMMENT	Stops error commentary output.
DONT LIST	Stops listing output.
DONT OUTPUT	Stops object output.
E[DIT] fid	Calls Edit to modify a file.

Table A-1. TEL Command Summary (cont.)

Command	Description
END	Terminates the current job step. This command is equivalent to the STOP and QUIT commands.
FORT4 [sp] $\left[ \begin{array}{l} \text{ON} \\ \text{OVER} \end{array} \right. \left[ \text{rom} \right] \left[ \text{list} \right]$	Compiles a Xerox Extended FORTRAN IV source program. Options: sp may be fid or ME. rom may be fid only. list may be fid, LP, or ME.  Output may be interrupted and continued by the following commands:  LIST           DONT LIST OUTPUT        DONT OUTPUT COMMENT       DONT COMMENT CONTINUE      GO
GET fid	Restores the previously saved core image. This command is equivalent to the RESTORE command.
GO	Continues processing from point of interruption. This command is equivalent to the CONTINUE and PROCEED commands.
JOB jid	Requests the status of remotely entered jobs.
$L \left[ \begin{array}{l} \text{LT}[\# \text{reel-id}] [(s)] \\ \text{DC} [\text{acct}] [(s)] \\ \text{LT}[\# \text{serial no.}] [(s)] / \text{fid}[(s)] [, \text{fid}[(s)] \dots] \\ \text{fid}[(s)] [, \text{fid}[(s)] \dots] \\ \text{DP}[\# \text{reel-id}] [(s)] \\ \text{DP}[\# \text{serial no.}] / \text{fid}[(s)] [, \text{fid}[(s)] \dots] \\ \text{FT}[\# \text{serial no.}] [(s)] \end{array} \right]$	Lists file names and, optionally, attributes from the account directory, tape, or disk pack.  Option: s may be A, EA, 7T, or 9T.
$\text{LINK}[\text{codes}] \text{rom} [, \text{rom}] \dots [, \text{rom}] \left[ \begin{array}{l} \text{ON} \\ \text{OVER} \end{array} \right. \text{lmn} \left. \right] \left[ \begin{array}{l} \text{;} \text{lid} [, \text{lid}] \dots [, \text{lid}] \end{array} \right] [\text{UNDER FDP}]$	Forms the load module as specified. Options: library search: (L), (NL), (Pi), (FDP), (NP) default: (L), (PI)  display: (D), (ND), (C), (NC), (M), (NM) default: (D), (C), (NM)  symbol tables: (I), (NI) default: (I)  rom may be fid or \$; parentheses enclosing roms cause merge of symbol tables.  lid must be a library fid.
LIST $\left[ \begin{array}{l} \text{ON} \\ \text{OVER} \end{array} \right. \text{list} \right]$	Directs the listing output to the specified device or counteracts the preceding DONT LIST command. Options: list may be fid, LP, or ME.



Table A-1. TEL Command Summary (cont.)

Command	Description								
l <sub>mn</sub> [sp] $\left[ \begin{array}{l} \text{ON} \\ \text{OVER} \end{array} \right. \left. \left[ \text{rom} \right] \left[ , \text{list} \right] \right]$	<p>Initiates execution of a load module.</p> <p>Options:</p> <p>l<sub>mn</sub> has the form:</p> <p style="padding-left: 40px;">name [.[account][.password]]</p> <p>absence of period and account specifies system account.</p> <p>presence of period and absence of account specifies log-on account.</p> <p>M:SI DCB is assigned to sp.</p> <p>M:GO DCB is assigned to rom.</p> <p>M:LO DCB is assigned to list.</p>								
M[ESSAGE] text	Sends the specified message to the operator.								
META [sp] $\left[ \begin{array}{l} \text{ON} \\ \text{OVER} \end{array} \right. \left. \left[ \text{rom} \right] \left[ , \text{list} \right] \right]$	<p>Assembles the specified source program.</p> <p>Options:</p> <p>sp may be fid or ME.</p> <p>rom may be fid only.</p> <p>list may be fid, LP or ME.</p> <p>Output may be interrupted and continued by the following commands:</p> <table style="margin-left: 40px; border: none;"> <tr> <td>LIST</td> <td>DONT LIST</td> </tr> <tr> <td>OUTPUT</td> <td>DONT OUTPUT</td> </tr> <tr> <td>COMMENT</td> <td>DONT COMMENT</td> </tr> <tr> <td>CONTINUE</td> <td></td> </tr> </table>	LIST	DONT LIST	OUTPUT	DONT OUTPUT	COMMENT	DONT COMMENT	CONTINUE	
LIST	DONT LIST								
OUTPUT	DONT OUTPUT								
COMMENT	DONT COMMENT								
CONTINUE									
OFF	Disconnects the terminal from the system and provides an accounting summary. This command is equivalent to the BYE command.								
OUTPUT $\left[ \begin{array}{l} \text{ON} \\ \text{OVER} \end{array} \right. \left. \text{rom} \right]$	<p>Directs object output to the specified device, or counteracts the previous DONT OUTPUT command.</p> <p>Option: rom may be fid only.</p>								
PASSWORD xxxx	Assigns a new log-on password for the user. xxxx is 1-8 characters. Any of the following characters may be used: A-Z a-z 0-9 ← \$ * % : # @ - backspace								
PLATEN [w][l]	Sets the value of the terminal platen width and page length or displays the terminal platen width and length page values.								
PRINT	Sends print output to the line printer and punch output to the punch.								
PROCEED	Continues processing from the point of interruption. This command is equivalent to the GO and CONTINUE commands.								

Table A-1. TEL Command Summary (cont.)

Command	Description										
<p>Processor calls</p> <table style="margin-left: 20px;"> <tr> <td>APL</td> <td>FLAG</td> </tr> <tr> <td>BASIC</td> <td>FORT4</td> </tr> <tr> <td>COBOL</td> <td>META</td> </tr> <tr> <td>DELTA</td> <td>PCL</td> </tr> <tr> <td>EDIT</td> <td></td> </tr> </table>	APL	FLAG	BASIC	FORT4	COBOL	META	DELTA	PCL	EDIT		<p>These calls are entered while TEL is in control of the terminal. They turn over control of the terminal to the processor specified.</p>
APL	FLAG										
BASIC	FORT4										
COBOL	META										
DELTA	PCL										
EDIT											
Q[UIT]	<p>Terminates the current job step. This command is equivalent to the STOP and END commands.</p>										
R[ESET]	<p>Resets all DCBs back to their system default values.</p>										
RESTORE fid	<p>Restores the previously saved core image. This command is equivalent to the GET command.</p>										
<p>RUN [codes] [rom [rom] . . . [rom]] [ON OVER lmn] [;lid]</p> <p>[;lid] . . . [;lid] [UNDER DELTA FDP]</p>	<p>Loads the specified load module and starts execution.</p> <p>Options:</p> <p>library search: (L), (NL), (Pi), (FDP), (NP)                      default: (L), (P1)</p> <p>display: (D), (ND), (C), (NC), (M), (NM)                      default: (D), (C), (NM)</p> <p>symbol table: (I), (NI)                      default: (I)</p> <p>rom may be fid or \$; parentheses enclosing roms cause merge of symbol tables.</p> <p>lid must be a library fid.</p>										
SAVE {ON OVER} fid	<p>Saves the current core image on the designated file.</p>										
<p>SET dcb [0]</p> <p>SET dcb [oplabel device tapecode[tapeid]] [;dopt[;dopt] . . . [;dopt]</p> <p>SET dcb [tapecode [tapeid]/fid] [filecode [packid]/fid] [;fopt[;fopt] . . . [fopt]]</p>	<p>Resets the current assignment of the specified dcb back to the system default.</p> <p>Options: see Tables C-1, C-2, and C-3.</p>										
S[TART] [lmn \$] [U[NDER DELTA]]	<p>Loads a load module into core and starts execution of the program, either with or without an associated debugger.</p>										
ST[ATUS]	<p>Displays the current accounting values.</p>										

Table A-1. TEL Command Summary (cont.)

Command	Description
STOP	Terminates the current job step. This command is equivalent to the END and QUIT commands.
TABS	Displays the simulated tab stop settings.
TABS s [,s] . . . [,s]	Sets the simulated tab stops at the terminal.
TERMINAL type	Sets the terminal type for proper I/O translations. Type may be 33, 35, 37, 7015, EAPL, ESTD, SAPL, or SSTD.
TERMINAL STATUS	Lists the terminal type and the current values of parameters associated with its operation.
U	Causes the words UNDER DELTA to be inferred in the next command.

## APPENDIX B. FILE IDENTIFIERS AND THEIR PARTS

A file identification (fid) consists of a file name and optionally an account and/or a password. Special types of files are an lmn (load module) which is produced as a result of a LINK or RUN command, and a rom (relocatable object module) which is produced by an assembler or compiler. Table B-1 illustrates the structure of a fid.

Table B-1. File Identifiers and Their Parts

Symbol	Structure
lmn	a file identifier (fid) that names a load module.
rom	a file identifier (fid) that names a relocatable object module.
fid	name [.[account] [.password]] <sup>†</sup>
name	1 to 12 characters of the X character set.
account	1 to 8 characters of the X character set.
password	1 to 8 characters of the X character set.
X character set	A-Z a-z 0-9 _ \$ * % : @ -
<sup>†</sup> The usage "name." is valid only when the fid is an lmn used as a command verb (see Chapter 8).	

## APPENDIX C. SET COMMAND CODES

Tables C-1 through C-3 define the codes which may be used as options in the SET command.

Table C-1. DCB Assignment Codes - SET Command

Type	Codes	Description
Operational Label	BI, BO, C, CI, CO, DO, EI, EO, GO, LL, LO, OC, PO, SI, SL, SO, UC	When the DCB is assigned to one of the system operational labels, the actual device connected to the DCB is that implied by the operational label, if any, for on-line mode.
	NO	No assignment, i.e., no default is to be applied.
Device	CP LP PL	Card punch. Line printer. Plotter.
Magnetic Tape (tapecode)	9T 7T MT	9-track tape. 7-track tape. Any magnetic tape.
Secondary Storage (filecode)	DC	Any data file. (This is the default code if no other code is given.)
	DP	Disk pack storage.

Table C-2. Device Options - SET Command

Format	Description
TAB = tab[, tab] . . . [, tab]	Specifies simulated tab stops and is followed by a list of up to 16 decimal numbers, separated by commas, giving the column position of the stops. If all 16 stops are not specified, the stops given are assigned to the first stops and the remainder are reset.
LINES = value	Gives the number of printable lines per page and is a single decimal value. The maximum value is 255.
SPACE = value	Gives the number of lines of space after printing and is a single decimal value. Values of 0 or 1 result in single spacing. The maximum value is 255.
DRC, NODRC	Turns the special formatting of records on and off. DRC specifies that the Monitor is not to do special formatting of records on read or write operations. NODRC specifies the Monitor is to do special formatting. If neither DRC nor NODRC is specified, NODRC is assumed by default. DRC used in conjunction with BIN will invoke the transparent mode. (See Transparent Mode Section of Chapter 10 in CP-V/TS Reference Manual, 90 09 07.)
VFC, NOVFC	Controls the formatting of printing by using the first character of each record. VFC specifies that the first character of each record is a format-control character. NOVFC specifies that records do not contain a format-control character. NOVFC is assumed by default.
COUNT = value	Turns on page counting and specifies the column number at which the page number is to be printed.

Table C-2. Device Options - SET Command (cont.)

Format	Description
BCD, BIN	Controls the binary-EBCDIC mode for device read and write operations. BIN used in conjunction with DRC will invoke the transparent mode. (See Transparent Mode Section of Chapter 10 in CP-V/TS Reference Manual, 90 09 07.)
FBCD, NOFBCD	Controls the automatic conversion between external Hollerith code and internal EBCDIC code (FORTRAN BCD conversion). NOFBCD is assumed by default.
PACK, UNPACK	Controls the packed or unpacked mode of writing 7-track tape. PACK is assumed by default.
DATA = value	Controls the beginning column for printing or punching and is a decimal value. The maximum value is 144.
SEQ = value	Specifies that sequence numbers are to be punched in columns 77-80 of punched output. Four characters of nonblank sequence identification may be given for columns 73-76. Fewer than four characters are left-justified and filled with blanks.
L, NOL	Identifies the device type. L specifies that the device must be listing type. NOL specifies that it need not be listing type. NOL is assumed by default.

Table C-3. File Options - SET Command

Type	Format	Description
Organization	CONSEC	Consecutive record organization.
	KEYED	Keyed record organization.
	RANDOM	Contiguous granule allocation, addressed by relative block.
Access	SEQUEN	Records will be accessed sequentially.
	DIRECT	Records will be accessed by key.
Function	IN	File is read only.
	OUT	File is write only.
	INOUT	File is to be updated.
	OUTIN	File is scratch.
Disposition	REL	OUT or OUTIN file is to be released on closing.
	SAVE	OUT or OUTIN file is prepared to be saved on closing.
Size	RSTORE = value	Specifies the number of granules allocated to the RANDOM file.
Storage Control	CYLINDER	Specifies that the data blocks of a public file are to be allocated from public disk packs having cylinder allocation.

Table C-3. File Options - SET Command (cont.)

Type	Format	Description
Key Storage	NOSEP	Specifies that index blocks of a public file are to be allocated in the same manner as data blocks. (Disk pack if possible; otherwise RAD).
Expiration	EXPIRE = $\left. \begin{array}{l} \text{mm,dd,yy} \\ \text{ddd} \\ \text{NEVER} \end{array} \right\}$	Specifies either an explicit expiration date, the number of days to retain the file, or that the file is never to expire.

## APPENDIX D. LINK AND RUN COMMAND CODES

Tables D-1 and D-2 define the codes that may be used in the LINK and RUN commands.

Table D-1. Library Search Codes

Code	Meaning
(L)	Specifies that the system library is to be searched to satisfy external references that have not been satisfied by the program. (This is the default option.)
(NL)	Specifies that a system library search is not required.
(Pi)	Specifies that the ith public core library is to be searched for unsatisfied external references. Default is to P1 if no other public core library is specified. Only one public library may be associated with a program.
(FDP) or (P0)	Specifies that the FORTRAN Subprogram library P0, that includes the Debug routines, is required.
(NP)	Specifies that a public core library is not required.
<u>Note:</u> The sequence of the library search is as follows: User libraries are searched first, the public library is associated, then the system library is searched.	

Table D-2. Error Displays

Code	Meaning
(D)	Specifies that all unsatisfied internal and external symbols are to be displayed at the completion of the linking process (including library searches, if specified). The unsatisfied symbols are identified as to whether they are internal or external and to which module they belong.
(ND)	Specifies that the unsatisfied internal and external symbols are not to be displayed.
(C)	Specifies that all conflicting internal and external symbols are to be displayed. The symbols are displayed with their source (module name) and type (internal or external).
(NC)	Specifies that the conflicting symbols are not to be displayed.
(M)	Specifies that the load map is to be displayed upon completion of the linking process. The symbols are displayed by source with type resolution and value.
(NM)	Specifies that the load map is not to be displayed.
<u>Note:</u> The normal default options are D, C, and NM.	



## APPENDIX E. SPECIAL TERMINAL KEYS

Certain terminal keys, key sequences, and key combinations cause action to be taken other than simple transmission of the character. Table E-1 illustrates these key sequences and the action produced.

Table E-1. Special Terminal Keys

Key Sequence	Action Produced
ESC E	Sets or resets the flag that controls echoplex output.
ESC F	Causes end-of-file action on input.
ESC I or I <sup>C</sup>	Functions as a tab key.
ESC L or L <sup>C</sup>	Causes spacing to a new page and printing of new page heading.
ESC LF or ESC RET	Simulates a local line feed. No activation occurs.
ESC S	Sets or resets the flag that controls space-insertion mode.
ESC T	Sets or resets the flag that controls tab simulation.
ESC U	Sets or resets the flag that controls translation of lower case characters.
ESC X	Erases current partial input line.
X <sup>C</sup>	Erases all pending input and output including messages typed ahead.
BREAK	Causes an interrupt and return of control to processor, if processor has break control; otherwise control goes to TEL. More than three BREAKs cause return of control to TEL.
LF or RET	Causes a carriage return.
INUA	Deletes the last character received.
Y <sup>C</sup>	Causes an interrupt and return of control to TEL.
ESC C	Sets or resets a flag that controls tab relative mode. Input messages are adjusted to compensate for carriage offset at beginning of input.
ESC )	Shifts to lower case. All subsequent input is translated as lower case until instructed to shift to upper case.
ESC (	Shifts to upper case. All subsequent input is translated as upper case until instructed to shift to lower case.
ESC Q	Requests system acknowledgement. The system will respond immediately with two exclamation points (!!).

## APPENDIX F. USE OF THE 2741 TERMINAL

This appendix is intended for the person who would like to use the CP-V Time-Sharing Users Guide, but can not because his terminal is a 2741 terminal or a terminal that is designed to operate like a 2741. Not all features of the 2741 are discussed — only those that are needed to do the examples in the User's Guide. For a more detailed discussion of the differences between the 2741 and Teletype terminals, see the CP-V/TS Reference Manual, 90 09 07.

It is recommended that you do each of the examples in this appendix at your terminal to be sure that you understand them. Then turn back to the front of this User's Guide. When doing the examples, use the 2741 equivalent where needed instead of the Teletype entry. Differences between Teletype and 2741 control characters are summarized in the CP-V/TS Reference Manual, 90 09 07.

### CONTROL CHARACTERS

All time-sharing terminal devices have at least one key on their keyboard that allows them to send special control messages to the Monitor. These messages are called control characters. On the 2741 terminal, most control characters are sent by first pressing an alphabetic key and then pressing the ATTN key. The Monitor signals the user that it has received the control character by backspacing and underscoring the letter he typed. It then performs whatever function the user has asked for.

For the remainder of this appendix, the sending of a control character will be described by specifying the letter, followed by the symbol that represents the ATTN key (ATTN). For example, the user may request that his current line of input be retyped by entering the letter r, followed by ATTN. This is presented here as the r ATTN sequence.

Table F-1 summarizes the differences between 2741 terminals and Teletype terminals. You will find this table helpful throughout the manual. As you encounter each Teletype control character in the text, you will be able to choose the appropriate 2741 equivalent.

Table F-1. Summary of Differences Between 2741 and Teletype Services

Function	Teletype	2741
Get log-on message	BREAK	* and CRLF if dialing up. ATTN if line is already connected.
Erase line	ESC X	None
Tab relative	ESC C	C ATTN
Suppress lowercase	ESC U	U ATTN
Uppercase shift	ESC (	( ATTN
Lowercase shift	ESC )	) ATTN
Erase last character	RUBOUT	BACKSPACE ATTN
Tab	ESC I, CONTROL I	TAB
End of input	FS, RS, US, GS (L <sup>CS</sup> , N <sup>CS</sup> , O <sup>CS</sup> , M <sup>CS</sup> )	SPACE ATTN
Line continuation	ESC CR, ESC LF, LOC CR	N ATTN
Retype	ESC R	R ATTN
Toggle tab simulation mode	ESC T	T ATTN
Toggle space insertion mode	ESC S	S ATTN

Table F-1. Summary of Differences between 2741 and Teletype Services (cont.)

Function	Teletype	2741
End of file	ESC F	F ATTN
Monitor escape (to TEL)	ESC ESC, CONTROL Y, ESC Y, or 4 BREAKs	Four ATTNs. Also, Y ATTN if input.
Break	BREAK	B ATTN on input or ATTN on output.
Toggle backspace edit mode	None	O ATTN
Form feed	ESC L	L ATTN
Half duplex paper tape	ESC P	None
Toggle ECHO mode	ESC E	None
Acknowledge	ESC Q	None
Erase all input and output	CONTROL X	X ATTN

## LOGGING ON

To log on to CP-V on a 2741 terminal, you must first dial the phone and place the handset in the audio-coupling device. When you have established contact with the computer (in most cases, this is signaled by the unlocking of the keyboard) you must identify your terminal's specific character set by typing an asterisk, followed by a carriage return. CP-V will then be able to communicate meaningfully with your terminal. CP-V responds to your terminal identification with a request for you to log on.

```
* Ⓢ
XEROX CP-V AT YOUR SERVICE
ON AT 22:29 SEP 26, '72
LOGON PLEASE: 1234, JONES Ⓢ
!
```

Note that Jones was typed with all uppercase letters. This is required unless you inform the system that you wish all alphabetic characters to be treated as uppercase. The exclamation point indicates that your log-on has been accepted and the system is now ready to accept TEL commands.

## SUPPRESSING LOWERCASE LETTERS

There are many cases where lowercase letters will not be accepted in lieu of uppercase letters. The log-on sequence described above is one example. If lowercase letters are used when logging on, an error message is output. To avoid this problem the user must either remember to use uppercase letters when required or enter the u Ⓢ sequence, which suppresses the lowercase letter capability and causes the system to treat all letters as if they were uppercase.

```
* Ⓢ
XEROX CP-V AT YOUR SERVICE
ON AT 22:57 SEP 26, '72
LOGON PLEASE: 1234, jones Ⓢ
ACCOUNT/ID 1234/jones?
LOGON PLEASE: u1234, jones Ⓢ
!
```

In this example, the user forgot to use uppercase letters when he logged on. The system responded with an error message and asked the user once again to log on. This time the user entered the u <sup>(ATTN)</sup> sequence, requesting that all letters typed be accepted as uppercase letters. He then reentered his account and id, and it didn't matter whether he used uppercase or lowercase letters. If he wished to use lowercase letters later in the session, he could reset the lowercase suppression by entering another u <sup>(ATTN)</sup> sequence.

The u <sup>(ATTN)</sup> sequence was entered by typing the letter u, and then pressing the ATTN key. The system acknowledged receipt of the sequence by backspacing and underscoring the u.

## CORRECTING TYPING ERRORS

Each character that you type while logged on to CP-V is sent when you press the key. However, in most cases CP-V simply stores what you type until you press the carriage return. At that point, the entire line of information is processed. As a result, corrections can easily be made at any point in a line of input prior to pressing the carriage return.

The backspace <sup>(ATTN)</sup> sequence most often is used to make single corrections to typing errors. To correct the last character typed, press the backspace key, then the ATTN key. The letter you now type will replace the letter that you are typing over.

```
!build sample (RET)
  1.000 oooooo (RET)
  2.000 (RET)
!copy sample (RET)
00000I
!
```

In this example, a file name "sample" is created using the TEL BUILD command. The file contains one record, and was typed originally as six letter o's. A backspace <sup>(ATTN)</sup> sequence was entered, and the last o replaced with an i. When the TEL COPY command was used to copy the file to the terminal, the file was printed in all uppercase letters. This happened because we had used the u <sup>(ATTN)</sup> sequence earlier to cause all letters to be treated as uppercase. If you wish to delete more than one character, simply enter the backspace <sup>(ATTN)</sup> sequence once for each character to be deleted.

```
!build sample1 (RET)
  1.000 oooooo (RET)
  2.000 (RET)
!copy sample1 (RET)
000III
```

In this example, six letter o's were entered in the only record of a file named "sample1". Before entering a carriage return, however, three successive backspace <sup>(ATTN)</sup> sequences were entered. Three letter i's were then typed to replace the deleted characters. Again when the file was output at the terminal by the TEL COPY command, all uppercase letters were typed since the earlier u <sup>(ATTN)</sup> sequence was still in effect.

```
!uBUILD newfile (RET)
  1.000 oooooo (RET)
  2.000 (RET)
!COPY newfile (RET)
ooII i
!
```

At this point, a u <sup>(ATTN)</sup> sequence was entered so that typed lowercase letters would no longer be converted to uppercase. As a result, the TEL BUILD command had to be typed in uppercase. Also, it is important to note that the name of this file is "newfile" and that it can only be referred to in lowercase letters. In the only record in this file, six letter o's were typed, then four backspace <sup>(ATTN)</sup> sequences were entered. Two uppercase I's were typed, followed by a space, one lowercase i, and a carriage return. The result was a record containing ooII i.

## USING TABULATION

The TAB key on the 2741 terminal operates in the same way as the TAB key on a standard typewriter. Each time the TAB key is pressed, the carrier moves to the next tab stop. The place where the carrier stops is determined by the physical tab setting on the machine itself. In addition to this typical typewriter feature, the 2741 also sends a tab character to CP-V each time the TAB key is pressed. When information is being typed from a file, a tab character causes the carrier to move to the next tab stop on the machine just as pressing the TAB key would do.

```
!build sample3 (REF)  
  
  1.000 one (TAB)    two (TAB)    three (TAB)    four (TAB)  
  
  2.000 (REF)  
  
!copy sample3 (SET)  
  
ONE      TWO      THREE      FOUR
```

In this example, a file named "sample3" is created. The physical tabs on the terminal were set to every five positions (i.e., 5, 10, . . .). The file was then copied back to the terminal. If we change the physical tab stops on the terminal to every fifteen positions (i.e., 15, 30, . . .) and copied the file again, the following would result:

```
!copy sample3 (SET)  
  
ONE      TWO      THREE      FOUR
```

In this example, the file named "sample3" was copied to a 2741 terminal with physical tab settings at every fifteenth position.

The TEL TABS command is used to inform the system of the tab settings that the user has at his terminal. If you plan to use tab settings, you should inform CP-V of the settings you plan to use.

```
!TAB 5,10,45 (REF)
```

In this example, tab settings of 5, 10, and 45 were specified for this terminal. If you wish to specify or change tab settings, enter them any time that the system prints an exclamation point at your terminal.



# INDEX

Note: For each entry in this index, the number of the most significant page is listed first. Any pages thereafter are listed in numerical sequence.

2741 terminal, use of, 114

## A

APL, 53  
APL command, TEL, 53  
assign/merge table, 83

## B

BACKUP command, TEL, 95  
BASIC, 36  
BASIC,  
    abbreviations of command verbs, 44  
    DCB requirements, 88  
    desk-calculator mode, 42  
    direct statement execution, 42  
BASIC command, TEL, 36  
BASIC commands,  
    CLEAR, 38, 40  
    EXECUTE, 43  
    FILE, 40  
    LIST, 39  
    LOAD, 38, 40  
    NAME, 40  
    PRINT, 43  
    RENUMBER, 41  
    SAVE, 38  
    STATUS, 39  
BATCH command, TEL, 99  
batch jobs, 99  
BP command, Edit, 27  
BREAK, 76  
BUILD command,  
    Edit, 18, 29  
    TEL, 18, 29

## C

CANCEL command, TEL, 100  
character deletion, 9  
character echoing, 5  
CLEAR command, BASIC, 38, 40  
COBOL, 49  
COBOL command, TEL, 49  
command syntax notation, vii  
COMMENT command, TEL, 83, 89  
connection with the computer, 4  
CONTINUE command, TEL, 78, 92  
CONTROL I, 13  
Control Program-Five, 1  
CONTROL X, 9  
CONTROL Y, 76  
controlling output, 89

COPY command,  
    Edit, 18  
    PCL, 30, 96  
COPYALL command, PCL, 96  
correcting terminal input, 9  
CP-V, 1

## D

D command, Edit, 27  
Data Control Blocks, 82  
DCBs, 82  
DCBs, standard system, 82  
DE command, Edit, 20  
debugging user programs, 61  
DELETE command,  
    Edit, 18  
    PCL, 31  
DELETEALL command, PCL, 31  
deleting terminal input, 9  
Delta, 61  
    debug mode, 61  
    nondebug mode, 63  
    writing programs, 65  
dialing the computer, 4  
DONT COMMENT command, TEL, 89  
DONT LIST command, TEL, 89  
DONT OUTPUT command, TEL, 89

## E

Edit, 17, 15  
    file editing commands, 17  
    intrarecord editing commands, 26  
    record editing commands, 18  
EDIT command,  
    Edit, 17, 29  
    TEL, 17, 29  
Edit commands,  
    BP, 27  
    BUILD, 18, 29  
    COPY, 18  
    D, 27  
    DE, 20  
    DELETE, 18  
    EDIT, 17, 29  
    END, 18  
    FD, 24  
    FT, 24  
    IN, 20  
    MERGE, 18, 23  
    S, 26  
    SE, 26

Note: For each entry in this index, the number of the most significant page is listed first. Any pages thereafter are listed in numerical sequence.

TS, 27  
TY, 18,27  
END command, Edit, 18  
error displays, 112  
ESC E, 5  
ESC ESC, 76  
ESC I, 13  
ESC RET, 25  
ESC S, 13  
ESC T, 13  
ESC X, 9  
ESC Y, 76  
EXECUTE command, BASIC, 43  
executing object programs, 57  
executing user programs, 72

## F

FD command, Edit, 24  
FDP, 66  
fid, 15  
FILE command, BASIC, 40  
file extension, 16  
file identification, 15  
file identifiers, 108  
file organization, 16  
file storage, 15  
file/device assignment, 82  
files, 15  
FORT4 command, TEL, 45  
FORTRAN, 45  
FORTRAN Debug Package, 66  
FT command, Edit, 24

## G

GET command, TEL, 92  
GO command, TEL, 92

## I

IN command, Edit, 20  
input data, 15

## J

JOB command, TEL, 100

## L

language processors, using, 36  
library search codes, 112  
line deletion, 9  
LINK, 57

LINK command codes, 112  
LINK command, TEL, 57  
linking loader, 57  
LIST command,  
    BASIC, 39  
    PCL, 31  
    TEL, 83,16,89  
lrm command, TEL, 72  
LOAD command, BASIC, 38,40  
load module, 15  
loading object programs, 57  
LOC CR, 25  
logging on and off, 4

## M

MAILBOX file, 5,95  
MERGE command, Edit, 18,23  
MESSAGE command, TEL, 101  
messages from operator, 101  
META command, TEL, 51  
Meta-Symbol, 51  
modifying terminal input, 9  
multiline records, entering, 25

## N

NAME command, BASIC, 40

## O

object code, 15  
ON modifier, 16,18  
operator, communication with, 101  
OUTPUT command, TEL, 83,16,89  
output, controlling, 89  
OVER modifier, 16

## P

page width and length, changing, 10  
PASSWORD command, TEL, 6  
PCL, 29  
PCL commands,  
    COPY, 30,96  
    DELETE, 31  
    DELETEALL, 31  
    LIST, 31  
Peripheral Conversion Language (see PCL), 29  
PLATEN command, TEL, 10  
PRINT command,  
    BASIC, 43  
    TEL, 91  
printing, suppressing, 5



Note: For each entry in this index, the number of the most significant page is listed first. Any pages thereafter are listed in numerical sequence.

processors, getting in and out of, 76  
processors, on-line, 2  
program aborts, 80  
programs, executing, 72

## Q

QUIT command, TEL, 78

## R

RENUMBER command, BASIC, 41  
restoring files and core images, 92  
rubout character, 9  
RUN command codes, 112  
RUN command, TEL, 57

## S

S command, Edit, 26  
SAVE command, BASIC, 38  
SAVE command, TEL, 92  
saving files and core images, 92  
SE command, Edit, 26  
SET command codes, 109  
SET command,  
    DCB assignment codes, 109  
    device options, 109  
    file options, 110  
    TEL, 85  
source program, 15  
special terminal keys, 113  
standard system DCBs, 82  
START command, TEL, 59,72  
STATUS command, BASIC, 39  
syntax notation, vii

## T

tabbing, 13  
TABS command, TEL, 13  
TEL, 1  
TEL command summary, 103  
TEL commands,  
    APL, 53  
    BACKUP, 95  
    BASIC, 36  
    BATCH, 99  
    BUILD, 18,29  
    CANCEL, 100  
    COBOL, 49  
    COMMENT, 83,89  
    CONTINUE, 78,92  
    DONT COMMENT, 89  
    DONT LIST, 89  
    DONT OUTPUT, 89  
    EDIT, 17,29  
    FORT4, 45  
    GET, 92  
    GO, 92  
    JOB, 100  
    LINK, 57  
    LIST, 83,16,89  
    lmn, 72  
    MESSAGE, 101  
    META, 51  
    OUTPUT, 83,89  
    PASSWORD, 6  
    PLATEN, 10  
    PRINT, 91  
    QUIT, 78  
    RUN, 57  
    SAVE, 92  
    SET, 85  
    START, 59,72  
    TABS, 13  
    TERMINAL, 10  
Teletype keyboard, 3  
TERMINAL command, TEL, 10  
Terminal Executive Language, 1  
TO modifier, 18  
TS command, Edit, 27  
TY command, Edit, 18,27





Fold


First Class  
Permit No. 229  
El Segundo,  
California

**BUSINESS REPLY MAIL**

No postage stamp necessary if mailed in the United States

Postage will be paid by

Xerox Corporation  
701 South Aviation Boulevard  
El Segundo, California 90245

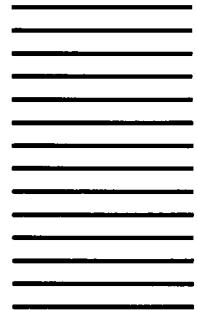

*Attn: Programming Publications*

Fold